

FIG. 1 (SHEET 1 OF 4): DBL SEAT, RH


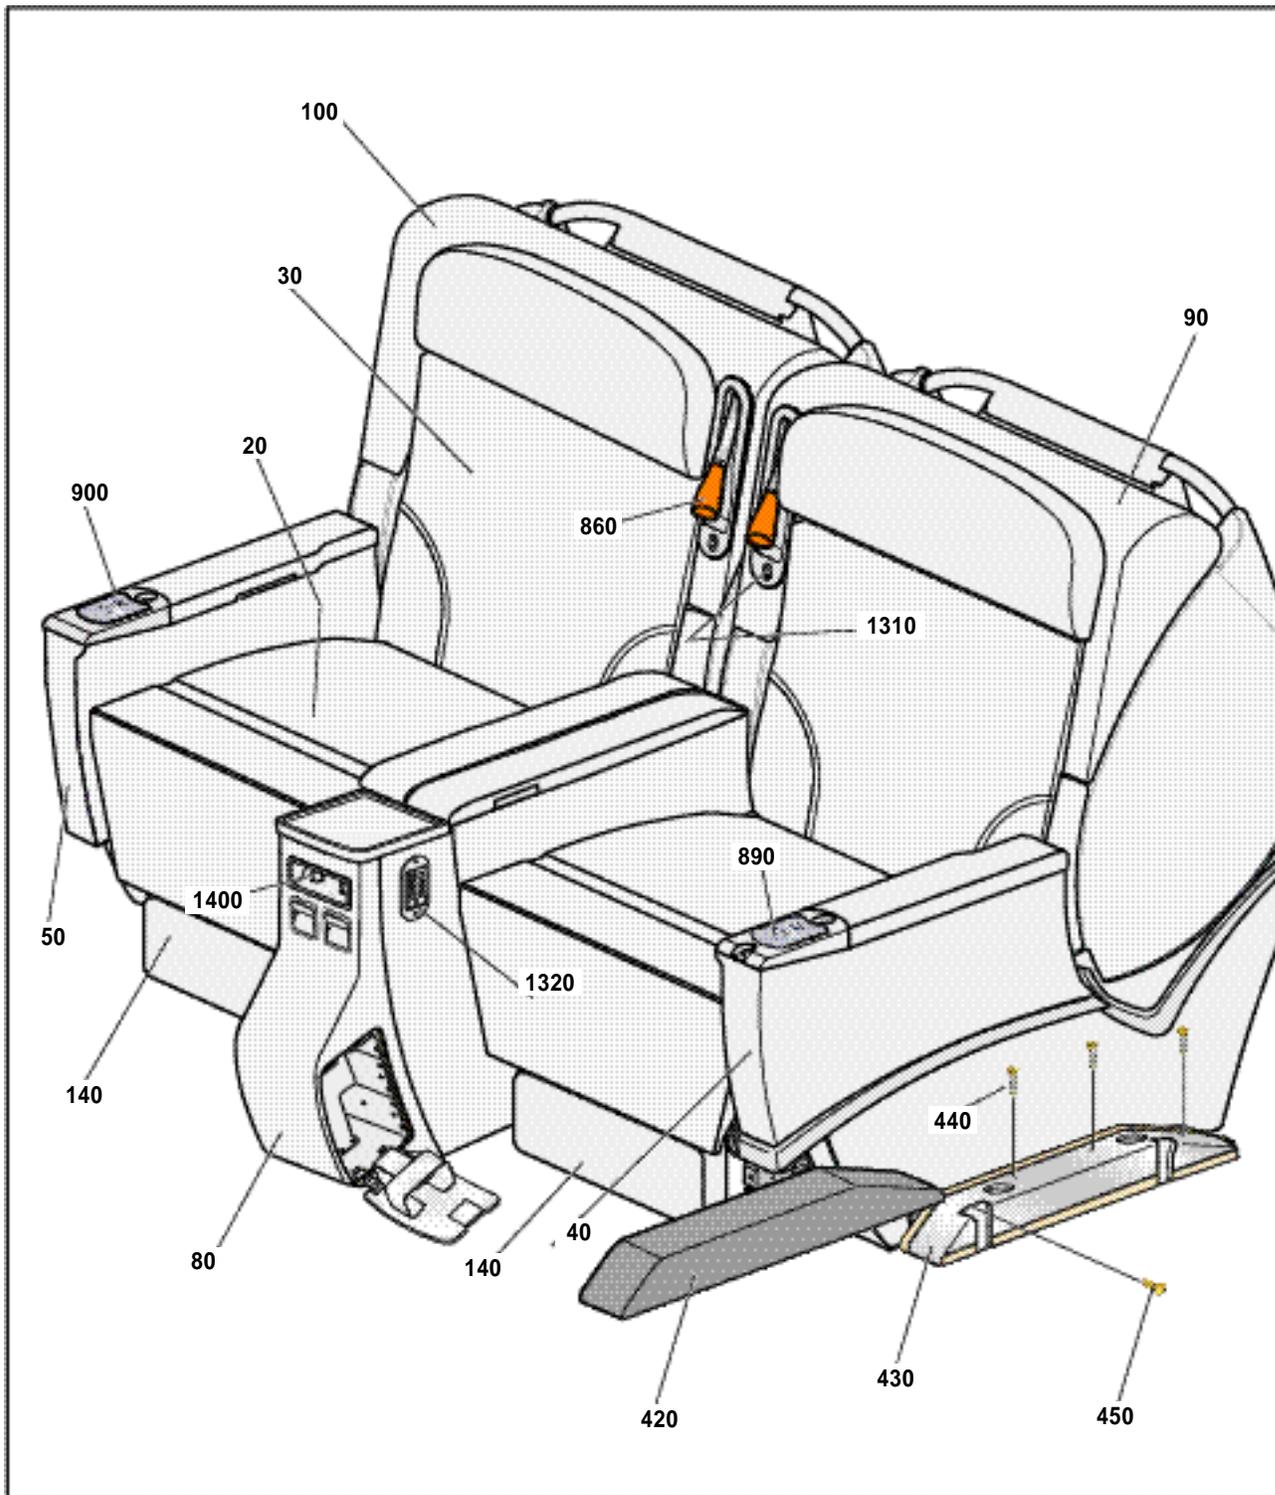


FIG. 1 (SHEET 2 OF 4) : DBL SEAT, RH

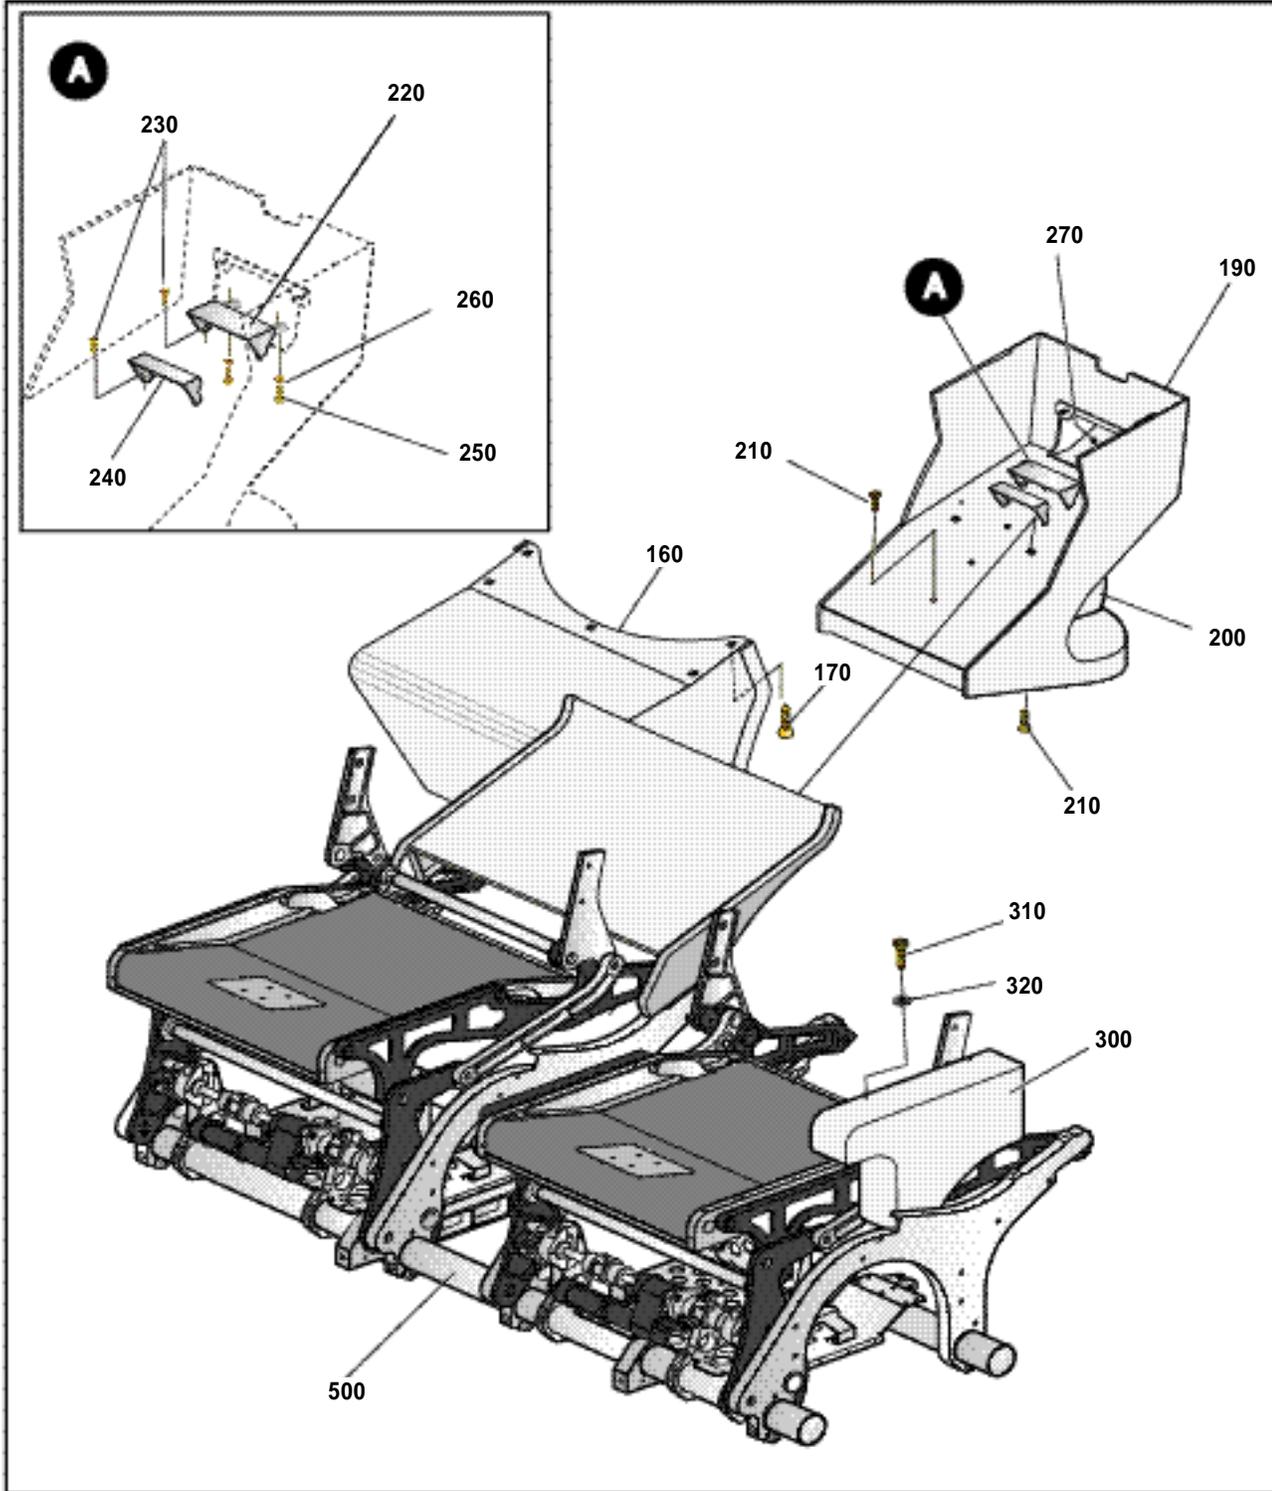

25-26-38

FIG. 1 (SHEET 3 OF 4): DBL SEAT, RH


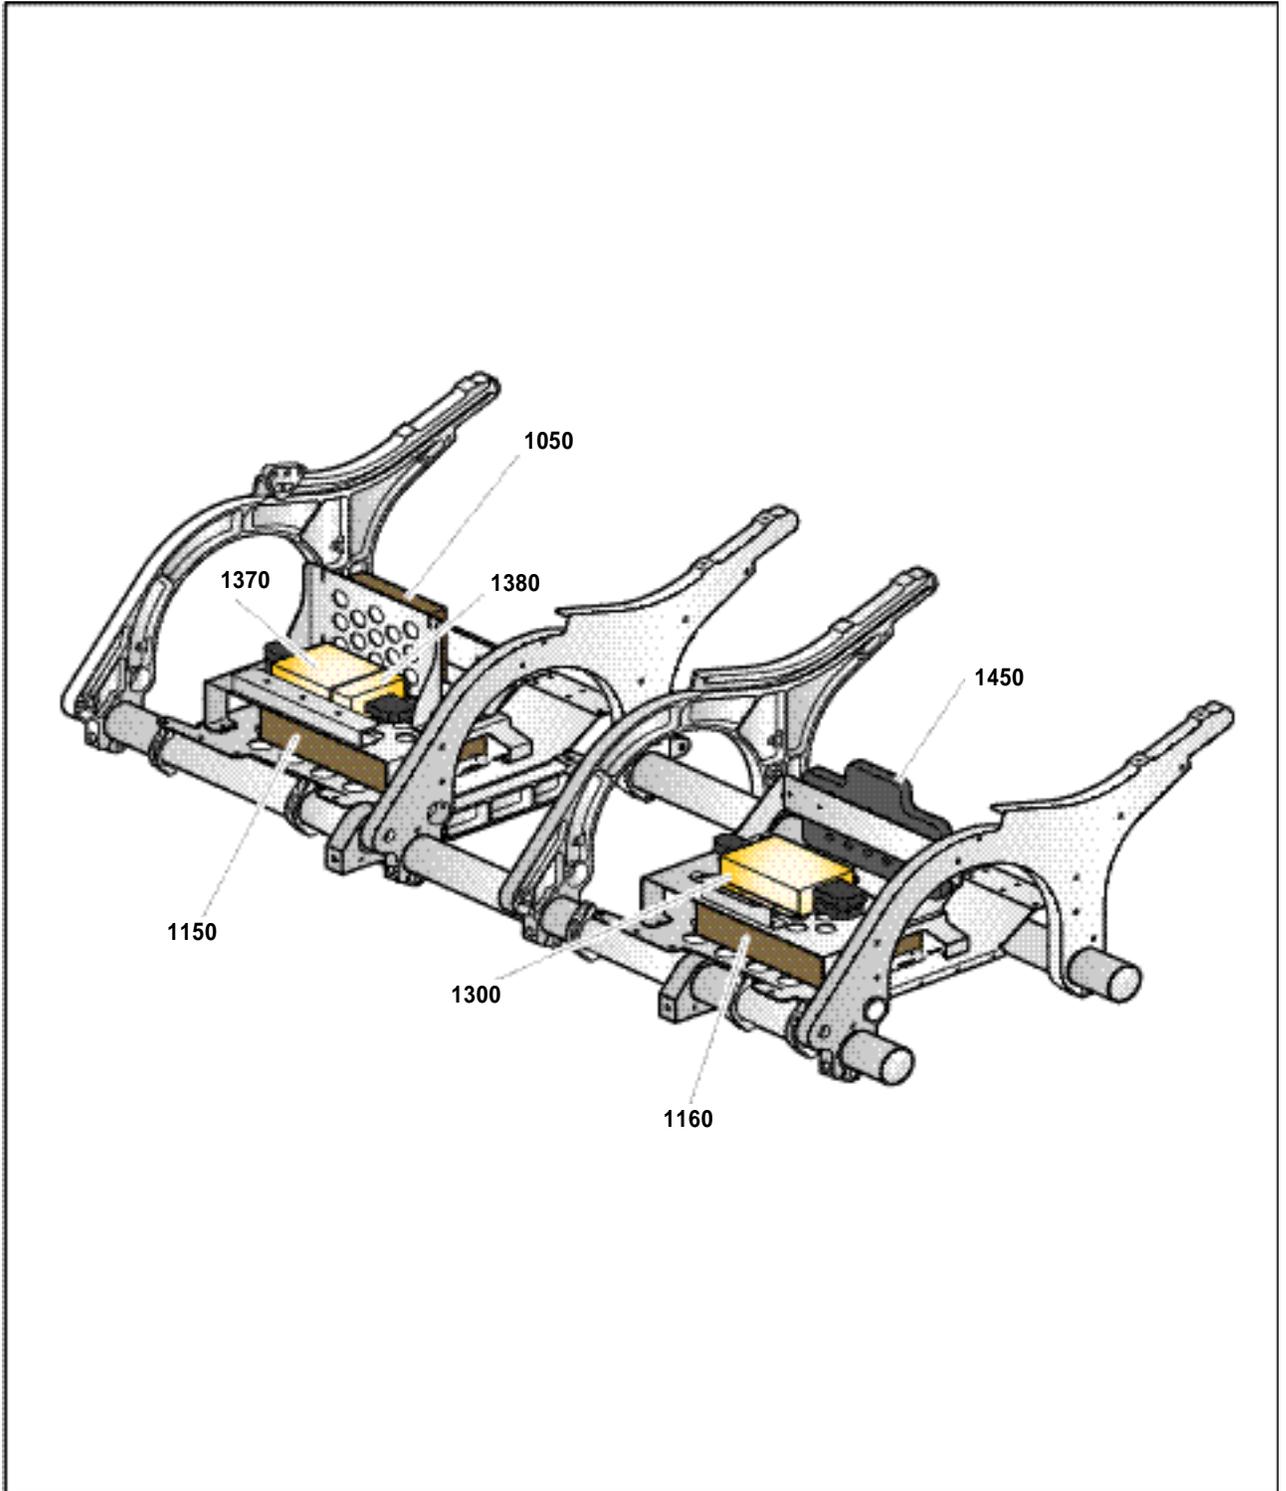


FIG. 1 (SHEET 4 OF 4) : DBL SEAT, RH



25-26-38

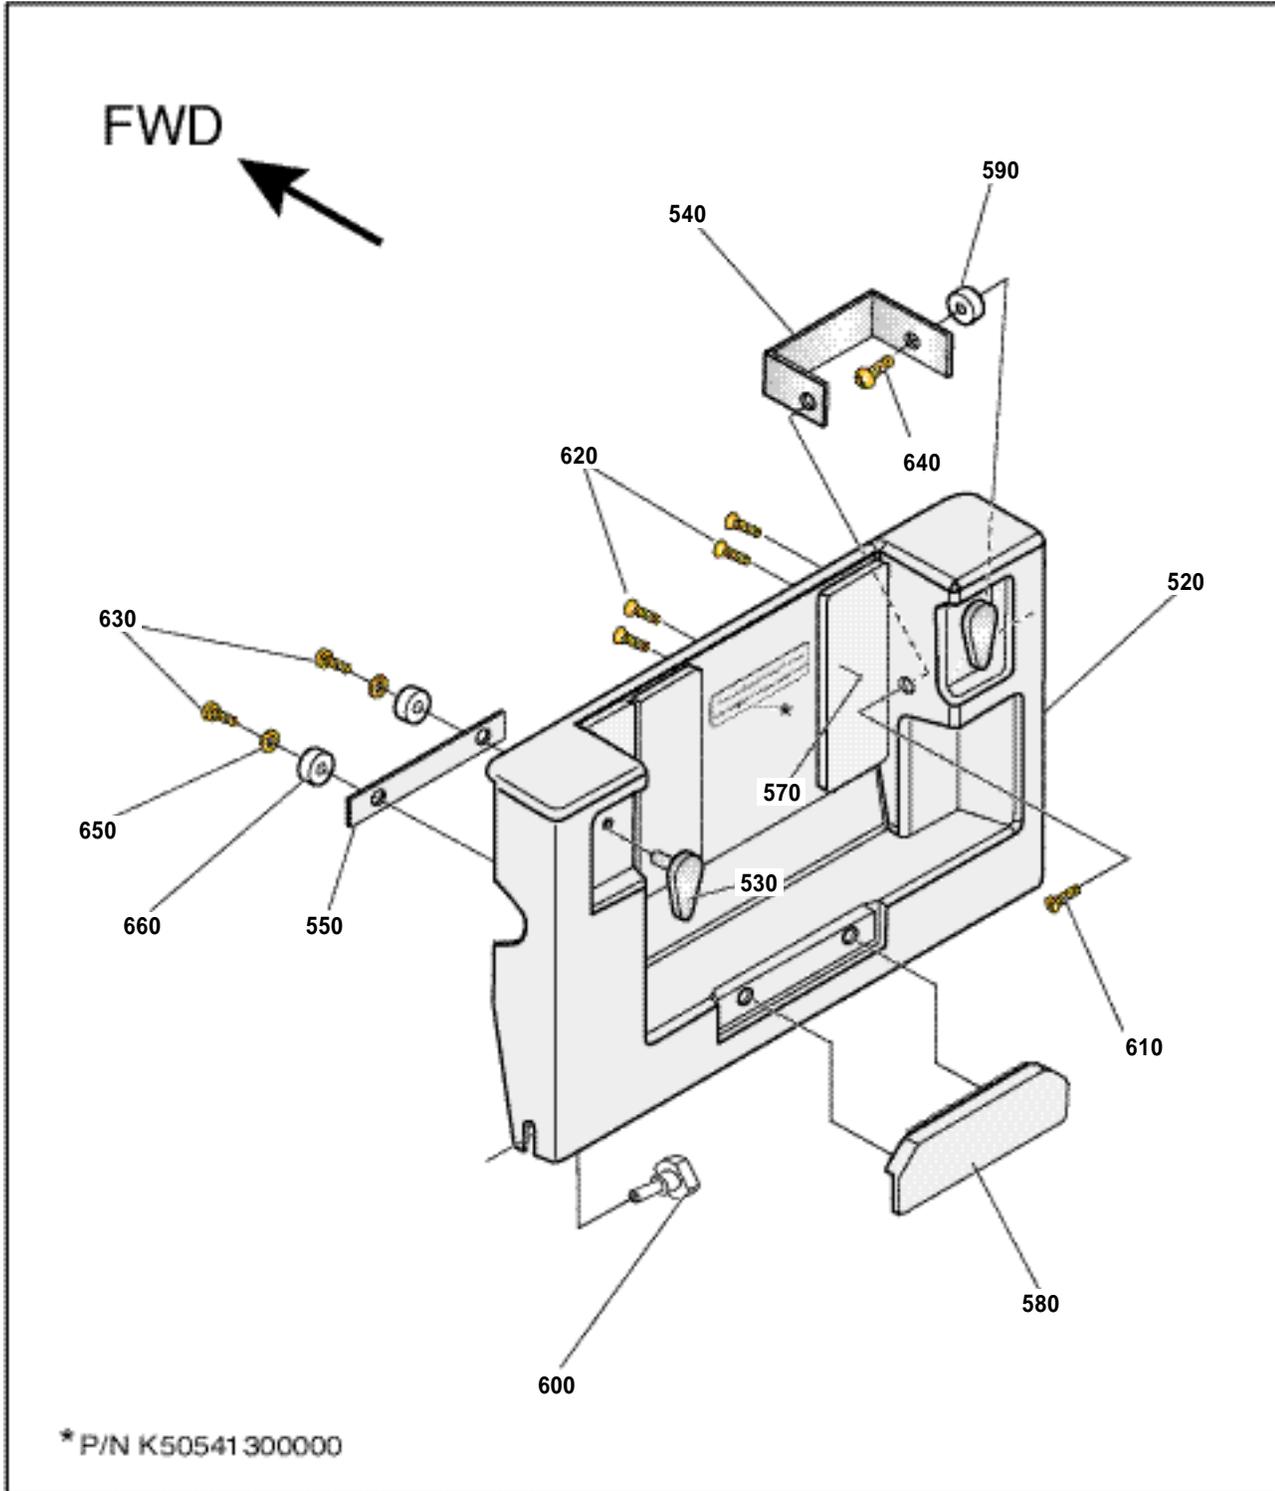

COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES"16NC(T)(0)(0)ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
1				
1	16NC1T1208ZA	DBL SEAT, RH	A	RF
- 1 A	16NC1T1209ZA	DBL SEAT, LH	B	RF
- 10	12523-0101ZA	.BOTTOM CUSHION ASSY		2
20	31324400002A	..CUSHION, BOTTOM		2
30	3197313C00ZA	.BACKREST ASSY (See fig. 2 for det BKDN)		2
40	3132473A00ZA	.ENDBAY ASSY, AISLE LH*	A	1
- 40 A	3132474A00ZA	.ENDBAY ASSY, AISLE RH* *(See fig. 3 for det BKDN)	B	1
50	3132430A00ZA	.ENDBAY ASSY, OUTBD RH*	A	1
- 50 A	3132429A00ZA	.ENDBAY ASSY, OUTBD LH*	B	1
- 55	3198229A0000	.KIT REINFORCEMENT, ENDBAY OUTBD* *(See fig. 3A for det BKDN)		1
- 60	3197221A0000	.KIT INSTL. ENDBAY (See fig. 3, 3A for det BKDN)		2
- 70	3197222A0000	.KIT INSTL. ACTUATOR, ENDBAY (See fig. 3 for det BKDN)		1
- 70 A	3197222C0000	.KIT INSTL. ACTUATOR, ENDBAY (See fig. 3A for det BKDN)		1
80	3134209000ZA	.ARMREST ASSY, CNT*		1
- 85	319844400000	.KIT INSTL. ARMREST CNT* *(See fig. 4 for det BKDN)		1
90	3132793000ZA	.SHELL ASSY, AISLE LH*	A	1
- 90 A	3132792000ZA	.SHELL ASSY, AISLE RH*	B	1
100	3132850000ZA	.SHELL ASSY, OUTBD RH*	A	1
- 100 A	3132851000ZA	.SHELL ASSY, OUTBD LH* *(See fig. 5 for det BKDN)	B	1
- 110	3197356A0000	.KIT LEVERAGE, RH*		2
- 110 A	3197355A0000	.KIT LEVERAGE, LH* *(See fig. 11 for det BKDN)		2
- 120	3132482A002A	.TABLE ASSY, IAT RH*		1

- Item not illustrated

25-26-38

Page 1029

August 30, 2005

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
1				
- 120 A	3132481A002A	.TABLE ASSY, IAT LH*		1
- 130	319418100000	.KIT INSTL. TABLE IAT* *(See fig. 6 for det BKDN)		2
140	3127621E00ZA	.LEGREST ASSY*	A	2
- 140 A	3127620E00ZA	.LEGREST ASSY, LH*	B	2
- 150	319735400000	.KIT INST. LEGREST* *(See fig. 7 for det BKDN)		2
160	3129115M00ZA	.FOOTWELL Attaching parts		2
170	MS24693C29	.SCREW (A11002600000) * * *		4
- 180	3132890000ZA	.SHOES BOX ASSY		1
190	3132889000ZA	..SHOES BOX		1
200	31329000002P	..PANEL, INTERMEDIATE Attaching parts		1
210	MS24693C28	..SCREW (A11004500000) * * *		4
220	313289700000	..BRACKET, UPPER Attaching parts		1
230	MS24693C50	..SCREW (A11004900000) * * *		4
240	313289900000	..BRACKET, LOWER Attaching parts		1
250	NAS602-6P	..SCREW (A12002200000)		4
260	MS35335-31	..WASHER (A11403900000) * * *		4
270	31348840002A	..COVER Attaching parts		1
- 280	F210438000ZA	..ATTACHMENT, LEATHER		1

- Item not illustrated

25-26-38



COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES"16NC(T)(0)(0)ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
1		* * *		
- 290	3197381H002A	.KIT FAIRING, LH		1
- 290 A	3197380H002A	.KIT FAIRING, RH ARMREST CNT		1
- 290 B	3197380G002A	.KIT FAIRING, RH		1
- 290 C	3197381G002A	.KIT FAIRING, LH		1
300	31288790002A	..FAIRING, LH		1
- 300 A	31288800002A	..FAIRING, RH		1
300 B	K2088470002A	..FAIRING, CNT LH		1
- 300 C	K2088460002A	..FAIRING, CNT RH		1
		Attaching parts		
310	MS24693S28	..SCREW (A11000200000)		3
320	NAS391B6P	..WASHER (A12400300000)		3
		* * *		
- 330	31973590002A	.DRIP SHIELD		2
- 340	3194442A0000	.KIT GROUND STUD		1
- 350	F11498900000	..STUD		1
- 360	MS35650-302	..NUT (A11202800000)		2
- 370	MS35338-43	..WASHER (A11405000000)		2
- 380	F11824800000	..SCREW, SET		1
- 390	AN960-10L	..WASHER (A13400900000)		3
- 400	AN960-4	..WASHER (A13401000000)		1
- 410	3197956A008A	.KIT COVER, LEG LH	A	1
- 410 A	3197957A008A	.KIT COVER, LEG RH	B	1
420	3131362A008A	..COVER, LH	A	1
- 420 A	3131363A008A	..COVER, RH	B	1
430	3131364C0000	..REINFORCEMENT, LH	A	1
- 430 A	3131365C0000	..REINFORCEMENT, RH	B	1
		Attaching parts		
440	MS24693S272	..SCREW (A11001400000)		3
450	AN525-10R6	..SCREW (A13012000000)		1
		* * *		
- 460	K11391400000	.PLACARD, "MODIFICATION RECORD"		1
- 470	K11442700000	.PLACARD, SEAT IDENTIFICATION		1
		Attaching parts		

- Item not illustrated

25-26-38

Page 1031

August 30, 2005

FIG. ITEM	PART NUMBER	NOMENCLATURE	EFFECT COD.	UNITS ASSY
		1234567		
1				
- 480	B10003000000	.CAT TAP/D36*RIVET D=2.4 * * *		8
- 490	2011-1-5????	.AMS*SAFETY BELT (B00387800000)		2
500	3134044000ZA	.STRUCTURE, PRIMARY DBL RH*	A	1
- 500 A	3134045000ZA	.STRUCTURE, PRIMARY DBL LH* *(See fig. 8 for det BKDN)	B	1
- 510	3134312000ZA	.COMPARTMENT ASSY, DVD		2
520	3134314000ZA	..FAIRING		2
530	35521-3-C	..ACT*LATCH (B00106200000)		4
540	313431100000	..BRACKET		4
550	K11361600000	..PLATE, REINFORCEMENT Attaching parts		2
560	MS24693C23	..SCREW (A11012000000)		16
570	31343160002P	..STOP, INNER		4
580	313431800000	..STOP, FWD		2
590	F11868200000	..PIVOT, UPPER		4
600	F11868100000	..PIVOT, LOWER		4
610	MS24693C28	..SCREW (A11004500000)		4
630	NAS601-6P	..SCREW (A12001500000)		4
640	MS24693C30	..SCREW (A11004600000)		4
650	AN960-6	..WASHER (A13401200000)		8
660	F11868800000	..WASHER * * *		4
- 670	319838300000	.KIT, ELECTRIC DBL RH	A	1
- 670 A	319838200000	.KIT, ELECTRIC DBL LH	B	1
- 690	312628600000	..BRACKET ASSY, GROUND		2
- 700	K11248800000	...BRACKET, GROUND CNT Attaching parts		2
- 710	MS35650-302	...NUT (A11202800000)		4
- 720	MS35650-305T	...NUT (A11205400000)		8
- 730	MS35338-43	...WASHER (A11405000000)		8
- 740	NAS1096-3-20	...SCREW (A12019700000)		2
- 750	NAS1801-3-16	...SCREW (A12024600000)		2
- 760	NAS679A3	...NUT (A12200400000)		4

- Item not illustrated

25-26-38



COMPONENT MAINTENANCE MANUAL
 AIRCRAFT PASSENGER SEAT
 SERIES"16NC(T)(0)(0)ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
1				
- 770	AN960-10L	...WASHER (A13400900000)		16
- 780	AN960-D10L	...WASHER (A13402200000) * * *		16
- 790	3197352A0000	..PROTECTION ASSY, CABLE		2
- 800	TM3S10-C	...PANUIT*WIRING SUPP. (B10053400000)		120
- 810	B10053500000	...SPACER, CABLE		80
- 820	MS21919WDG15	...CLAMP (B0B501500000)		2
- 830	B10085500000	...SHEATH (SPOOL=150 MT)		36
- 840	B10085700000	...SHEATH (SPOOL=50MT)		16
- 850	B20013300000	...GROMMET		2
860	1113852	..SHT*READING LIGHT (B00388800000)		2
- 870	3197523A00ZA	..KIT INSTL. READING LIGHT (See fig. 5 for det BKDN)		2
- 880	319838000000	..KIT ELECTRICAL, AVIO DBL RH	A	1
- 880 A	319837900000	..KIT ELECTRICAL, AVIO DBL LH	B	1
890	3132417A00ZA	...CONTROL PANEL, AISLE LH*	A	1
- 890 A	3132418A00ZA	...CONTROL PANEL, AISLE RH* *(See fig. 3 for det BKDN)	B	1
900	3132420A00ZA	...CONTROL PANEL, OUTBD RH*	A	1
- 900 A	3132419A00ZA	...CONTROL PANEL, OUTBD LH* *(See fig. 3A for det BKDN)	B	1
- 910	313257300000	...HARNESS, CONTROL PANEL		2
- 920	3124580F0000	...GROUND CABLE, L=600 30A D5		5
- 930	3124580J0000	...GROUND CABLE, L=700 30A D5		1
- 940	313422200000	...HARNESS, READING LIGHT		2
- 950	313260300000	...EXTENSION CABLE		2
- 960	31330040002A	...INTERFACE BOARD, RH		1
- 960 A	31330050002A	...INTERFACE BOARD, LH		1
- 970	313257100000	...SEAT HARNESS		2
- 980	313260200000	...SJB DISCONNECT HARNESS		2
- 990	313484700000	...CABLE, POWER-IN		1
- 1000	313484800000	...CABLE, POWER-OUT		1
- 1010	B00336700000	...PLACARD, SELF-ADHES TNN GUILBERT		0
- 1020	319840700000	.KIT PORTER iMOTION		1
- 1030	PS6-70000-54	..PLP*iMOTION SYS 9G(B00383100000)		1
- 1040	PS5-10801-00	...PLP*LUMB BLADDER (B00312100000)		2

- Item not illustrated

25-26-38

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
1				
1050	PS6-10000-00	...PLP*CONTROLLER, LUMB(B00362500000)		1
- 1060	PS6-63001-07	...PLP*HARN,ILMB pax 1(B00362700000)		1
- 1070	PS6-63001127	...PLP*HARN,ILMB pax 2(B00362800000)		1
- 1080	PS5-22530-01	...PLP*ACTUATOR,SEAT PAN(B00295100000)*		2
- 1090	313485600000	...LEGREST ACTUATOR ASSY* *(See fig. 9 for det BKDN)		2
- 1100	PS6-66006050	...PLP*HARN,READ LIGHT(B00377700000)		2
- 1110	PS6-80021-00	...PLP*SJB (B00378100000)		1
- 1120	PS6-55000-04	...PLP*RECLINE ACTUAT (B00382700000)		2
- 1130	H6610056L030	...PLP*HARN,ACT INN ARMR(B00389000000)		2
- 1140	H6610055K076	...PLP*HARN,ACT OUT ARMR(B00372900000)		2
1150	PS6-85013-00	...PLP*IMOTION CNRL pax2(B00382900000)		1
1160	PS6-85013-01	...PLP*IMOTION CNRL pax1(B00382800000)		1
- 1170	MC78-30	...PLP*WIRE, RELEASE (B00242300000)		2
- 1180	MC89-54	...PLP*MECH. CONTROL (B00315200000)		6
- 1190	MC89-30	...PLP*MECH. CONTROL(B00315500000)		2
- 1200	MC92-54	...PLP*WIRE, RELEASE (B00376100000)		2
- 1210	H6610011A076	...PLP*CABLE (B00361700000)		2
- 1220	H6610052F102	...PLP*CABLE (B00372600000)		2
- 1230	H6610053B102	...PLP*CABLE (B00372700000)		2
- 1240	H6610054C163	...PLP*CABLE (B00372800000)		2
- 1250	PS5-10028-50	...PLP*EXTENS TUBE (B00388900000)		1
- 1260	PS5-21530-01	...PLP*ACTUATOR,FOOT/ARMR(B00372200000) (See fig. 3, 3A for det BKDN)		6
- 1270	F21039000000	..SPACER		2
- 1280	K50540600000	..PLACARD, IDENTIFICATION		2
- 1290	B00389100000	.KIT MAS, DBL SEAT		1
1300	RD-AX4406	..MAS*SEB (B00096000000)		1
1310	RD-AX6421-18	..MAS*RJU (B00388000000)		2
1320	RD-AX6509-E5	..MAS*DIGITAL PCU (B00387900000)		2
- 1330	RD-AM6967-C1	..MAS*HARN,SEB to PCU (B00160200000)		1
- 1340	RD-AM6093-17	..MAS*HARN,PCU to DISC (B00388100000)		2
- 1350	RD-AM6093-18	..MAS*HARN,DISC to RJU (B00388200000)		2
- 1360	B00389300000	.KIT GD, DBL SEAT		1
1370	1068-2	..GD*ISPS (B00212800000)		1
1380	1068820-2	..GD*J-BOX(B00213400000)		1
- 1390	1068805-5-24	..GD*HARN,OUTL (B00288000000)		2
1400	1075-2-2	..GD*OUTLET UNIT (B00366100000)		2

- Item not illustrated

25-26-38



COMPONENT MAINTENANCE MANUAL
 AIRCRAFT PASSENGER SEAT
 SERIES"16NC(T)(())ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
1				
- 1410	1068806-1-52	..GD*HARNESS, OUTLET EXT(B00388300000)		1
- 1420	1068806-1-44	..GD*HARNESS, OUTLET EXT(B00388400000)		1
- 1430	B00389500000	.KIT GTE, DBL SEAT		1
- 1440	AFA18-100000	..GTE*HANDSET (B00138700000)		2
- 1450	AFA03-003900	..GTE*TEL. BOX (B00135500000)		1
- 1460	AFA18-102601	..GTE*CORD REEL (B00157700000)		2
- 1470	AFS18-200001	..GTE*BASE FRAME (B00355100000)		1
- 1480	AFA35-206113	..GTE*HARNESS (B00388500000)		1
- 1490	AFA35-206109	..GTE*HARNESS (B00388700000)		1
- 1500	AFP89-004800	..GTE*MAGNET (B10079000000)		2

- Item not illustrated



COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES "16NC(T)()()ZA" FOR B767-300


THIS PAGE INTENTIONALLY LEFT BLANK

25-26-38

Page 1036

August 30, 2005

FIG. 1A (SHEET 1 OF 4) : SGL SEAT, CNT

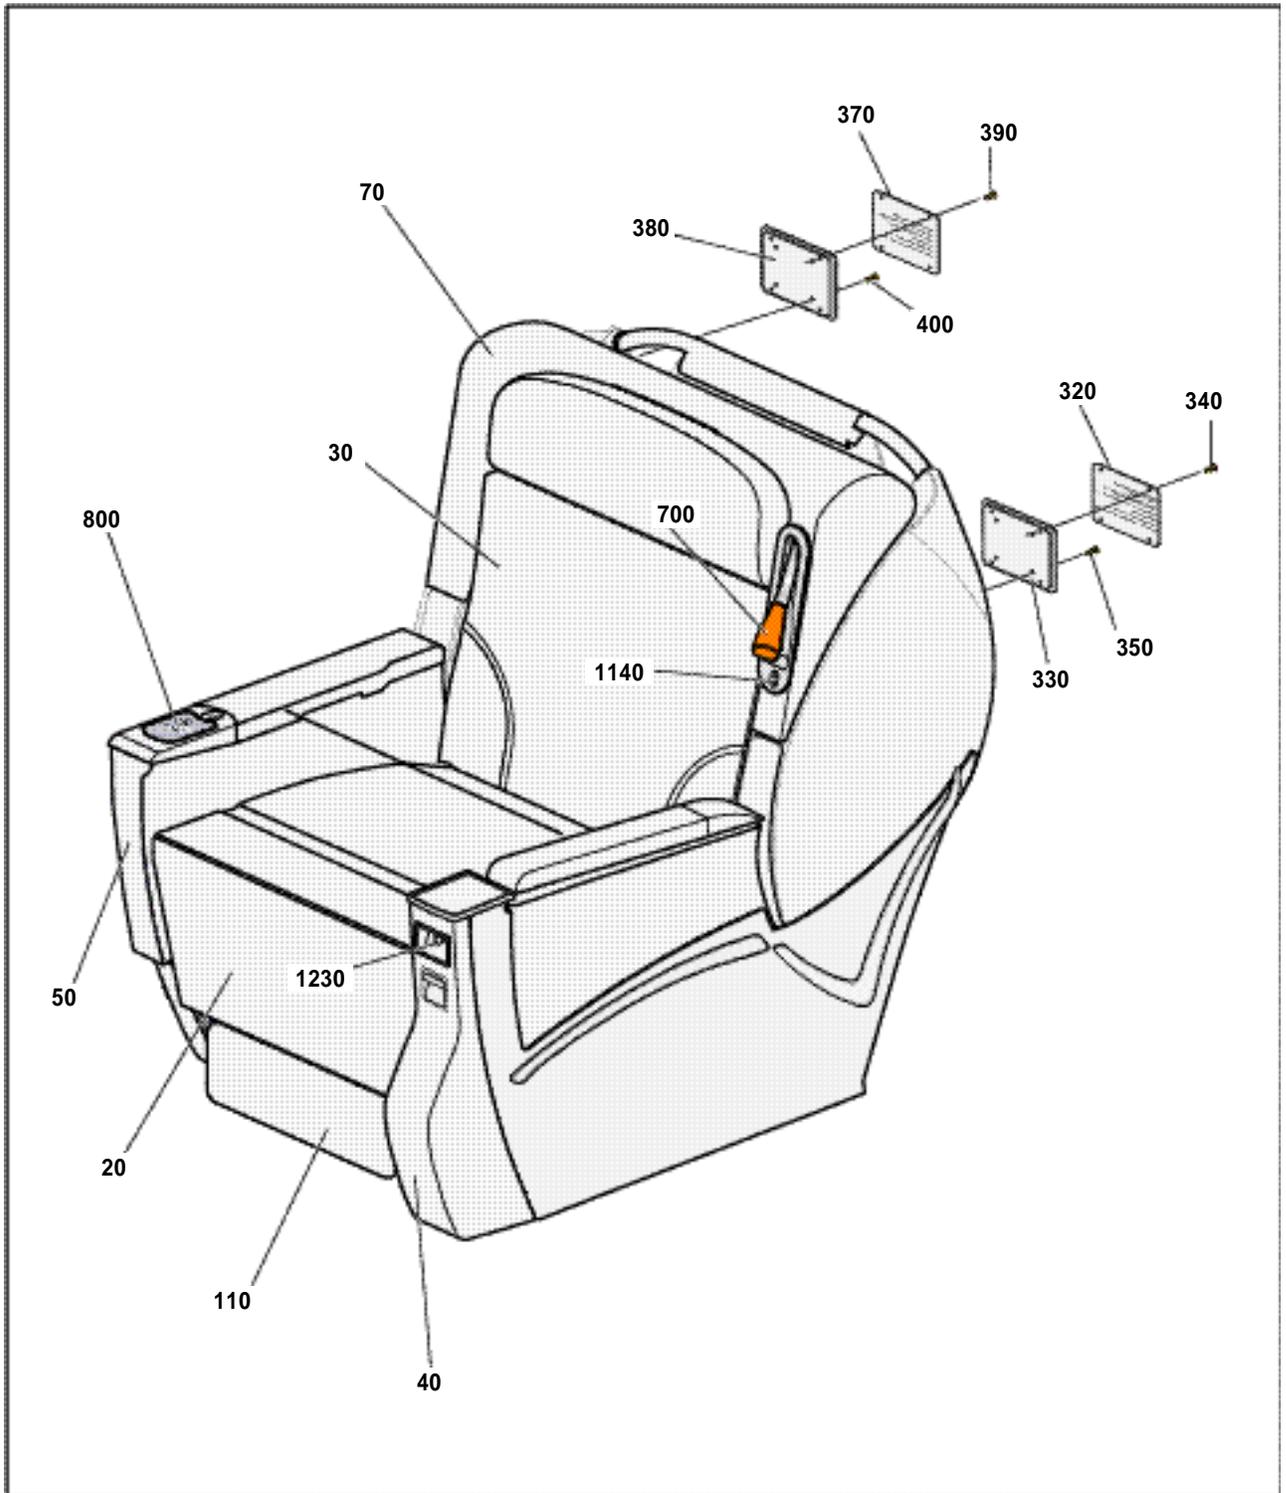


25-26-38

Page 1037

August 30, 2005

FIG. 1A (SHEET 2 OF 4): SGL SEAT, CNT

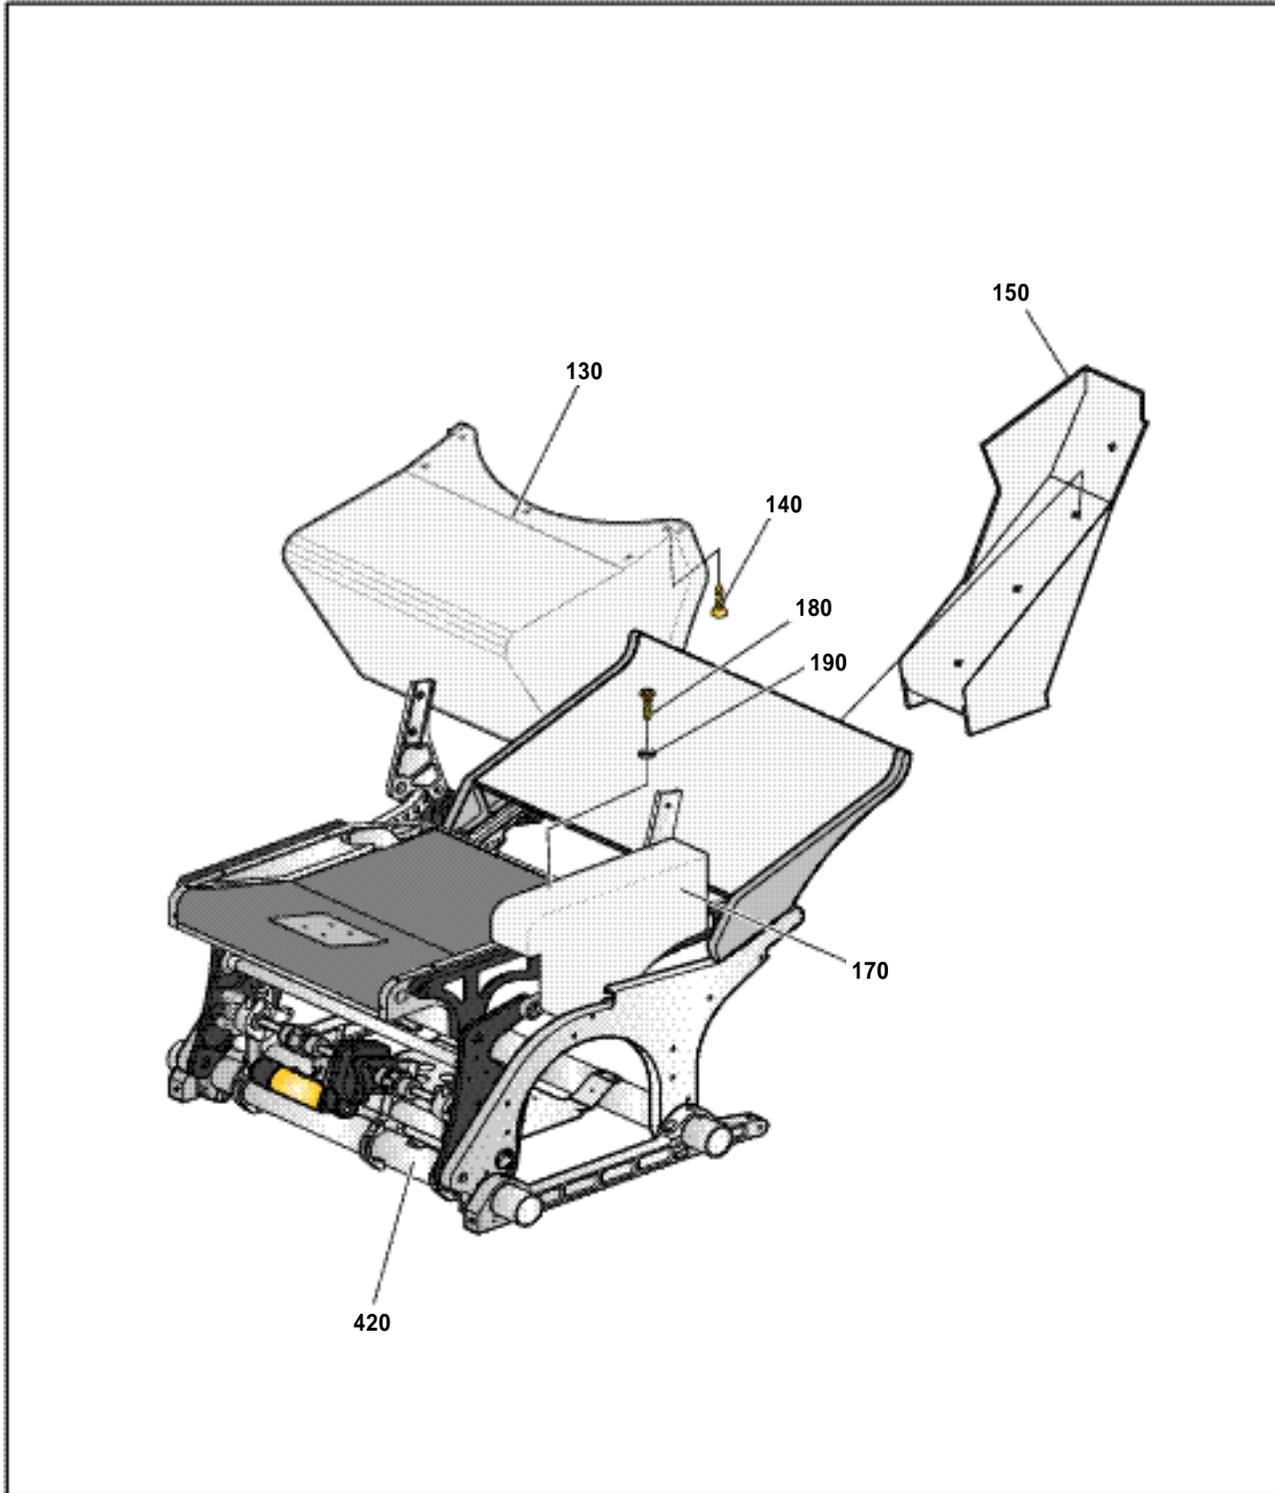

25-26-38

FIG. 1A (SHEET 3 OF 4) : SGL SEAT, CNT


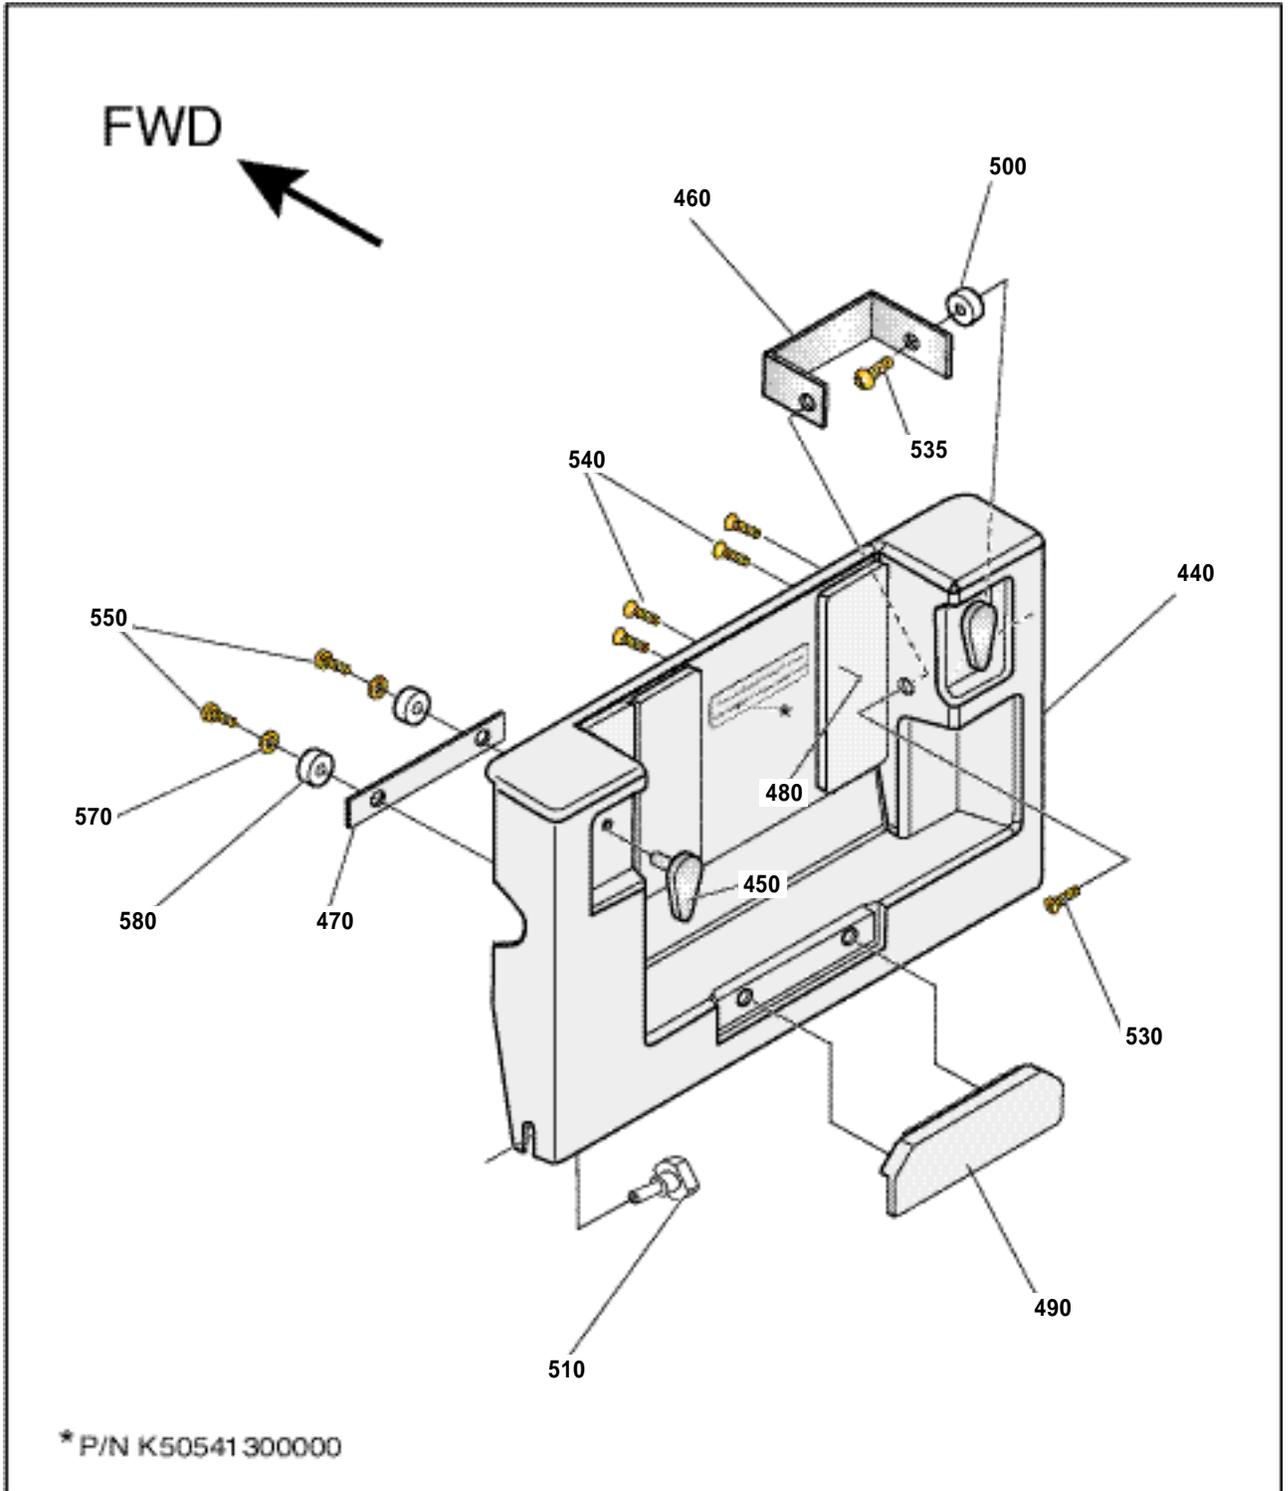


FIG. 1A (SHEET 4 OF 4): SGL SEAT, CNT



25-26-38

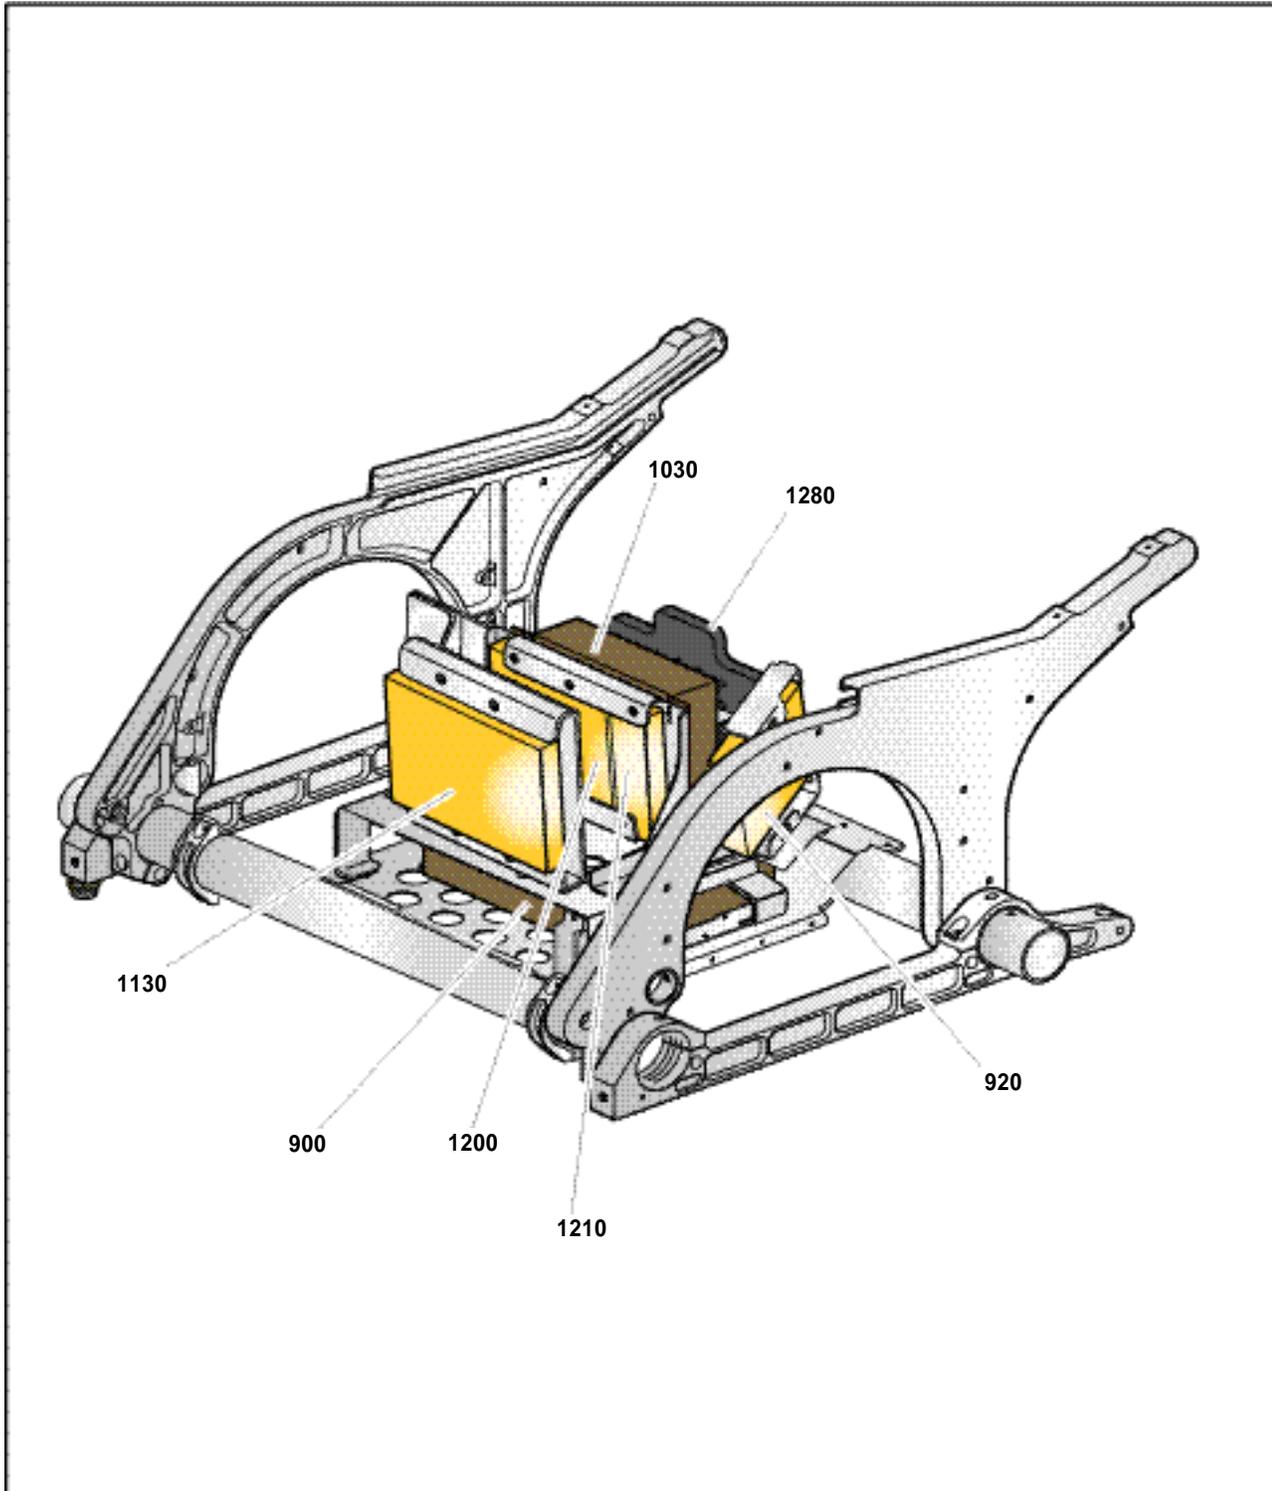

COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES"16NC(T)(0)(0)ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
1A				
1	16NC2T0110ZA	SINGLE SEAT, CNT	A	RF
- 10	12523-0101ZA	.BOTTOM CUSHION ASSY		1
20	31324400002A	..CUSHION, BOTTOM		1
30	3197313C00ZA	.BACKREST ASSY (See fig. 2 for det BKDN)		1
40	3134920000ZA	.ENDBAY ASSY,AISLE LH SGL (See fig. 3B for det BKDN)		1
50	3132474C00ZA	.ENDBAY ASSY, AISLE RH SGL*		1
- 60	3197221A0000	.KIT INSTL. ENDBAY* *(See fig. 3 for det BKDN)		1
- 60 A	319839100000	.KIT INSTL. ENDBAY (See fig. 3B for det BKDN)		1
70	3132858000ZA	.SHELL ASSY, SGL CNT (See fig. 5 for det BKDN)		1
- 80	3197355A0000	.KIT LEVERAGE, LH*		1
- 80 A	3197356A0000	.KIT LEVERAGE, RH* *(See fig. 11 for det BKDN)		1
- 90	3132481A002A	.TABLE ASSY, IAT LH*		1
- 100	319418100000	.KIT INSTL. TABLE IAT* *(See fig. 6 for det BKDN)		1
110	3127621E00ZA	.LEGREST ASSY*		1
- 120	319735400000	.KIT INST. LEGREST* *(See fig. 7 for det BKDN)		1
130	3129115M00ZA	.FOOTWELL Attaching parts		1
140	MS24693C29	.SCREW (A11002600000) * * *		4
150	3131715A002A	.SHOES BOX		1
- 160	3197380G002A	.KIT FAIRING, RH		1

- Item not illustrated

25-26-38

Page 1041

August 30, 2005

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
1A				
- 160 A	3197381H002A	.KIT FAIRING, LH		1
170	K2088470002A	..FAIRING, LH		1
- 170 A	31288800002A	..FAIRING, RH		1
		Attaching parts		
180	MS24693S28	..SCREW (A11000200000)		3
190	NAS391B6P	..WASHER (A12400300000)		3
		* * *		
- 200	31973590002A	.DRIP SHIELD		1
- 210	3194442A0000	.KIT GROUND STUD		1
- 220	F11498900000	..STUD		1
- 230	F11824800000	..SCREW, SET		1
- 240	A11405000000	..WASHER (A11405000000)		2
- 250	AN960-10L	..WASHER (A13400900000)		3
- 260	AN960-4	..WASHER (A13401000000)		1
- 270	MS35650-302	..NUT (A11202800000)		2
- 280	K11391400000	.PLACARD, "MODIFICATION RECORD"		1
- 290	K11442700000	.PLACARD, SEAT IDENTIFICATION		1
		Attaching parts		
- 300	B10003000000	.CAT TAP/D36*RIVET D=2.4		8
		* * *		
- 310	31349140002P	.PLACARD ASSY, LH ITALIAN LANGUAGE		1
320	K50540700000	..PLACARD, LH		1
330	31349160002P	..FAIRING		1
		Attaching parts		
340	MS24693A4	..SCREW (A11002800000)		4
350	MS24693C26	..SCREW (A11004400000)		4
		* * *		
- 360	31349150002P	.PLACARD ASSY, RH ENGLISH LANGUAGE		1
370	K505407A0000	..PLACARD, RH		1
380	31349160002P	..FAIRING		1
		Attaching parts		

- Item not illustrated

25-26-38



COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES"16NC(T)(O)(O)ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
1A				
390	MS24693A4	..SCREW (A11002800000)		4
400	MS24693C26	..SCREW (A11004400000) * * *		4
- 410	201115962289	.AMS*SAFETY BELT (B00387800000)		1
420	3134046000ZA	.STRUCTURE, PRIMARY SGL SEAT (See fig. 8A for det BKDN)		1
- 430	3134312000ZA	.COMPARTMENT ASSY, DVD		1
440	3134314000ZA	..FAIRING		1
450	35521-3-C	..ACT*LATCH (B00106200000) Attaching parts		2
460	313431100000	..BRACKET		2
470	K11361600000	..PLATE, REINFORCEMENT		1
480	31343160002P	..STOP, INNER		2
490	313431800000	..STOP, FWD		1
500	F11868200000	..PIVOT, UPPER		2
510	F11868100000	..PIVOT, LOWER		2
520	MS24693C23	..SCREW (A11012000000)		8
530	MS24693C28	..SCREW (A11004500000)		2
535	MS24693C30	..SCREW (A11004600000)		2
550	NAS601-6P	..SCREW (A12001500000)		2
570	AN960-6	..WASHER (A13401200000)		4
580	F11868800000	..WASHER * * *		2
- 590	319838400000	.KIT ELECTRICAL, AVIO SGL SEAT		1
- 600	312628600000	..BRACKET ASSY, GROUND		1
- 610	K11248800000	...BRACKET, GROUND Attaching parts		1
- 620	NAS1096-3-20	...SCREW (A12019700000)		1
- 630	NAS1801-3-16	...SCREW (A12024600000)		1
- 640	MS35338-430	...WASHER (A11405000000)		4
- 650	AN960-10L	...WASHER (A13400900000)		8
- 660	AN960-D10L	...WASHER (A13402200000)		8
- 670	MS35650-302	...NUT (A11202800000)		2
- 680	MS35650-305T	...NUT (A11205400000)		4

- Item not illustrated

25-26-38

Page 1043

August 30, 2005



COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES"16NC(T)(0)(0)ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
1A				
- 690	NAS679A3	...NUT (A12200400000) * * *		2
700	1113852	..SHT*READING LIGHT (B00388800000)		1
- 710	3197523A00ZA	..KIT INSTL. READING LIGHT (See fig. 5 for det BKDN)		1
- 720	3197352A0000	..PROTECTION ASSY, CABLE		1
- 730	TM3S10-C	...PANDUIT*WIRING SUPP. (B10053400000)		60
- 740	B10053500000	...SPACER, CABLE		40
- 750	MS21919WDG15	...CLAMP (B0B501500000)		1
- 760	B10085500000	...SHEATH (SPOOL=150 MT)		18
- 770	B10085700000	...SHEATH (SPOOL=50MT)		8
- 780	B20013300000	...GROMMET		1
- 790	319838100000	..KIT ELECTRICAL, AVIO SGL SEAT		1
800	3132418A00ZA	...CONTROL PANEL, AISLE RH (See fig. 3 for det BKDN)		1
- 810	313257300000	...HARNESS, CONTROL PANEL		1
- 820	313422200000	...HARNESS, READING LIGHT		1
- 830	3124580F0000	...GROUND CABLE, L=600 30A D5		4
- 840	313257100000	...SEAT HARNESS		1
- 850	313260300000	...EXTENSION CABLE		1
- 860	31330040002A	...INTERFACE BOARD, RH		1
- 870	B00336700000	...PLACARD,SELF-ADHE TNN GUILBERT		0
- 880	319840800000	.KIT PORTER iMOTION		1
- 890	PS6-7000055I	..PLP*iMOTION SYS 9G (B00383200000)		1
900	PS6-85013-02	...PLP*iMOTION CNTRL (B00399300000)		1
- 910	PS6-55000-04	...PLP*RECLINE ACTUAT (B00382700000)		1
920	PS6-80037-00	...PLP*SJB (B00383000000)		1
- 930	H6610056L030	...PLP*HARNESS,ACTUT INN(B00389000000)		1
- 940	PS6-66006050	...PLP*HARNESS, READ LIGHT(B00377700000)		1
- 950	MC92-54	...PLP*MECH OVERRIDE (B00376100000)		1
- 960	MC89-54	...PLP*MECH OVERRIDE (B00315200000)		3
- 970	MC89-30	...PLP*MECH OVERRIDE (B00315500000)		1
- 980	MC78-30	...PLP*WIRE, RELEASE (B00242300000)		1
- 990	313485600000	...LEGREST ACTUATOR ASSY*		1
- 1000	PS5-22530-01	...PLP*ACTUATOR,SEAT PAN(B00295100000)*		1

- Item not illustrated

25-26-38




COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES"16NC(T)(0)(0)ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
1A				
		*(See fig. 9 for det BKDN)		
- 1010	PS5-10801-00	...PLP*LUMB BLADDER (B00312100000)		1
- 1020	H6610011A076	...PLP*CABLE (B00361700000)		1
1030	PS6-10000-00	...PLP*CONTROLLER, LUMB(B00362500000)		1
- 1040	PS6-63001-076	...PLP*CABLE, LUMB (B00362700000)		1
- 1050	PS5-21530-01	...PLP*ACTUATOR, ARMREST (B00372200000)*		3
		*(See fig. 3 for det BKDN)		
- 1060	H6610052F102	...PLP*CABLE (B00372600000)		1
- 1070	H6610053B102	...PLP*CABLE (B00372700000)		1
- 1080	H6610054C163	...PLP*CABLE (B00372800000)		1
- 1090	H6610055K076	...PLP*ACTU CABLE (B00372900000)		1
- 1100	F21039000000	..SPACER		1
- 1110	K50540600000	..PLACARD, IDENTIFICATION		1
- 1120	B00389200000	.KIT MAS, SGL SEAT		1
1130	RD-AX4406	..MAS*SEB (B00096000000)		1
1140	RD-AX6421-18	..MAS*RJU (B00388000000)		1
- 1150	RD-AX6509-E5	..MAS*DIG. PCU (B00387900000)		1
- 1160	RD-AM6957-7	..MAS*HARNESS,SEB to PCU(B00081600000)		1
- 1170	RD-AM6093-17	..MAS*HARNESS,PCU to DISC(B00388100000)		1
- 1180	RD-AM6093-18	..MAS*HARNESS,DISC to RJU(B00388200000)		1
- 1190	B00389400000	.KIT GENERAL DYNAMICS, SGL SEAT		1
1200	1068-2	..GD*ISPS (B00212800000)		1
1210	1068820-2	..GD*J.BOX (B00213400000)		1
- 1220	1068805-5-24	..GD*HARNESS,OUTLET (B00288000000)		1
1230	1075-2-2	..GD*OUTLET UNIT (B00366100000)		1
- 1240	1068806-1-52	..GD*HARNESS,CUILET EXID(B00388300000)		1
- 1250	B00389600000	.KIT GTE AIRPHONE,SGL SEAT		1
- 1260	AFA18-100000	..GTE*HANDSET (B00138700000)		1
- 1270	AFA18-102601	..GTE*CORD REEL (B00157700000)		1
1280	AFA03-003800	..GTE*TEL BOX (B00135400000)		1
- 1290	AFS18-200001	..GTE*BASE FRAME (B00355100000)		1
- 1300	AFP89-004800	..GTE*MAGNET (B10079000000)		1
- 1310	AFA35-206111	..GTE*HARNESS (B00388600000)		1

- Item not illustrated

FIG. 2 : BACKREST ASSY

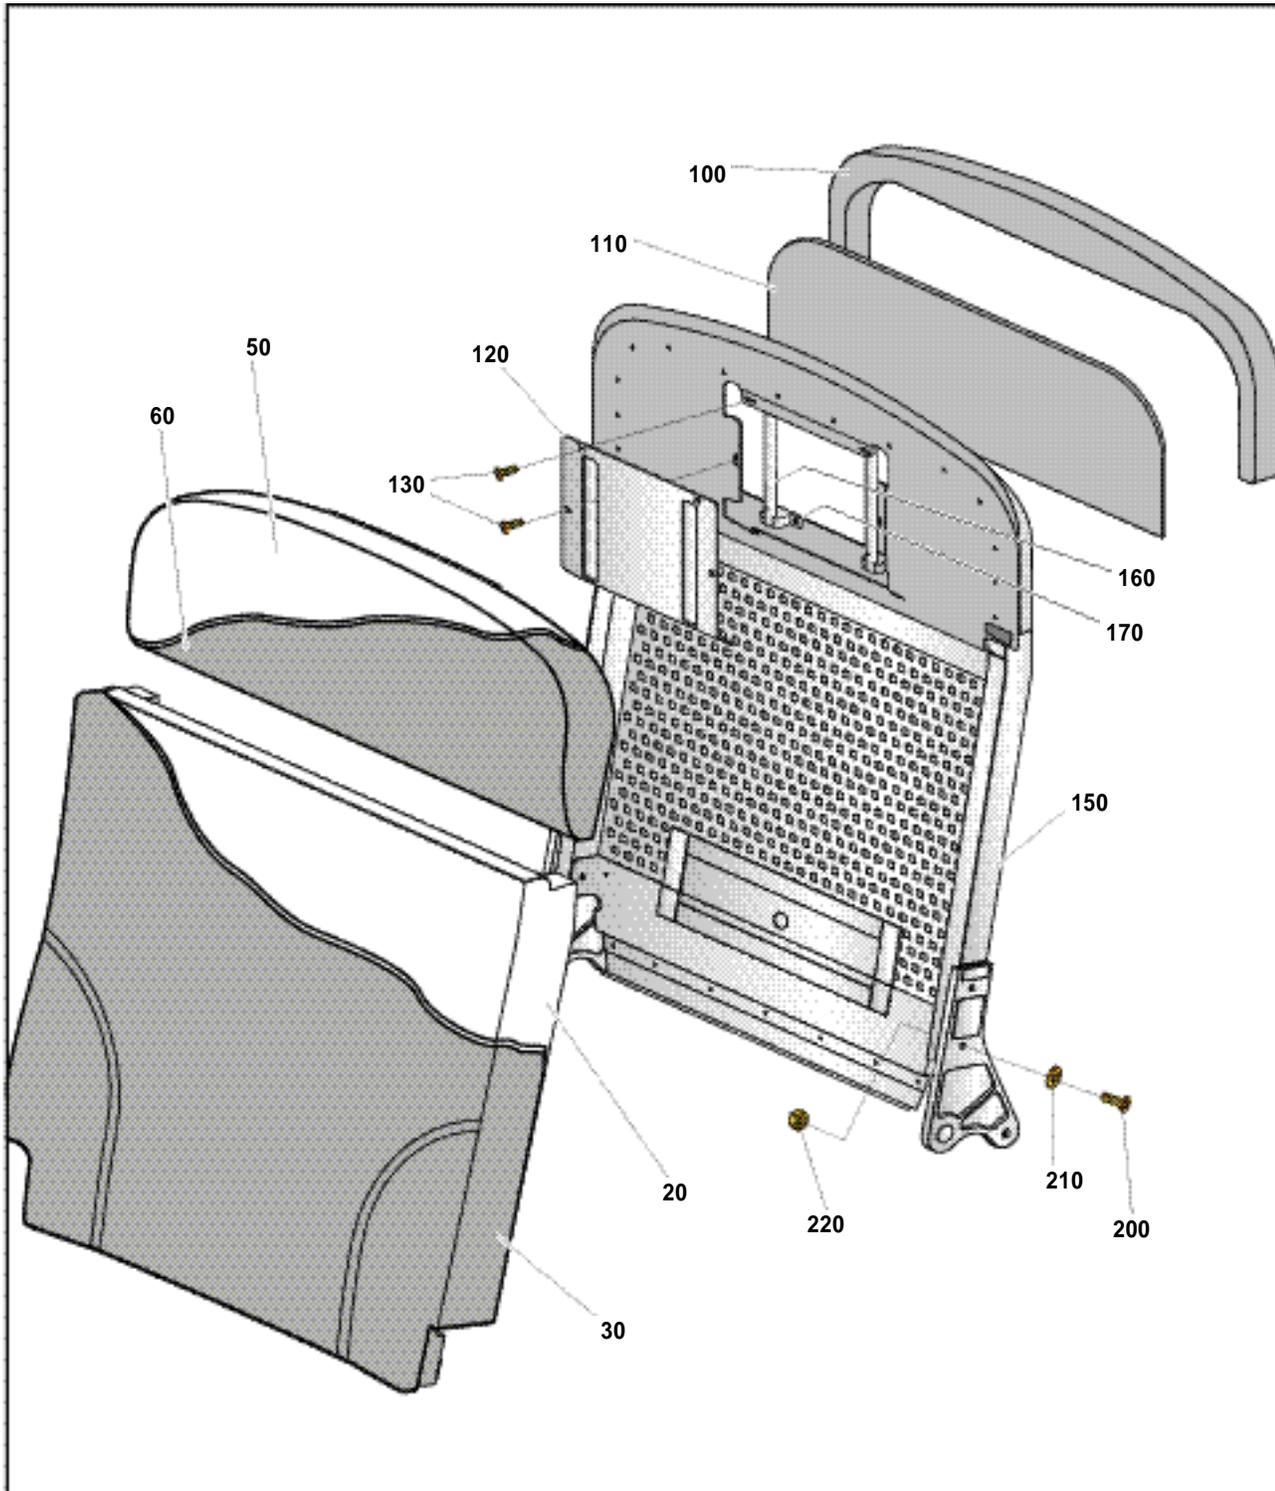

25-26-38



COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES"16NC(T)(O)(ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
2				
1	3197313C00ZA	.BACKREST ASSY (See fig. 1, 1A for det NHA)	A	RF
- 10	12523-0201ZA	..BACK ASSY		1
20	313243900000	...CUSHION, BACKREST		1
30	3132597A00ZA	...COVER, BACKREST		1
- 40	12523-0301ZA	..HEADREST ASSY		1
50	3132565A0000	...CUSHION, HEADREST		1
60	3132594A00ZA	...COVER, HEADREST		1
- 70	3132595A00ZA	...COVER, REAR HEADREST		1
- 80	3132941E0000	..STRUCTURE ASSY, HEADREST CNT (See fig. 2A for det BKDN)		1
- 90	31276170002A	..STRUCTURE ASSY, BACKREST		1
100	312923700000	...STRUCTURE, BACKREST UPPER		1
110	F20869800000	...CUSHION, BACKREST REAR CNT		1
120	F2086960002A	...SLIDING CLOSURE, HEADREST Attaching parts		1
130	NAS601-5P	...SCREW (A12007300000)		6
- 140	B10009700000	...RIVET * * *		44
150	312761600000	...STRUCTURE, BACKREST		1
160	F11667400001	..GUIDE, SLIDING Attaching parts		2
170	NAS601-10P	..SCREW (A12006500000)		2
- 180	DIN1481 2x10	..PIN (A15404300000) * * *		2
- 190	319824800000	..KIT INSTL. BACKREST (See fig. 8, 8A for det NHA)	B	RF
200	AN4-13A	...SCREW (A13006600000)		4
210	AN960-416	...WASHER (A13400200000)		8
220	F42NKE-048	...NUT (B10026700000)		4


- Item not illustrated

25-26-38

Page 1047

August 30, 2005

FIG. 2A : STRUCTURE ASSY, HEADREST

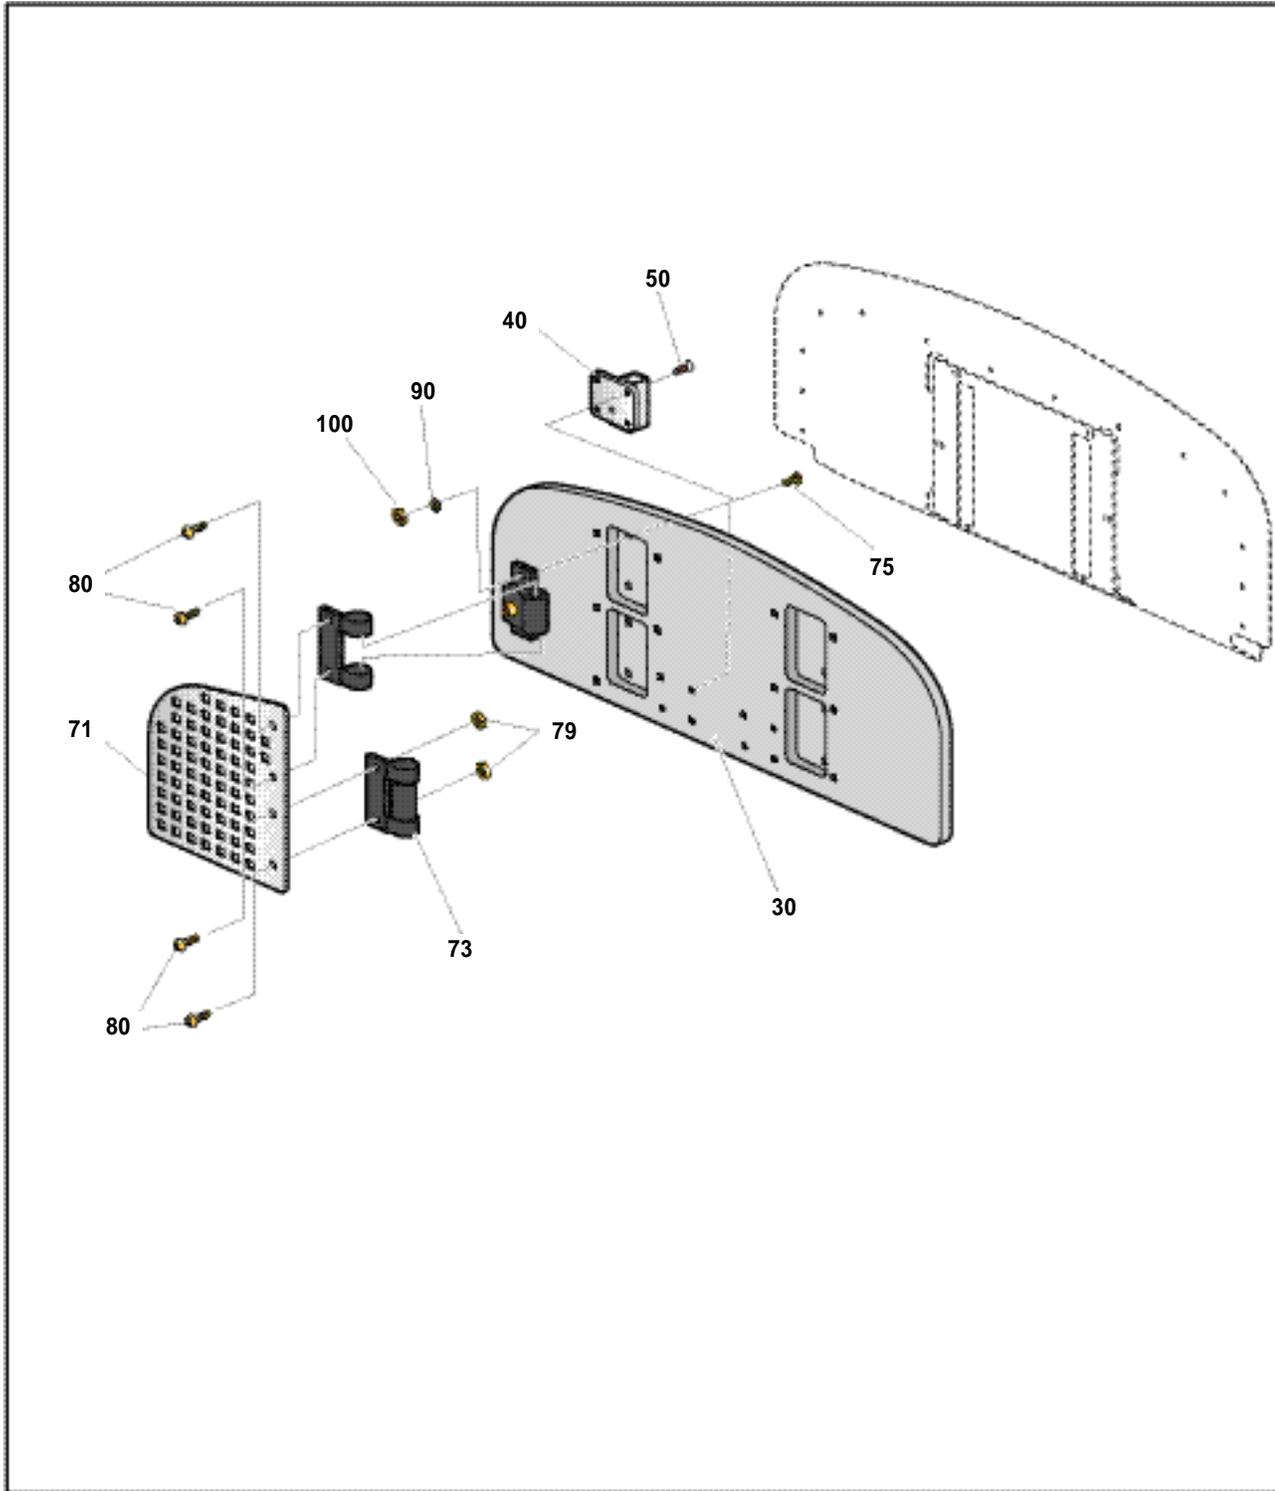


25-26-38

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
2A				
1	3132941E0000	..STRUCTURE ASSY, HEADREST CNT (See fig. 2 for det NHA)	A	RF
- 10	3132940E0000	...PANEL ASSY, HEADREST CNT		1
- 20	3132939E0000PANEL ASSY		1
30	3132934E0000PANEL		1
40	312896500000SLIDING, BLOCK Attaching parts		2
50	MS24693S272SCREW (A11001400000) * * *		8
- 60	313293500000	...STRUCTURE ASSY, PRIVACY LH		1
- 60 A	313293600000	...STRUCTURE ASSY, PRIVACY RH		1
- 70	313293800000PRIVACY ASSY, RH		1
- 70 A	313293700000PRIVACY ASSY, LH		1
71	K11448800000PRIVACY		2
73	F21045600000HINGE		4
75	NAS603-8PSCREW (A12002500000)		8
- 77	AN960-6WASHER (A13401200000)		8
79	NAS679A3NUT (A12200400000) Attaching parts		8
80	NAS603-8P	...SCREW (A12002500000)		8
90	AN960-10L	..WASHER (A13400900000)		8
100	NAS679A3	..NUT (A12200400000) * * *		8

- Item not illustrated

FIG. 3 (SHEET 1 OF 3) : ENDBAY ASSY, AISLE LH

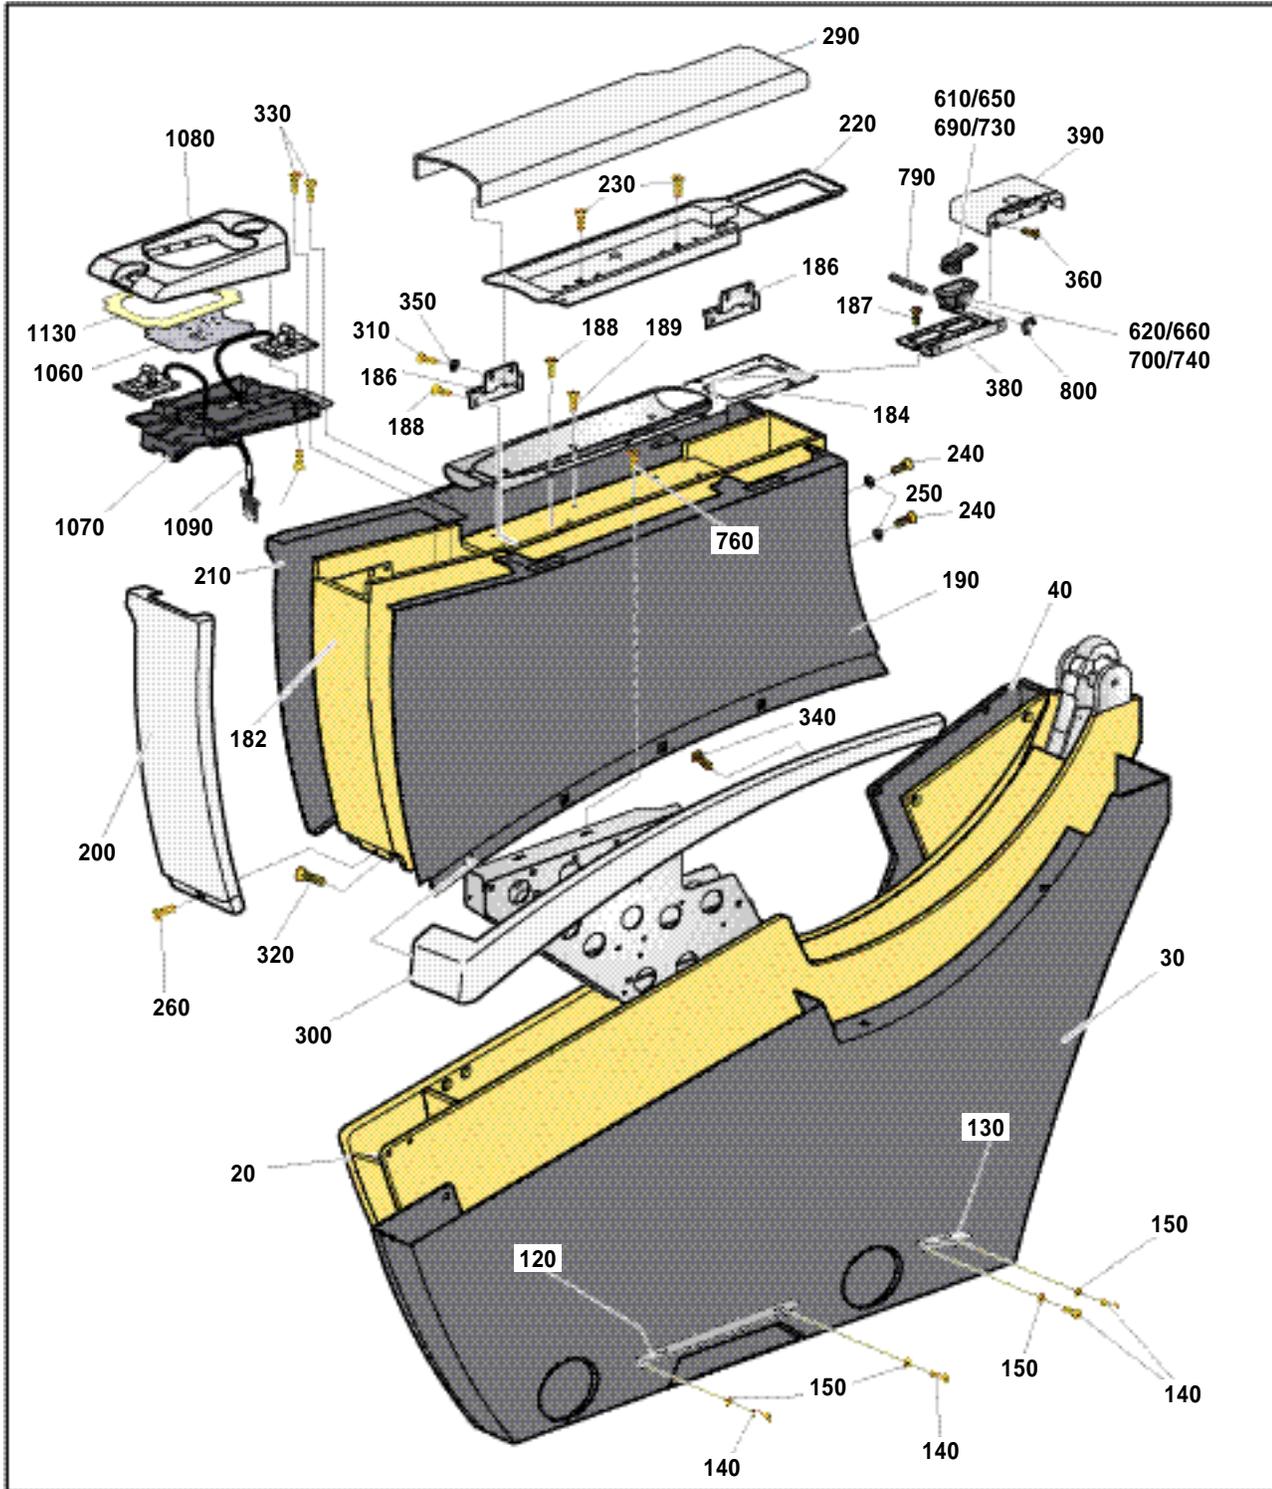

25-26-38

FIG. 3 (SHEET 2 OF 3) : ENDBAY ASSY, AISLE LH


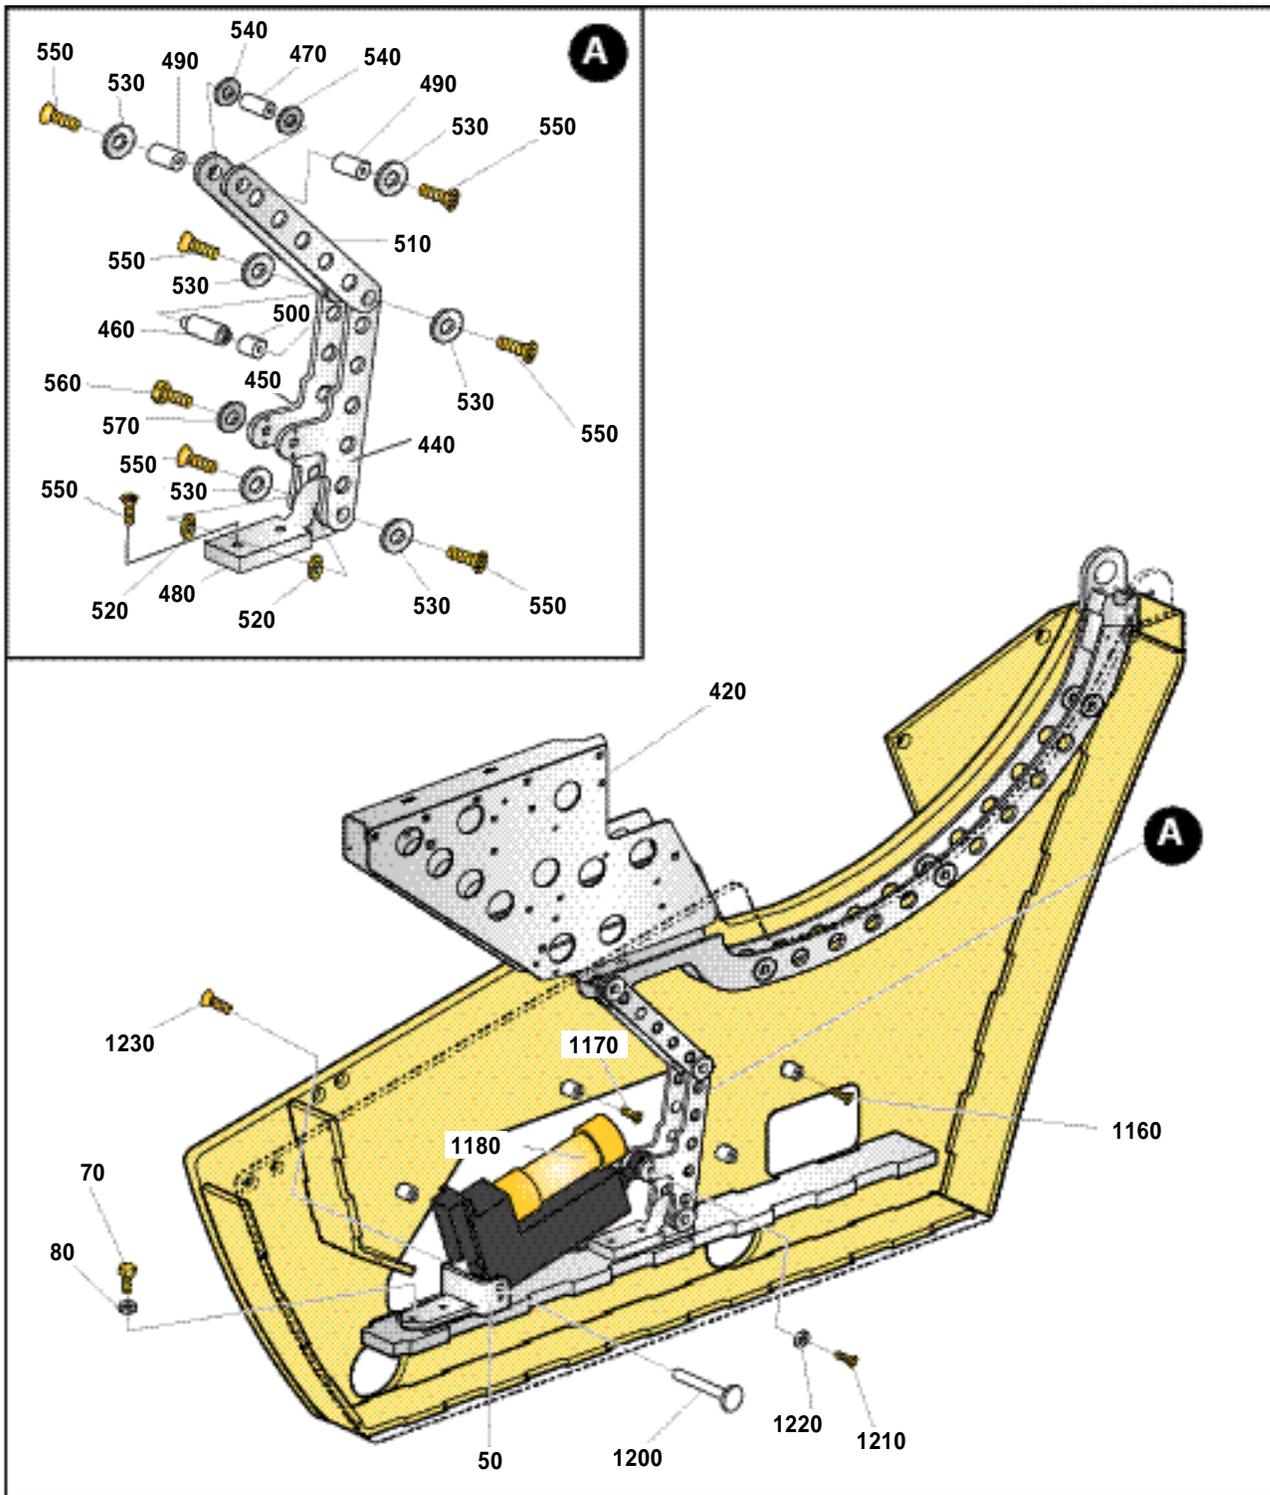


FIG. 3 (SHEET 3 OF 3) : ENDBAY ASSY, AISLE LH



25-26-38

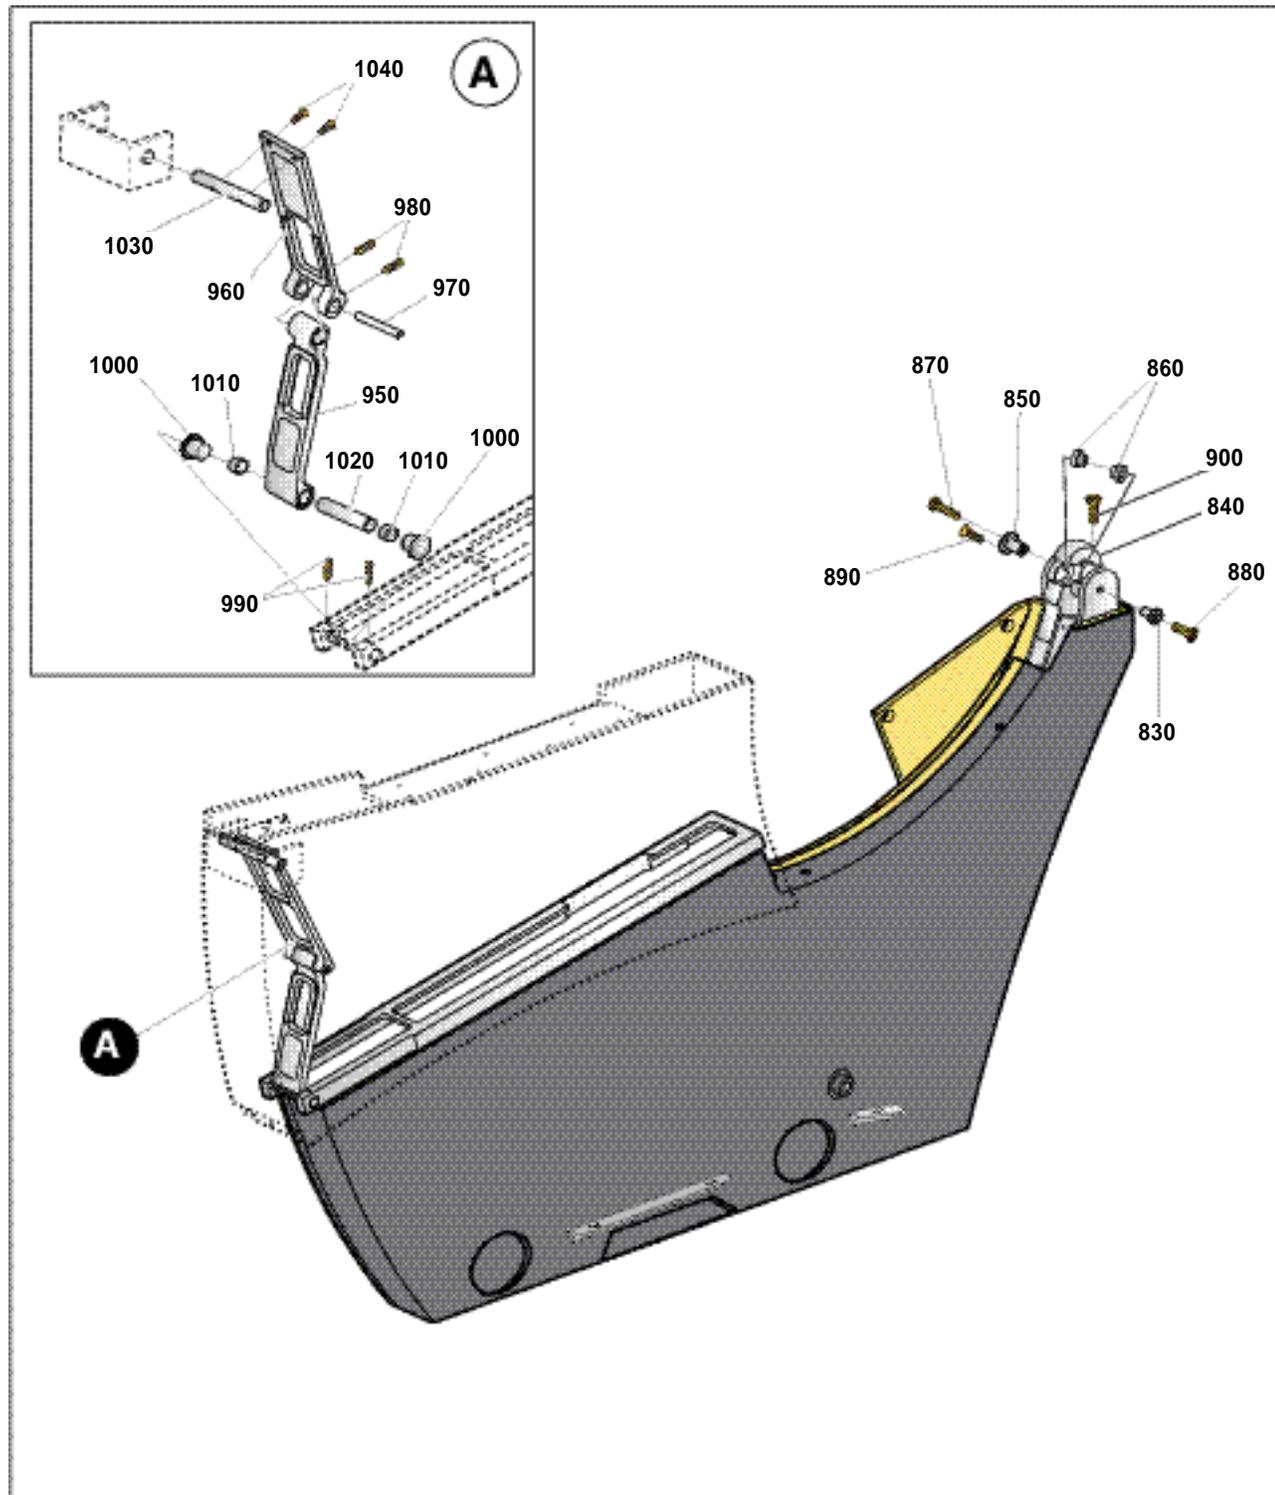

COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES"16NC(T)(0)(0)ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
3				
1	3132473A00ZA	ENDBAY ASSY, AISLE LH*	A	RF
- 1 A	3132474A00ZA	ENDBAY ASSY, AISLE RH*	B	RF
- 1 B	3132474C00ZA	ENDBAY ASSY, AISLE RH SGL *(See fig. 1 for det NHA) (See fig. 1A for det NHA)	C	RF
- 10	3132487A002A	.ENDBAY ASSY, LOWER LH	A	1
- 10 A	3132488A002A	.ENDBAY ASSY, LOWER RH	B	1
- 10 B	3132488C002A	.ENDBAY ASSY, LOWER RH	C	1
20	3129711E0000	..FAIRING ASSY, LH	A	1
- 20 A	3129710E0000	..FAIRING ASSY, RH	B	1
- 20 B	3129710F0000	..FAIRING ASSY, RH	C	1
30	3132421A002A	..COVER, ENDBAY LH	A	1
- 30 A	3132422A002A	..COVER, ENDBAY RH	B	1
- 30 B	3132422C002A	..COVER, ENDBAY RH	C	1
40	K2091950002A	..FAIRING, INNER LH	A	1
- 40 A	K2091940002A	..FAIRING, INNER RH	B	1
- 40 B	K209194A002A	..FAIRING, INNER RH	C	1
50	3127220C0000	..BRACKET, ACTUATOR ATTACHMENT		1
		Attaching parts		
- 60	F11665700000	..SPACER		4
70	NAS428-3A7	..SCREW (A12005400000)		2
80	AN960-10	..WASHER (A13400800000)		2
- 90	A11001300000	..SCREW (A11001300000)		8
- 100	NAS1169-C6L	..WASHER (A12400800000)		8
- 110	3153.AA01	..FASTPOINT*SCREW (B20014600000) * * *		2
120	313136600000	..BRACKET	AB	1
130	313136700000	..BRACKET Attaching parts	AB	1
140	NAS602-6P	..SCREW (A12002200000)	AB	5
150	MS35335-31	..WASHER (A11403900000) * * *	AB	5
- 160	3132489A00ZA	.ENDBAY ASSY, UPPER LH	A	1
- 160 A	3132490A00ZA	.ENDBAY ASSY, UPPER RH	BC	1
- 170	3132505A00ZA	..ENDBAY, UPPER LH	A	1

- Item not illustrated

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
3				
- 170 A	3132504A00ZA	..ENDBAY, UPPER RH	BC	1
- 180	3132511A0000	...STRUCTURE ASSY, LH	A	1
- 180 A	3132510A0000	...STRUCTURE ASSY, RH	BC	1
182	3127245C0000FAIRING, LH	A	1
- 182 A	3127246C0000FAIRING, RH	BC	1
184	313247100000PLATE, UPPER LH	A	1
- 184 A	313247200000PLATE, UPPER RH	BC	1
186	3127250C0000HINGE, ARMCAP		2
187	MS24693C2SCREW (A11003900000)		2
188	MS24693C26SCREW (A11004400000)		8
189	MS24693C46SCREW (A11018900000)		3
190	K2091990002A	...FAIRING, OUTER LH	A	1
- 190 A	K2091980002A	...FAIRING, OUTER RH	BC	1
200	31323010002A	...FAIRING, FWD LH	A	1
- 200 A	31323020002A	...FAIRING, FWD RH	BC	1
210	3132507A00ZA	...FAIRING, INNER LH	A	1
- 210 A	3132506A00ZA	...FAIRING, INNER RH	BC	1
220	3133291A00ZA	...FAIRING, HANDSET COMPARTMENT LH	A	1
- 220 A	3133290A00ZA	...FAIRING, HANDSET COMPARTMENT RH	BC	1
		Attaching part		
230	NAS602-4P	...SCREW (A12009400000)		2
240	MS24693C27	...SCREW (A11017000000)		2
250	NAS391B6P	...WASHER (A12400300000)		2
260	NAS601-6P	...SCREW (A12001500000)		1
- 270	MS51862-3	...SCREW (A11008200000)		1
- 280	A21600600000	...CLAMP, PLASTIC		4
		* * *		
290	3127271E00ZA	..ARMCAP, LH	A	1
- 290 A	3127272E00ZA	..ARMCAP, RH	BC	1
300	31278510002A	..BUMPER, LH	A	1
- 300 A	31278500002A	..BUMPER, RH	BC	1
310	NAS601-5P	..SCREW (A12007300000)		4
320	MS51957-26	..SCREW (A11010200000)		1
330	MS24693C28	..SCREW (A11004500000)		1
340	A11001300000	..SCREW (A11001300000)		5
350	NAS1169-C6L	..WASHER (A12400800000)		4

- Item not illustrated

25-26-38



COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES"16NC(T)(0)(0)ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
3				
360	MS24693C26	..SCREW (A11004400000) * * *		2
- 370	3132461A00ZA	..SUPPORT, RELEASE PLATE LH	A	1
- 370 A	3132460A00ZA	..SUPPORT, RELEASE PLATE RH	BC	1
380	K11294900000	...PLATE, FIXING RELEASE LH	A	1
- 380 A	K11294800000	...PLATE, FIXING RELEASE RH	BC	1
390	3132905A00ZA	...COVER, LH	A	1
- 390 A	3132904A00ZA	...COVER, RH	BC	1
		Attaching parts		
- 400	MS20426B3-4	...RIVET (A11351400000) * * *		3
- 410	3132485A0000	.STRUCTURE ASSY, ENDBAY INNER LH	A	1
- 410 A	3132486A0000	.STRUCTURE ASSY, ENDBAY INNER RH	BC	1
420	3132437A0000	..LEVER ASSY, UPPER ENDBAY LH	A	1
- 420 A	3132438A0000	..LEVER ASSY, UPPER ENDBAY RH	BC	1
- 430	312773100000	..LEVER ASSY, ENDBAY AISLE LH	A	1
- 430 A	312773200000	..LEVER ASSY, ENDBAY AISLE RH	BC	1
440	312774700000	...LEVER, LOWER LH	A	1
- 440 A	312774800000	...LEVER, LOWER RH	BC	1
450	3127747E0000	...LEVER, LOWER LH	A	1
- 450 A	3127748E0000	...LEVER, LOWER RH	BC	1
460	F11662700000	...PIVOT, ROTATION		2
470	F11665800000	...PIVOT, ROTATION UPPER		1
480	F116221A0000	...HINGE, SUPPORT LEVER		1
490	F20870200000	...BUSHING, NYLON		1
500	F20872100000	...BUSHING, NYLON		1
510	F11625300000	...ROD		2
		Attaching parts		
520	F20871100000	...WASHER, NYLON		4
530	F11628000000	...WASHER		8
540	F20535400000	...WASHER, NYLON		2
550	MS24693C47	...SCREW (A11006900000)		6
560	AN4-11A	...SCREW (A13006500000)		1
570	AN960-416L	...WASHER (A13400700000)		1
- 580	F11641900000	...SPACER		1
- 590	MS24693C50	...SCREW (A11004900000)		2

- Item not illustrated

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
3		* * *		
- 600	3126676F00QQ	.LEVER ASSY, "BACKREST"		1
610	F11687000001	..LEVER, ACTUATOR RELEASE		1
620	H20584300021	..SEATING, LEVER		1
- 630	K505348A00QQ	..PLACARD "BACKREST"		1
- 640	3126676G00QQ	.LEVER ASSY, "SEAT PAN"		1
650	F11687000001	..LEVER, ACTUATOR RELEASE		1
660	H20584300021	..SEATING, LEVER		1
- 670	K505349A00QQ	..PLACARD "SEAT PAN"		1
- 680	3126676H00QQ	.LEVER ASSY, "ARMREST"		1
690	F11687000001	..LEVER, ACTUATOR RELEASE		1
700	H20584300021	..SEATING, LEVER		1
- 710	K505350A00QQ	..PLACARD "ARMREST"		1
- 720	3126676L00QQ	.LEVER ASSY, "LEGREST"		1
730	F11687000001	..LEVER, ACTUATOR RELEASE		1
740	H20584300021	..SEATING, LEVER		1
- 750	K505351A00QQ	..PLACARD "LEGREST"		1
760	MS24693C27	.SCREW (A11017000000)		4
- 770	NAS428-3A7	.SCREW (A12005400000)		2
- 780	AN960-10	.WASHER (A13400800000)		2
790	F11687100000	.PIVOT		2
800	DIN6799 D2.3	.CIRCLIP (A15402300000)		2
- 810	F11790100000	.BUSHING, READING LIGHT		1
- 820	3197220C0000	.KIT INSTL. ROTATION, ENDBAY		1
830	F11623300000	..PIVOT, ROTATION		1
840	F116240A0000	..C CLAMP		1
		Attaching parts		
850	F116232A0000	..PIVOT		1
860	F20844900000	..BUSHING, ROTATION		2
870	B10008600000	..UBK 1/4-28x1" *BOLT		1
880	MS24693S272	..SCREW (A11001400000)		1
890	MS24693C46	..SCREW (A11018900000)		3
900	NAS602-8P	..SCREW (A12002300000)		2

- Item not illustrated

25-26-38



COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES"16NC(T)(0)(0)ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
3				
- 910	MS24693C25	..SCREW (A11011300000)		3
- 920	A11500200000	..HELICOIL (A11500200000) * * *		3
- 930	31982310002A	.KIT STABILIZER, ENDBAY AISLE		1
- 940	31332800002A	..STABILIZER ASSY, ENDBAY		1
950	31332810002A	...LEVER, LOWER		1
960	31332820002A	...LEVER, UPPER		1
970	F11822200000	...PIVOT		1
980	AN565A6H3	...SCREW, SET (A13019600000)		2
990	AN565A6H3	..SCREW, SET (A13019600000)		2
1000	F11822100000	..BUSHING		2
1010	F20983300000	..BUSHING, FWD		2
1020	F11821600000	..PIVOT		1
1030	F11822300000	..PIVOT		1
1040	MS24693C49	..SCREW (A11009700000)		2
- 1050	3132417A00ZA	...CONTROL PANEL, AISLE LH (See fig. 1 for det NHA)	D	RF
- 1050 A	3132418A00ZA	...CONTROL PANEL, AISLE RH (See fig. 1, 1A for det NHA)	E	RF
1060	3132409A00ZAKEYBOARD, LH	D	1
- 1060 A	3132410A00ZAKEYBOARD, RH	E	1
1070	31324150002ASUPPORT, PLATE FWD		1
1080	3132413A00ZAFRAME, CONTROL PANEL LH	D	1
- 1080 A	3132414A00ZAFRAME, CONTROL PANEL RH	E	1
1090	31326500002ASWITCH HARNESS DBL		1
- 1100	313216000001SCREW, PAINTED		7
- 1110	NAS679A04NUT (A12201600000)		7
- 1120	NAS601-6PSCREW (A12001500000)		4
1130	K20917000000GASKET, CONTROL PANEL		1
- 1140	192-5174RS*CLAMP (B0B180100000)		4
- 1150	3197221A0000	.KIT INSTL.ENDBAY (See fig. 1, 1A for det NHA)	F	RF
1160	B10008600000	..UBK 1/4-28x1" *BOLT		2
1170	B10014200000	..UBK 1/4-28x1/2" *BOLT		2
1180	PS5-21530-01	...PLP*ACTUATOR, FOOT/ARMR (B00372200000)	G	RF

- Item not illustrated

25-26-38

Page 1057

August 30, 2005

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
3				
- 1190	3197222A0000	(See fig. 1, 1A for det NHA) .KIT INSTL. ACTUATOR, ENDBAY (See fig. 1 for det NHA)	H	RF
1200	F116244A0000	..PIVOT, REAR		1
1210	AN4-7A	..SCREW (A13004200000)		1
1220	AN960-416L	..WASHER (A13400700000)		1
1230	NAS603-4P	..SCREW (A12009100000)		1

- Item not illustrated

25-26-38



COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES "16NC(T)() () ZA" FOR B767-300

THIS PAGE INTENTIONALLY LEFT BLANK

25-26-38

Page 1059

August 30, 2005

FIG. 3A (SHEET 2 OF 3): ENDBAY ASSY, OUTBD RH


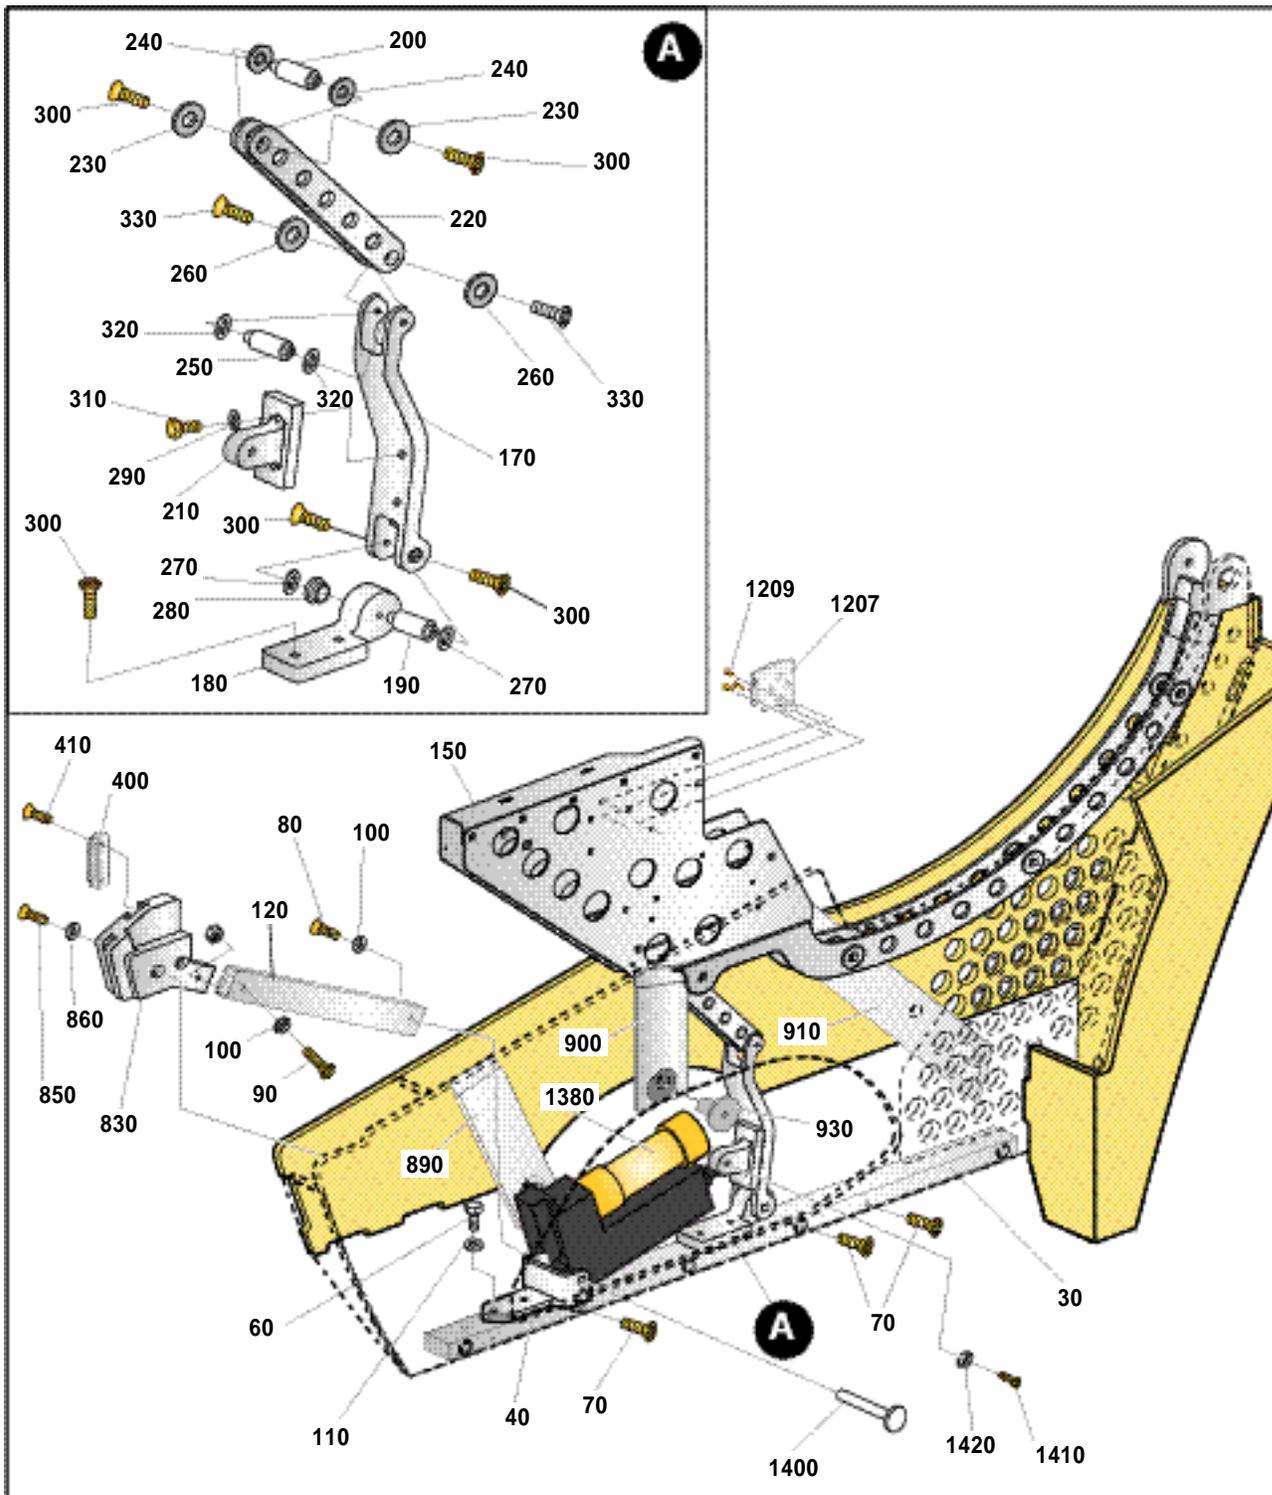


FIG. 3A (SHEET 3 OF 3) : ENDBAY ASSY, OUTBD RH



25-26-38

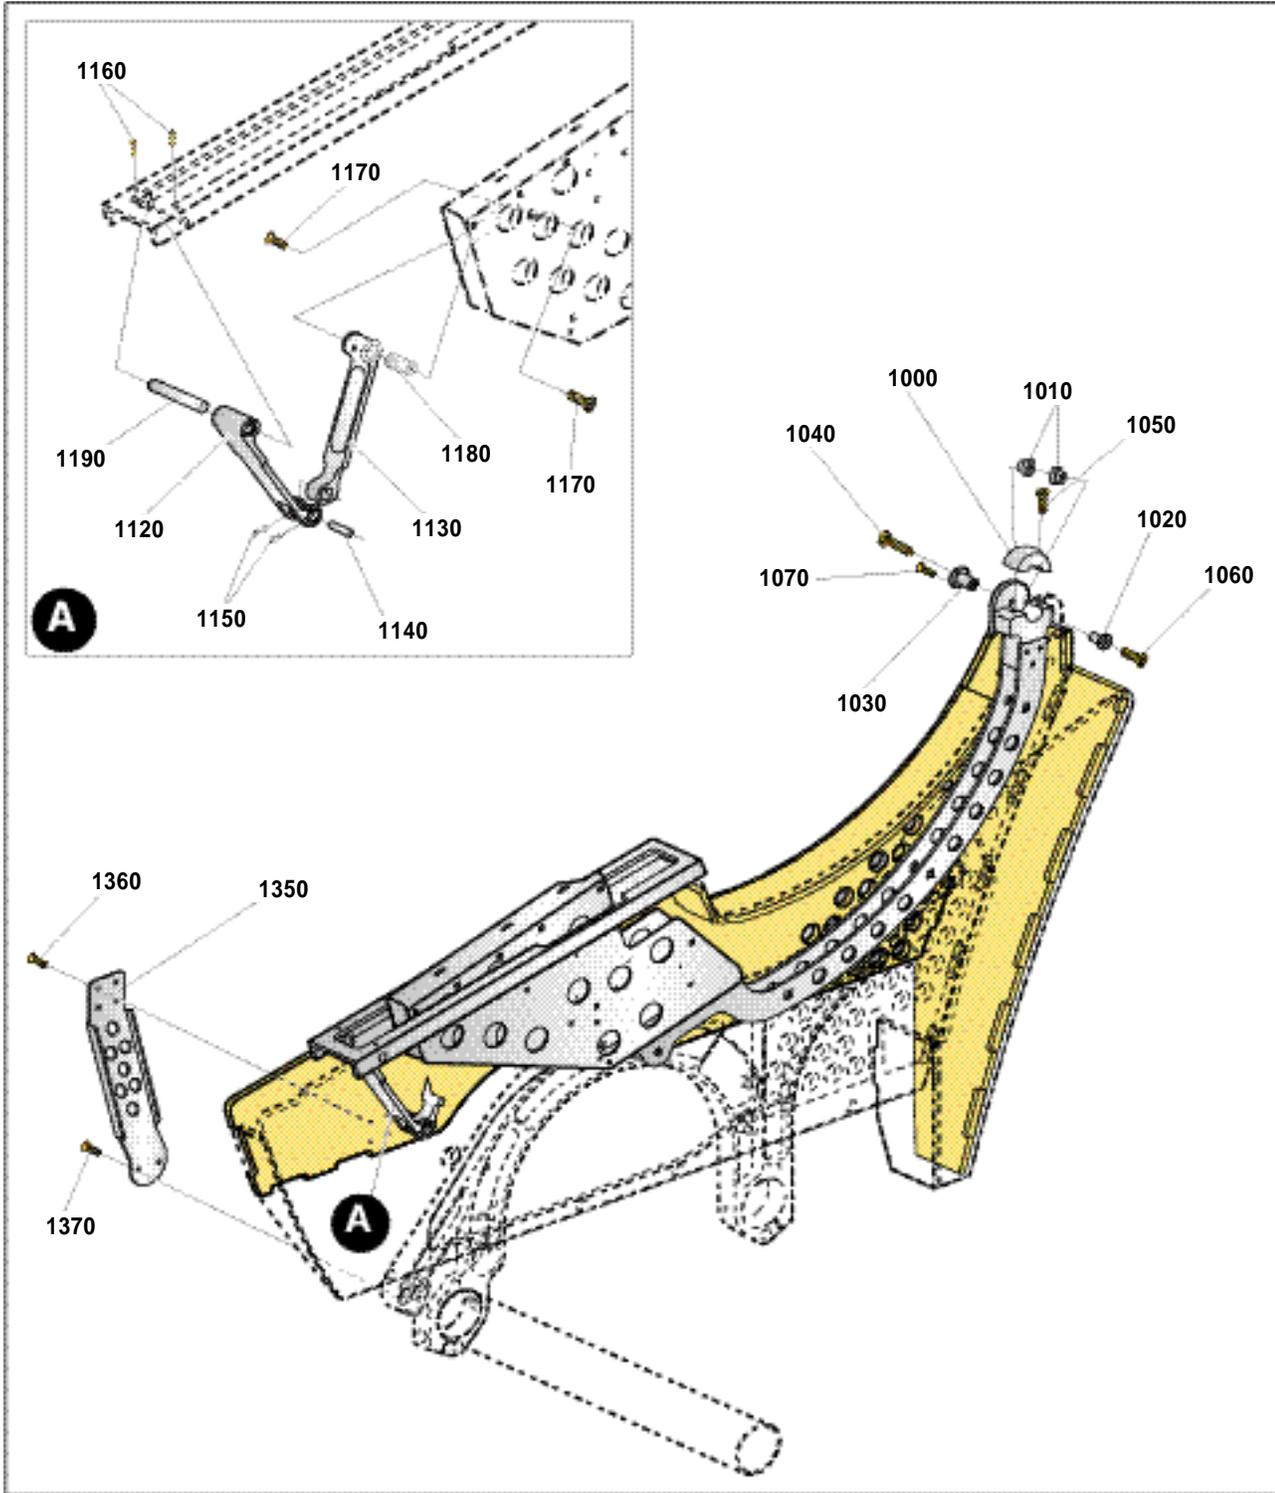

COMPONENT MAINTENANCE MANUAL
 AIRCRAFT PASSENGER SEAT
 SERIES"16NC(T)(0)(0)ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
3A				
1	3132430A00ZA	ENDBAY ASSY, OUTBD RH*	A	RF
- 1 A	3132429A00ZA	ENDBAY ASSY, OUTBD LH* *(See fig. 1 for det NHA)	B	RF
- 10	31324360002A	.ENDBAY ASSY, LOWER RH	A	1
- 10 A	31324350002A	.ENDBAY ASSY, LOWER LH	B	1
20	31324580002A	..FAIRING, RH	A	1
- 20 A	31324590002A	..FAIRING, LH	B	1
30	3127300A0000	..SUPPORT, ENDBAY RH	A	1
- 30 A	3127301A0000	..SUPPORT, ENDBAY LH	B	1
40	3127220A0000	..BRACKET, ACTUATOR ATTACHMENT		1
		Attaching parts		
- 50	NAS603-6P	..SCREW (A12001200000)		2
60	NAS428-3A7	..SCREW (A12005400000)		2
70	NAS603-13P	..SCREW (A12008400000)		5
80	AN4-10A	..SCREW (A13004300000)		1
90	AN3-5A	..SCREW (A13006700000)		1
100	AN960-416L	..WASHER (A13400700000)		1
110	AN960-10	..WASHER (A13400800000)		3
120	F11665600000	..REINFORCEMENT		1
- 130	MS24693C270	..SCREW (A11001100000) * * *		4
- 140	3132432A0000	.STRUCTURE ASSY, ENDBAY RH	A	1
- 140 A	3132431A0000	.STRUCTURE ASSY, ENDBAY LH	B	1
150	3132438A0000	..LEVER ASSY, UPPER ENDBAY RH	A	1
- 150 A	3132437A0000	..LEVER ASSY, UPPER ENDBAY LH	B	1
- 160	3127734A0000	..LEVER ASSY, ENDBAY RH	A	1
- 160 A	3127733A0000	..LEVER ASSY, ENDBAY LH	B	1
170	3127296C0000	...LEVER, SUPPORT LOWER RH	A	1
- 170 A	3127295C0000	...LEVER, SUPPORT LOWER LH	B	1
180	F116682A0000	...BRACKET, RH	A	1
- 180 A	F116683A0000	...BRACKET, LH	B	1
190	F11825400000	...PIVOT, ROTATION LOWER		1
200	F11825500000	...PIVOT, ROTATION UPPER		1
210	3127217A0000	...BRACKET		1
220	F11825200000	...ROD		1
		Attaching parts		

- Item not illustrated

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
3A				
230	F11628000000	...WASHER		4
240	F20746400000	...WASHER, NYLON		2
250	F11825600000	...PIVOT		1
260	F116280A0000	...WASHER		2
270	F20871100000	...WASHER, NYLON		2
280	F11825300000	...BUSHING		1
290	AN960-10	...WASHER (A13400800000)		2
300	MS24693C47	...SCREW (A11006900000)		4
310	NAS428K3-6	...SCREW (A12000600000)		2
320	F20502400000	...WASHER, TEFLON		2
330	MS24693C25	...SCREW (A11011300000)		2
		* * *		
- 340	3132434A00ZA	.ENDBAY ASSY, UPPER RH	A	1
- 340 A	3132433A00ZA	.ENDBAY ASSY, UPPER LH	B	1
- 350	3132462A00ZA	..ENDBAY, UPPER RH	A	1
- 350 A	3132463A00ZA	..ENDBAY, UPPER LH	B	1
- 360	3127308E0000	...STRUCTURE ASSY, ENDBAY RH	A	1
- 360 A	3127309E0000	...STRUCTURE ASSY, ENDBAY LH	B	1
- 370	3127306C0000FAIRING ASSY, RH	A	1
- 370 A	3127307C0000FAIRING ASSY, LH	B	1
	3128410A0000FAIRING, RH	A	1
- 380 A	3128411A0000FAIRING, LH	B	1
	F116316A0000GUIDE, RH	A	1
- 390 A	F116317A0000GUIDE, LH	B	1
	F11669100000GUIDE		1
		Attaching parts		
	410 MS24693C24SCREW (A11001300000)		2
	420 NAS601-5PSCREW (A12007300000)		4
		* * *		
	430 313247200000PLATE, UPPER RH	A	1
- 430 A	313247100000PLATE, UPPER LH	B	1
	440 3127250C0000HINGE, ARMCAP		2
	450 MS24693C2SCREW (A11003900000)		2
	460 MS24693C26SCREW (A11004400000)		8
	470 MS24693C46SCREW (A11018900000)		3
	480 F11729400000WASHER		3

- Item not illustrated

25-26-38



COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES"16NC(T)(O)(O)ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
3A				
490	31324680002A	...FAIRING, FWD RH	A	1
- 490 A	31324690002A	...FAIRING, FWD LH	B	1
500	3132464A00ZA	...FAIRING, INNER RH	A	1
- 500 A	3132465A00ZA	...FAIRING, INNER LH	B	1
510	K2092080002A	...FAIRING, OUTER RH	A	1
- 510 A	K2092090002A	...FAIRING, OUTER LH	B	1
520	3133290A00ZA	...FAIRING, HANDSET COMP. RH	A	1
- 520 A	3133291A00ZA	...FAIRING, HANDSET COMP. LH	B	1
		Attaching parts		
530	NAS602-4P	...SCREW (A12009400000)		2
540	MS24693C27	...SCREW (A11017000000)		2
550	NAS391B6P	...WASHER (A12400300000)		2
560	NAS601-6P	...SCREW (A12001500000)		2
- 570	MS51862-3	...SCREW (A11008200000)		1
- 580	A21600600000	...CLAMP, PLASTIC		4
		* * *		
- 590	3132460A00ZA	..SUPPORT, RELEASE PLATE RH	A	1
- 590 A	3132461A00ZA	..SUPPORT, RELEASE PLATE LH	B	1
600	3132904A00ZA	...COVER, RH	A	1
- 600 A	3132905A00ZA	...COVER, LH	B	1
610	K11294800000	...PLATE, FIXING RELEASE RH	A	1
- 610 A	K11294900000	...PLATE, FIXING RELEASE LH	B	1
- 620	MS20426B3-4	...RIVET (A11351400000)		3
630	3127272E00ZA	..ARMCAP, RH	A	1
- 630 A	3127271E00ZA	..ARMCAP, LH	B	1
640	MS24693C26	..SCREW (A11004400000)		2
650	MS24693C3	..SCREW (A11007700000)		1
660	NAS601-5P	..SCREW (A12007300000)		4
- 670	3126676F00QQ	.LEVER ASSY, "BACKREST"		1
680	F11687000001	..LEVER, ACTUATOR RELEASE		1
690	H20584300021	..SEATING, LEVER		1
- 700	K505348A00QQ	..PLACARD "BACKREST"		1
- 710	3126676G00QQ	.LEVER ASSY, "SEAT PAN"		1
720	F11687000001	..LEVER, ACTUATOR RELEASE		1
730	H20584300021	..SEATING, LEVER		1

- Item not illustrated

25-26-38

Page 1065

August 30, 2005



COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES"16NC(T)(0)(0)ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
3A				
- 740	K505349A00QQ	..PLACARD "SEAT PAN"		1
- 750	3126676H00QQ	.LEVER ASSY, "ARMREST"		1
760	F11687000001	..LEVER, ACTUATOR RELEASE		1
770	H20584300021	..SEATING, LEVER		1
- 780	K505350A00QQ	..PLACARD "ARMREST"		1
- 790	3126676L00QQ	.LEVER ASSY, "LEGREST"		1
800	F11687000001	..LEVER, ACTUATOR RELEASE		1
810	H20584300021	..SEATING, LEVER		1
- 820	K505351A00QQ	..PLACARD "LEGREST"		1
830	F208472C0000	.SLIDING BLOCK, OUTBD RH	A	1
- 830 A	F208473C0000	.SLIDING BLOCK, OUTBD LH	B	1
840	MS24693C27	.SCREW (A11017000000)		4
850	NAS428-3A7	.SCREW (A12005400000)		2
860	AN960-10	.WASHER (A13400800000)		2
- 870	3197394A0000	.KIT REINFORCMENT, ENDBAY RH	A	1
- 870 A	3197395A0000	.KIT REINFORCMENT, ENDBAY LH	B	1
880	313295400000	..FRAME, REINFORCMENT RH	A	1
- 880 A	313295500000	..FRAME, REINFORCMENT LH	B	1
890	F11683500000	..PLATE, REINFORCMENT LH	A	1
- 890 A	F11683600000	..PLATE, REINFORCMENT RH	B	1
900	F11683700000	..SHEET, REINFORCMENT LH	A	1
- 900 A	F11683800000	..SHEET, REINFORCMENT RH	B	1
910	F11683900000	..SHEET, REINFORCMENT REAR LH	A	1
- 910 A	F11684000000	..SHEET, REINFORCMENT REAR RH	B	1
- 920	F11683200000	..INSERT		1
930	F11683100000	..INSERT		2
940	DIN6799 D2.3	.CIRCLIP (A15402300000)		2
950	F11687100000	.PIVOT		2
- 960	F11759800000	.PIVOT		1
- 970	GFM-1012-09	.IGUS*BUSHING (B20013800000)		8
- 980	GFM-1820-11	.IGUS*BUSHING (B20013900000)		44
- 990	3197220C0000	.KIT INSTL.ROTATION, ENDBAY		1
1000	F116240A0000	..C CLAMP		1
1010	F20844900000	..BUSHING, ROTATION		2

- Item not illustrated

25-26-38



COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES"16NC(T)(0)(0)ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
3A				
1020	F11623300000	..PIVOT, ROTATION		1
1030	F116232A0000	..PIVOT		1
1040	B10008600000	..UBK 1/4-28x1"*BOLT		1
1050	NAS602-8P	..SCREW (A12002300000)		2
1060	MS24693S272	..SCREW (A11001400000)		1
1070	MS24693C46	..SCREW (A11018900000)		3
- 1080	MS24693C25	..SCREW (A11011300000)		3
- 1090	MS21209C0610	..HELICOIL (A11500200000)		3
- 1100	319823000000	.KIT STABILIZER, ENDBAY		1
- 1110	313328500000	..STABILIZER ASSY, ENDBAY		1
1120	313328600000	...LEVER, LOWER ENDBAY		1
1130	313328700000	...LEVER, UPPER ENDBAY		1
1140	F11821900000	...PIVOT		1
1150	AN565A6H3	...SCREW, SET (A13019600000)		1
1160	AN565A6H5	..SCREW, SET (A13002800000)		2
1170	MS24693S269	..SCREW (A11000800000)		2
1180	F11821800000	..PIVOT, LOWER ENDBAY		1
1190	F11822700000	..PIVOT, UPPER ENDBAY		1
- 1200	F11824000000	..WASHER		2
- 1205	319837800000	.KIT INSTL.CORD REEL, ENDBAY RH	A	1
- 1205 A	319837700000	.KIT INSTL.CORD REEL, ENDBAY LH	B	1
1207	K11463800000	..SUPPORT, PLATE	A	1
- 1207 A	K11463700000	..SUPPORT, PLATE	B	1
1209	MS24693C3	..SCREW (A11007700000)		3
- 1210	3132420A00ZA	...CONTROL PANEL, OUTBD RH*	C	RF
- 1210 A	3132419A00ZA	...CONTROL PANEL, OUTBD LH*	D	RF
		*(See fig. 1 for det NHA)		
1220	3132410A00ZAKEYBOARD, RH	C	1
- 1220 A	3132409A00ZAKEYBOARD, LH	D	1
1230	31324150002ASUPPORT, PLATE FWD		1
1240	3132412A00ZAFRAME, CONTROL PANEL RH	C	1
- 1240 A	3132411A00ZAFRAME, CONTROL PANEL LH	D	1
1250	313264900000SWITCH HARNESS SGL		1
- 1260	313216000001SCREW, PAINTED		5
- 1270	NAS679A04NUT (A12201600000)		5
1280	K20917000000GASKET, CONTROL PANEL		1
1290	NAS601-6PSCREW (A12001500000)		4

- Item not illustrated

25-26-38

Page 1067

August 30, 2005

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
3A				
- 1300	192-5174RS*CLAMP (B0B180100000)		4
- 1310	3197221A0000	.KIT INSTL ENDBAY (See fig. 1 for det NHA)	E	RF
1320	B10008600000	..UBK 1/4-28x1"*BOLT		2
1330	B10014200000	..UBK 1/4-28x1/2"*BOLT		2
- 1340	3198229A0000	.KIT REINFORCEMENT, ENDBAY OUTBD (See fig. 1 for det NHA)	F	RF
1350	K11475200000	..REINFORCEMENT		1
1360	MS24693C269	..SCREW (A11006800000)		4
1370	MS24693C270	..SCREW (A11001100000)		2
1380	PS5-21530-01	...PLP*ACTUATOR, FOOT/ARMR(B0037220*	G	RF
- 1390	3197222C0000	.KIT INSTL.ACTUATOR, ENDBAY* *(See fig. 1 for det NHA)	H	RF
1400	F116244A0000	..PIVOT, REAR		1
1410	NAS603-4P	..SCREW (A12009100000)		1
1420	AN960-416	..WASHER (A13400200000)		1

- Item not illustrated

25-26-38



COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES "16NC(T)(O)(O)ZA" FOR B767-300


THIS PAGE INTENTIONALLY LEFT BLANK

25-26-38

Page 1069

August 30, 2005

FIG. 3B (SHEET 1 OF 3): ENDBAY ASSY, AISLE LH SGL SEAT

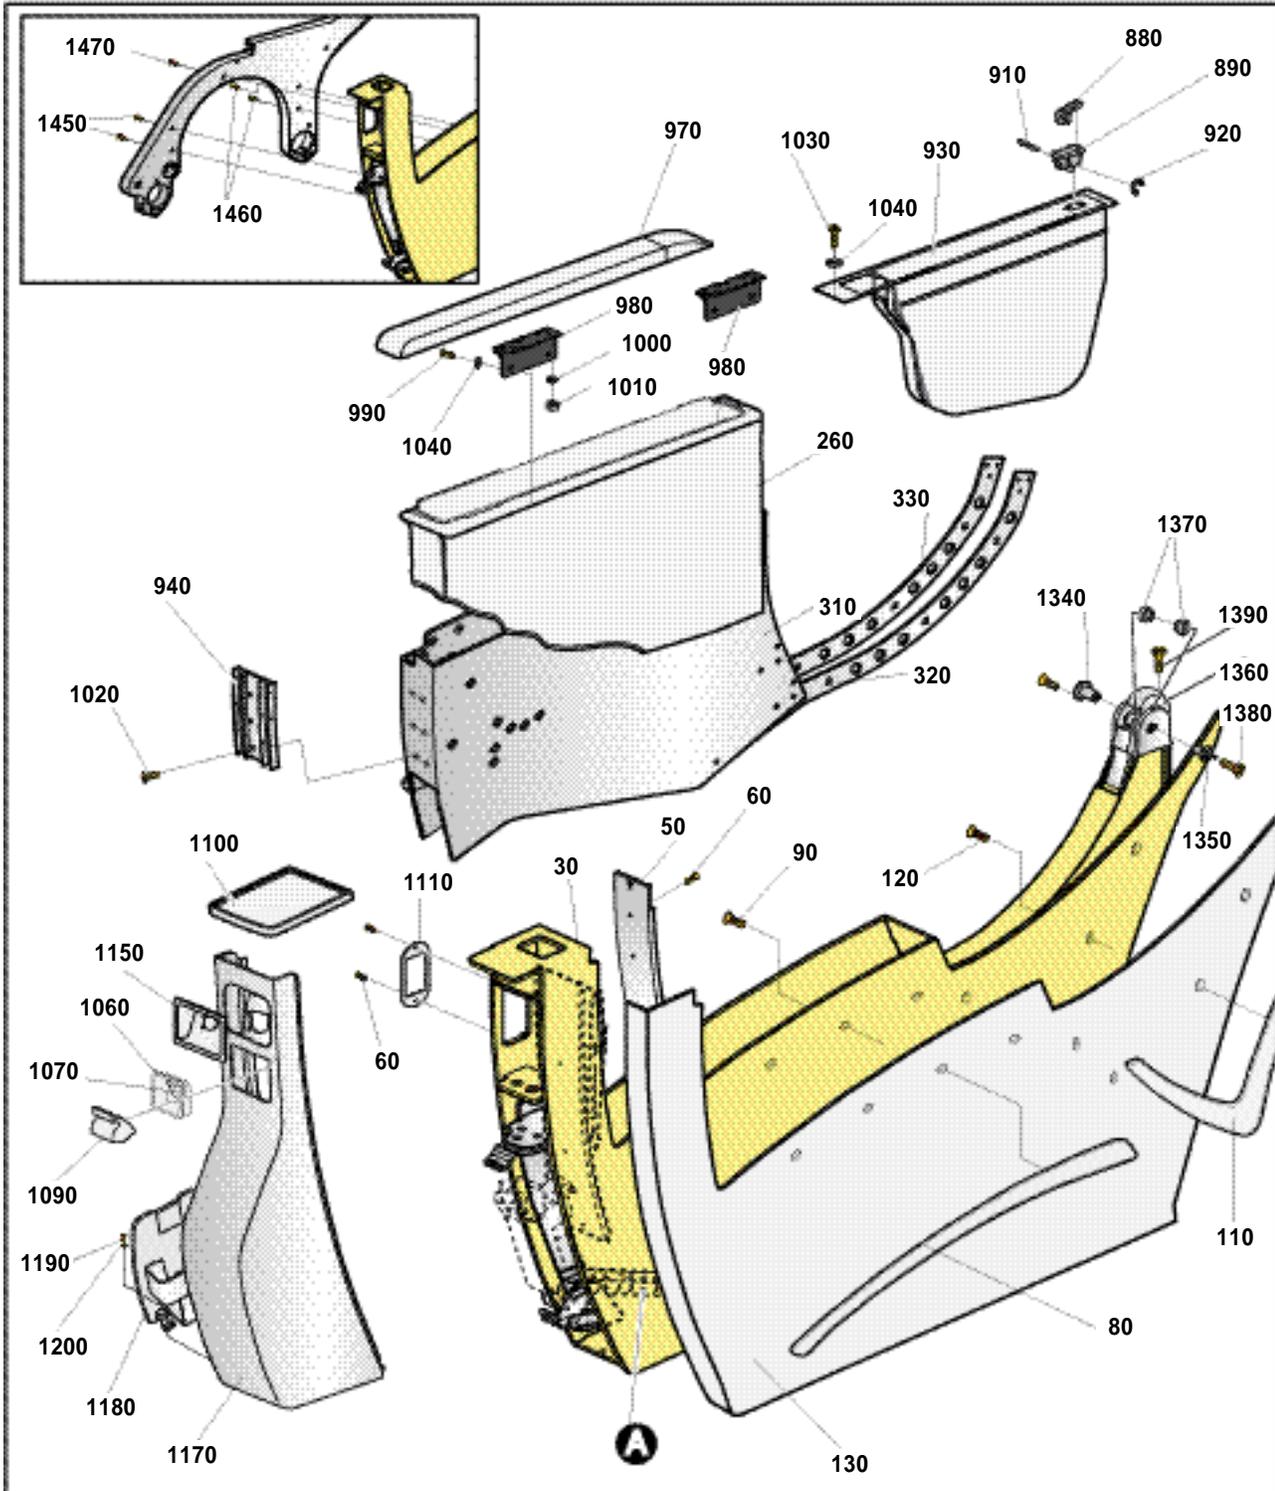

25-26-38

FIG. 3B (SHEET 2 OF 3) : ENDBAY ASSY, AISLE LH SGL SEAT


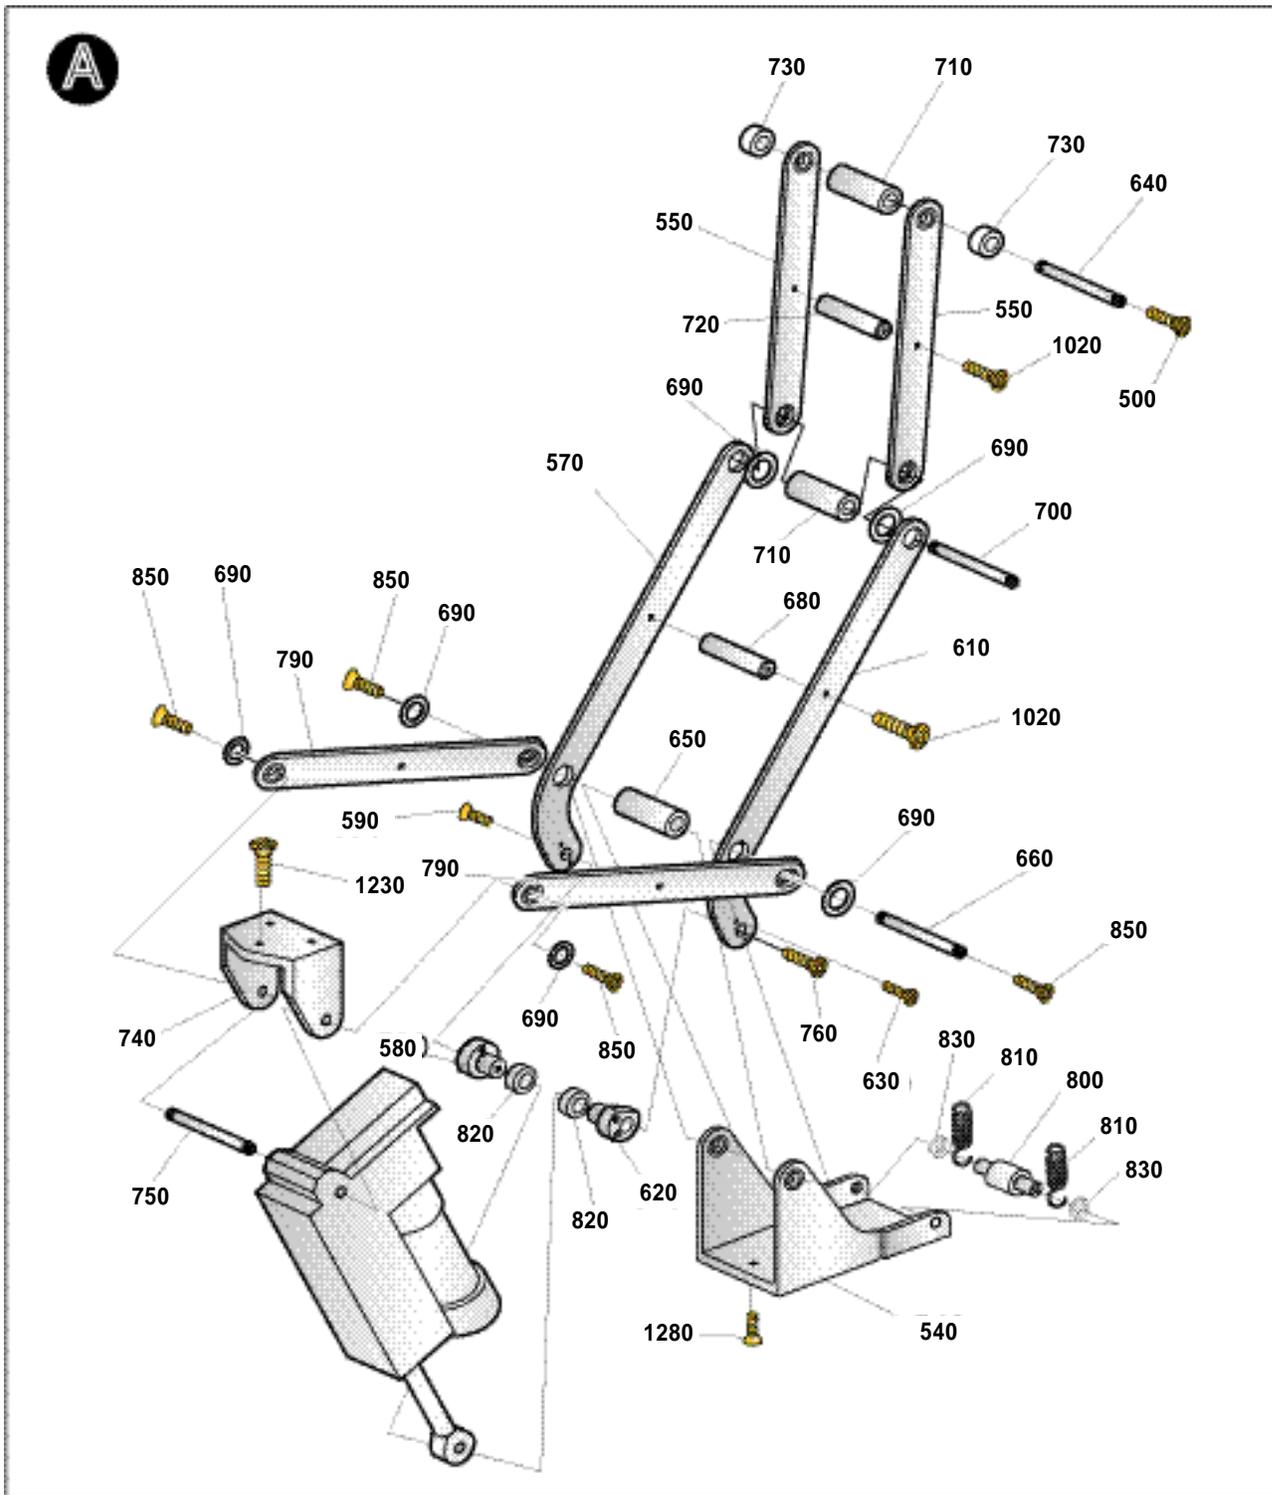


FIG. 3B (SHEET 3 OF 3) : ENDBAY ASSY, AISLE LH SGL SEAT



25-26-38

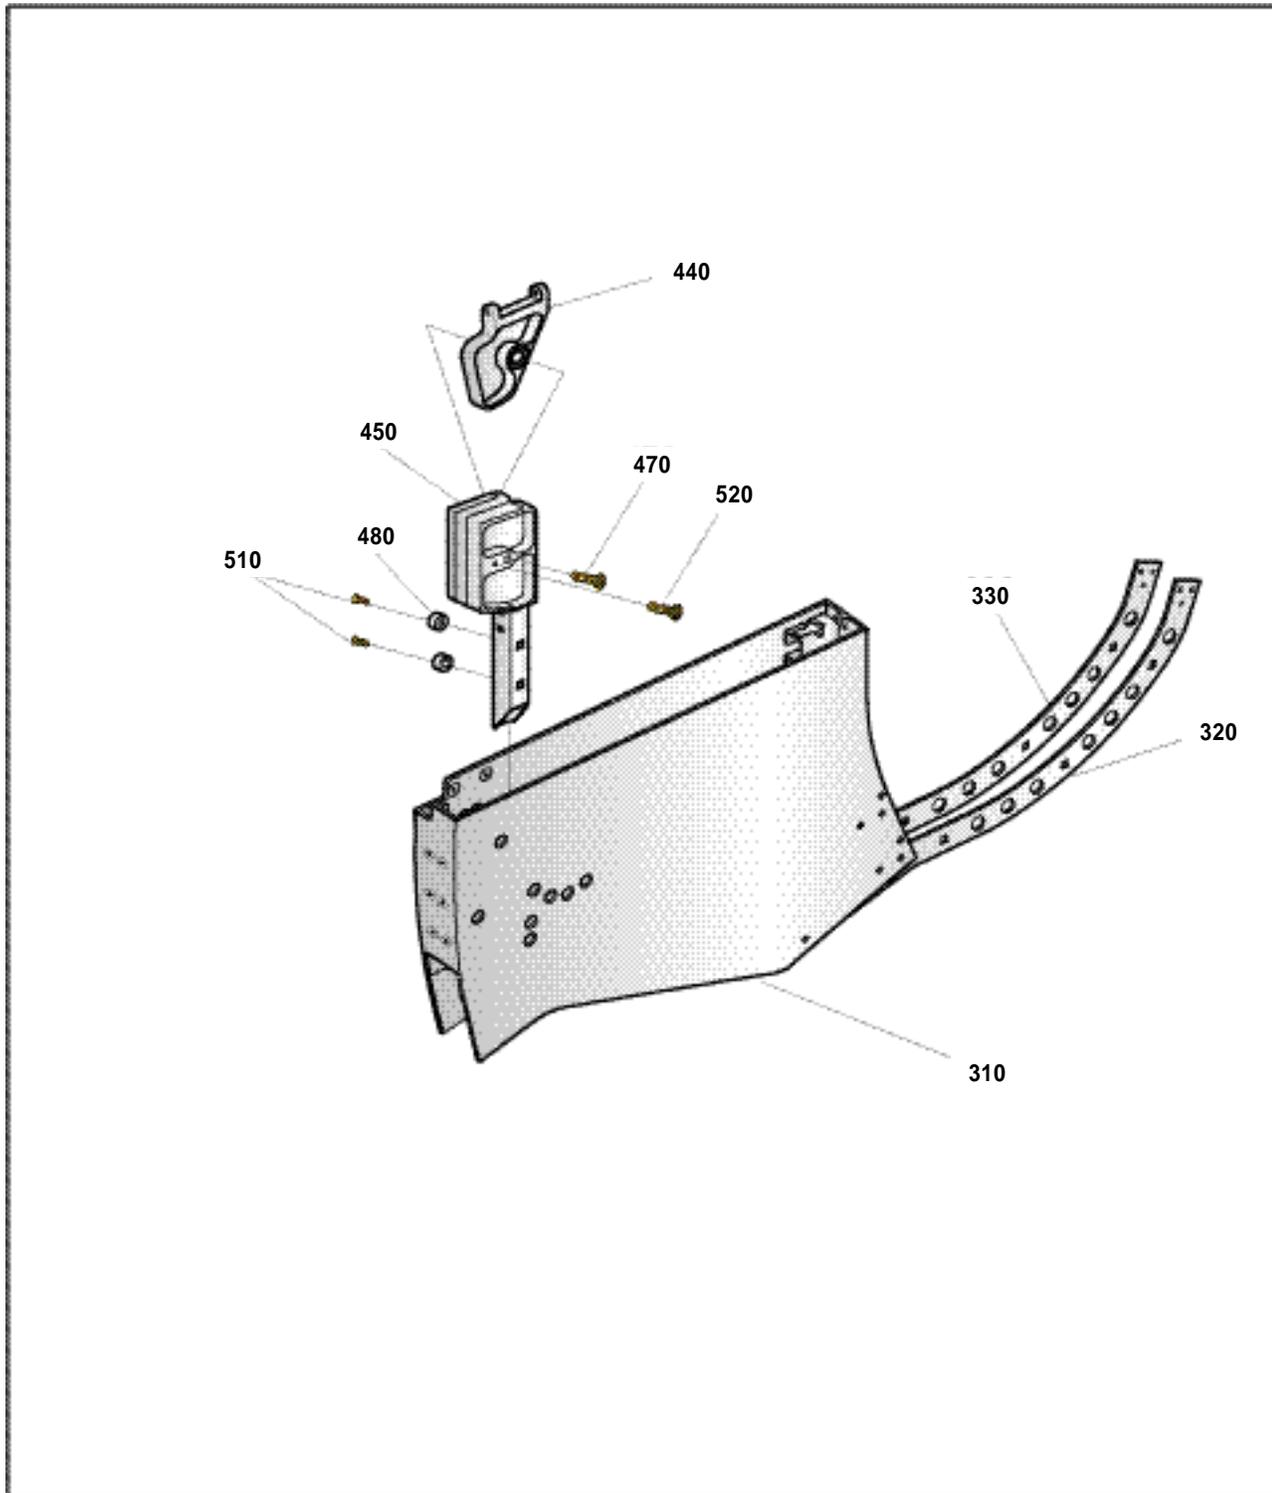

COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES"16NC(T)(0)(0)ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
3B				
1	3134920000ZA	ENDBAY ASSY,AISLE LH SGL SEAT (See fig. 1A for det NHA)	A	RF
- 10	3134699000ZA	.ENDBAY ASSY, LOWER LH		1
- 20	3134696000ZA	..ENDBAY ASSY		1
30	31346950002A	...ENDBAY, LOWER		1
- 40	31346970002P	...COVER		1
50	3129564A0000	...GUIDE, FWD		1
60	MS24693C26	...SCREW (A11004400000)		12
- 70	3134694A002A	..BUMPER ASSY, LATERAL FWD		1
80	3134702A002A	...BUMPER, LATERAL FWD		1
90	MS24693C23	...SCREW (A11012000000)		5
- 100	31346980002A	..BUMPER ASSY, LATERAL REAR		1
110	31347010002A	...BUMPER, LATERAL REAR		1
120	MS24693C23	...SCREW (A11012000000)		4
130	K2092770002A	..FAIRING, ENDBAY		1
- 140	F20840100000	..SPACER, COCKTAIL TABLE		1
- 150	DM02337-1	..PLUG		1
- 160	B10084700000	..SUPPORT, SPRING		1
- 170	MS24693C24	..SCREW (A11001300000)		1
- 180	NAS1169-C6L	..WASHER (A12400800000)		1
- 190	MS24693C26	..SCREW (A11004400000)		1
- 200	MS24693C31	..SCREW (A11004700000)		2
- 210	MS24693C23	..SCREW (A11012000000)		2
- 220	NAS600-4P	..SCREW (A12002100000)		2
- 230	AN960-PD4L	..WASHER 8A13401400000)		2
- 240	3129524N00ZA	.ENDBAY ASSY, UPPER		1
- 250	3129532M00ZA	..FAIRING ASSY, ENDBAY		1
260	3129518A002A	...FAIRING ASSY		1
- 285	31349190002P	...COVER		1
- 290	3129528F0000	...ARMREST ASSY, UPPER RH		1
- 300	3129522F0000	...ARMREST, UPPER RH		1
310	312951600000STRUCTURE, UPPER RH		1
320	F11737500000LEVER, ARMREST LH		1
330	F11737600000LEVER, ARMREST RH		1
340	3128310C0000TERMINAL, LEVER ARMREST RH		1

- Item not illustrated

25-26-38

Page 1073

August 30, 2005



COMPONENT MAINTENANCE MANUAL
 AIRCRAFT PASSENGER SEAT
 SERIES"16NC(T)()()ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
3B				
- 350	F11641900000SPACER		3
- 360	F11628000000WASHER		6
- 370	F20891100000SPACER		3
- 380	F20891200000SPACER		6
- 390	F116658A0000PIVOT, ROTATION		3
- 400	MS24693C24SCREW (A11001300000)		8
- 410	MS24693C48SCREW (A11001200000)		6
- 420	MS24693C50SCREW (A11004900000)		6
440	312918500000	...SUPPORT, JOINT		1
450	312953300000	...SUPPORT, ROTATION LH		1
- 460	312995000000	...SUPPORT, ROTATION TABLE RH		1
470	F114334A0000	...SCREW		1
480	F20910500000	...SPACER		2
- 490	F11751900000	...SUPPORT		1
500	MS24693C50	...SCREW (A11004900000)		2
510	MS24693C54	...SCREW (A11008700000)		2
520	NAS602-6P	...SCREW (A12002200000)		1
- 530	3131998A0000	...LEVER ASSY, ARMREST RH		1
540	313199700000SUPPORT, LOWER		1
550	312954400000LEVER		2
- 560	313200100000LEVER ASSY, LOWER		1
570	312954700000LEVER, LOWER		1
580	313200500000SPACER		1
590	MS24693C4SCREW (A11004000000)		2
- 600	313200300000LEVER ASSY, LOWER		1
610	312954500000LEVER, LOWER		1
620	F20951900000SPACER		1
630	MS24693C26SCREW (A11004400000)		2
640	F116658A0000PIVOT, ROTATION		1
650	F20910300000SPACER L=40		1
660	F117497A0000PIVOT		1
- 670	DIN6799 D=6CIRCLIP (A15402800000)		4
680	312954200000PIVOT		1
690	F20892300000WASHER		4
700	F11733800000PIVOT		1
710	F20892200000SPACER L=33		2
720	312954300000PIVOT, SHORT		1
730	F20910400000SPACER L=7		2

- Item not illustrated

25-26-38



COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES"16NC(T)(0)(0)ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
3B				
740	3129552A0000SUPPORT		1
750	F117486C0000PIVOT		1
760	NAS517-4-15SCREW (A12011000000)		1
- 770	NAS601-15PSCREW (A12011100000)		4
- 780	DIN6799 D=4CIRCLIP (A15405200000)		2
790	K11439100000LEVER		2
800	313200600000PIVOT		1
810	K11436500000SPRING		2
820	F20952100000SPACER L=5.5		2
830	F20952000000SPACER L=8.5		2
- 840	AN960-6WASHER (A13401200000)		2
850	NAS601-5PSCREW (A12007300000)		2
- 860	MS24693C25SCREW (A11011300000)		2
- 870	3126676H00QQ	..LEVER ASSY, "ARMREST"		1
880	F11687000001	...LEVER, ACTUATOR RELEASE		1
890	H20584300021	...SEATING, LEVER		1
- 900	K505350A00QQ	...PLACARD "ARMREST"		1
910	F11687200000	..PIVOT		1
920	DIN6799 D2.3	..CIRCLIP (A15402300000)		1
930	31295200002A	..FAIRING, TABLE COMPARTMENT RH		1
940	F11747900000	..GUIDE, FWD		1
- 960	K505370A00ZA	..PLACARD "LIFT"		1
970	3129538C00ZA	..ARMCAP, RH		1
980	313346500000	..HINGE		2
990	MS24693C24	..SCREW (A11001300000)		4
1000	AN960-6	..WASHER (A13401200000)		4
1010	MS21083N06	..NUT (A11201800000)		4
1020	MS24693C26	..SCREW (A11004400000)		8
1030	MS24693C28	..SCREW (A11004500000)		1
1040	NAS1169-C6L	..WASHER (A12400800000)		5
- 1050	31195910002A	..ASHTRAY ASSY		1
1060	H2056730002A	..FAIRING		1
1070	K11097400000	..SPRING		1
- 1080	B10008300000	..CAT POP TAP/K42*RIVET		2

- Item not illustrated

25-26-38

Page 1075

August 30, 2005



COMPONENT MAINTENANCE MANUAL
 AIRCRAFT PASSENGER SEAT
 SERIES"16NC(T)()()ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
3B				
1090	H2056720002A	.ASHTRAY		1
1100	31342300002A	.COCKTAIL TABLE		1
1110	F11858800000	.FRAME, PCU		1
- 1120	K11294500000	.PLATE, REAR LH		1
- 1130	313292300000	.GUIDE, INNER TABLE LH		1
- 1140	K11349700000	.SUPPORT, PCU		1
1150	K2092760002A	.FAIRING, OUTLET		1
- 1160	3134659000ZA	.ESCUTCHEON ASSY, FWD		1
1170	3134660000ZA	..ESCUTCHEON		1
1180	3134642000ZA	..DOOR, LATERAL RH		1
		Attaching parts		
1190	NAS601-5P	..SCREW (A12007300000)		4
1200	MS35335-30	..WASHER (A11404000000)		4
		* * *		
1210	MS24693C24	.SCREW (A11001300000)		6
1220	MS24693C28	.SCREW (A11004500000)		6
1230	MS24693C30	.SCREW (A11004600000)		3
1240	MS24693C31	.SCREW (A11004700000)		2
1250	MS51958-64	.SCREW (A11019400000)		2
1260	NAS601-4P	.SCREW (A12000200000)		2
1270	NAS600-6P	.SCREW (A12007500000)		6
1280	NAS602-10P	.SCREW (A12008600000)		6
1290	AN3-5A	.SCREW (A13006700000)		2
1300	AN960-10	.WASHER (A13400800000)		2
1310	NAS1096-2-12	.SCREW (A12025100000)		3
1320	NAS602-12P	.SCREW (A12008700000)		2
- 1330	3197220A0000	.KIT INSTL. ROTATION, ARMREST CNT		1
1340	312830300000	..PIVOT, LEVER ARMREST		1
1350	F11623300000	..PIVOT, ROTATION		1
1360	F11624000000	..C CLAMP		1
1370	F11623400000	..BUSHING, ROTATION		2
1380	B10008600000	..UBK 1/4-28x1"*BOLT		1
1390	NAS602-8P	..SCREW (A12002300000)		2
1400	MS24693C49	..SCREW (A11009700000)		3
1410	MS24693S272	..SCREW (A11001400000)		1
- 1420	MS24693C25	..SCREW (A11011300000)		6

- Item not illustrated

25-26-38

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
3B				
- 1430	A11500200000	..HELICOIL (A11500200000)		6
- 1440	319839100000	.KIT INSTL. ENDBAY (See fig. 1A for det NHA)	B	RF
1450	B10008500000	..UBK 1/4-28X 3/4"*BOLT		2
1460	B10008600000	..UBK 1/4-28x1"*BOLT		2
1470	B10042200000	..UBK 1/4-28x3/8"*BOLT		1

- Item not illustrated



COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES"16NC(T)()()ZA" FOR B767-300

THIS PAGE INTENTIONALLY LEFT BLANK

25-26-38

Page 1078

August 30, 2005

FIG. 4 (SHEET 1 OF 2) : ARMREST ASSY, CNT


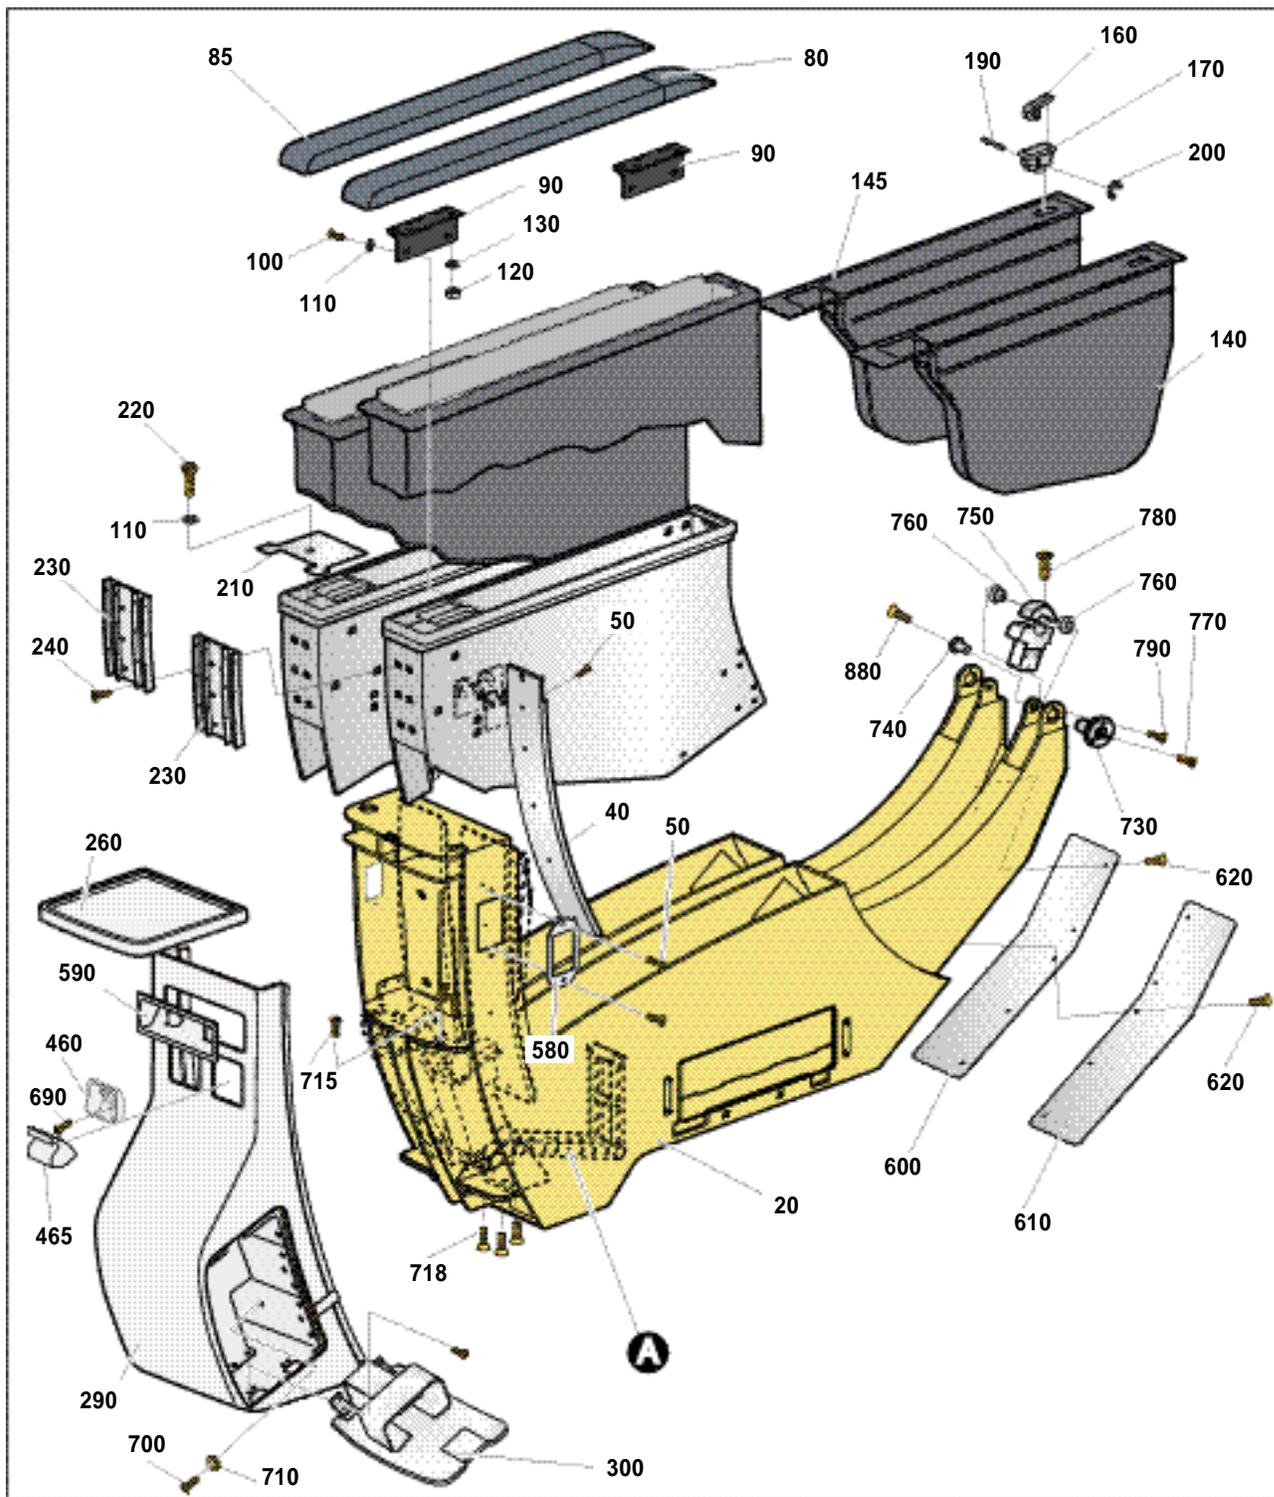


FIG. 4 (SHEET 2 OF 2) : ARMREST ASSY, CNT

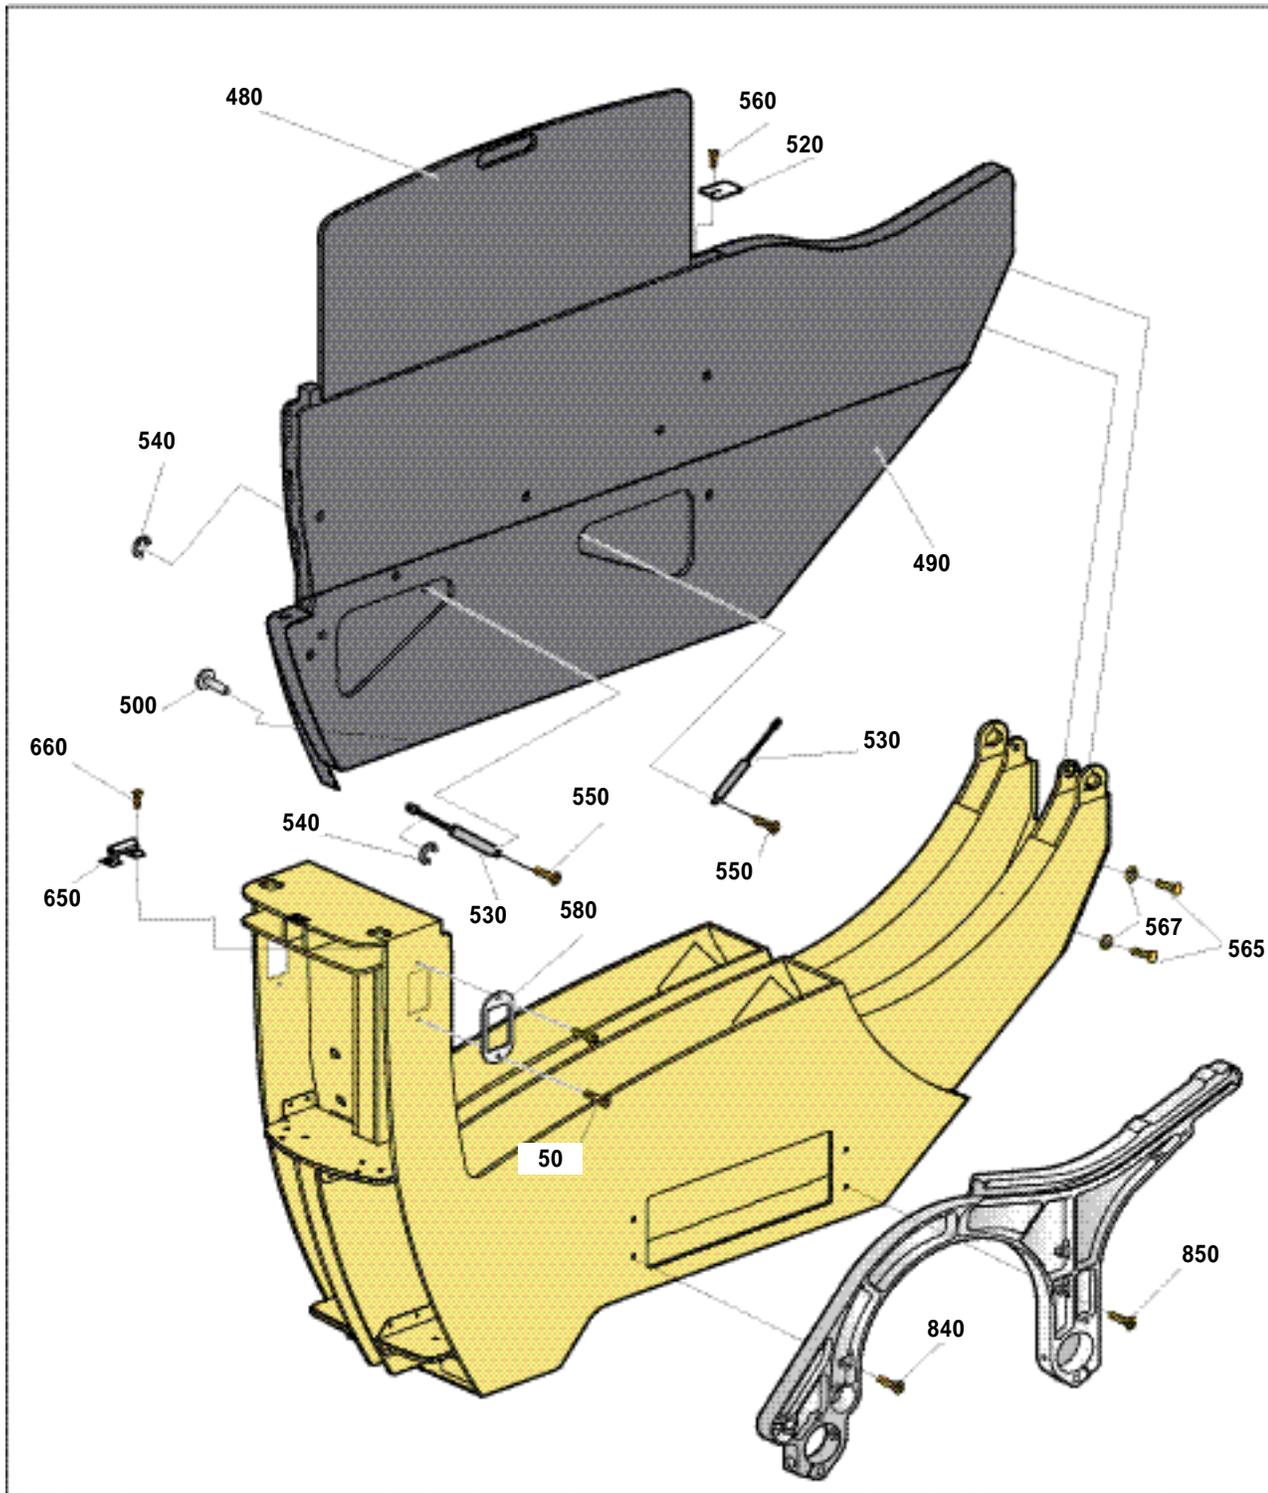

25-26-38

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
4				
1	3134209000ZA	ARMREST ASSY, CNT (See fig. 1 for det NHA)	A	RF
- 10	3134210000ZA	.ARMREST ASSY, LOWER		1
20	31342110002A	..STRUCTURE		1
- 30	31342120002P	..COVER		1
40	3129564A0000	..GUIDE, FWD		2
50	MS24693C26	..SCREW (A11004400000)		12
- 60	3129523M00ZA	.ARMREST ASSY, UPPER LH		1
- 60 A	3129524M00ZA	.ARMREST ASSY, UPPER RH		1
70	3129531M00ZA	..STRUCTURE ASSY, UPPER LH*		1
75	3129532L00ZA	..STRUCTURE ASSY, UPPER RH* *(See fig. 4A for det BKDN)		1
80	3129539C00ZA	..ARMCAP, LH		1
85	3129538C00ZA	..ARMCAP, RH		1
90	313346500000	..HINGE		2
100	MS24693C24	..SCREW (A11001300000)		4
110	NAS1169-C6L	..WASHER (A12400800000)		5
120	MS21083N06	..NUT (A11201800000)		4
130	AN960-6	..WASHER (A13401200000)		4
140	31295190002A	..FAIRING, TABLE COMPARTMENT LH		1
145	31295200002A	..FAIRING, TABLE COMPARTMENT RH		1
- 150	3126676H00QQ	..LEVER ASSY, "ARMREST"		1
160	F11687000001	...LEVER, ACTUATOR RELEASE		1
170	H20584300021	...SEATING, LEVER		1
- 180	K505350A00QQ	...PLACARD "ARMREST"		1
190	F11687200000	..PIVOT		1
200	DIN6799 D2.3	..CIRCLIP (A15402300000)		1
210	K11298700000	..PLATE, LH		1
- 210 A	K11298600000	..PLATE, RH		1
220	MS24693C28	..SCREW (A11004500000)		1
230	F11747900000	..GUIDE, FWD		1
240	MS24693C26	..SCREW (A11004400000)		8
- 250	K505370A00ZA	..PLACARD "LIFT"		1
260	31342200002A	.COCKTAIL TABLE		1

- Item not illustrated

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
4				
- 270	F20840100000	.SPACER, COCKTAIL TABLE		1
- 280	3134640000ZA	.ESCUTCHEON ASSY, FWD		1
290	3134641000ZA	..ESCUTCHEON, FWD		1
300	3134643000ZA	..DOOR, LATERAL LH		1
- 300 A	3134642000ZA	..DOOR, LATERAL RH		1
		Attaching parts		
- 310	MS24693S26	..SCREW (A11000400000)		4
- 320	MS24693C24	..SCREW (A11001300000)		4
- 330	MS24693C52T	..SCREW (A11002200000)		1
- 340	MS24693S7	..SCREW (A11002300000)		2
- 350	MS24693C26	..SCREW (A11004400000)		4
- 360	MS24693C28	..SCREW (A11004500000)		1
- 370	MS21083N06	..NUT (A11201800000)		4
- 380	NAS601-8P	..SCREW (A12001400000)		2
- 390	NAS1169-C8L	..WASHER (A12400700000)		1
- 400	NAS1169-C6L	..WASHER (A12400800000)		1
- 410	AN960-4	..WASHER (A13401000000)		2
- 420	AN960-6	..WASHER (A13401200000)		2
- 430	B10084700000	..CLAMP, ESCUTCHEON ATTACHMENT * * *		2
440	313292400000	.GUIDE, INNER TABLE RH		1
450	313292300000	.GUIDE, INNER TABLE LH		1
- 460	31195910002A	.ASHTRAY ASSY		2
462	H2056730002A	..FAIRING		2
463	K11097400000	..SPRING		2
		Attaching parts		
- 464	B10008300000	..CAT POP TAP/K42*RIVET * * *		4
465	H2056720002A	.ASHTRAY		2
- 470	3133277000ZA	.PRIVACY ASSY		1
480	31295970002P	..PRIVAY, MOVABLE		1
490	31332720002P	..PRIVACY, FIXED		1
500	F11736800000	..PIVOT, FWD		2

- Item not illustrated

25-26-38



COMPONENT MAINTENANCE MANUAL
 AIRCRAFT PASSENGER SEAT
 SERIES"16NC(T)(O)(ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
4				
- 510	F11751100000	..PIVOT, REAR		2
520	F11750100001	..PLATE		2
530	452170MEPLE2	..IGS**GAS ACTUATOR (B0A208500000) Attaching parts		2
540	DIN6799 D2.3	..CIRCLIP (A15402300000)		4
550	NAS603-10P	..SCREW (A12001300000)		2
560	MS24693C28	..SCREW (A11004500000)		4
- 565	MS24693C270	.SCREW (A11001100000)		3
- 567	NAS1169-C8L	.WASHER (A12400700000) * * *		3
- 570	K11349700000	.SUPPORT, PCU		2
580	F11858800000	.FRAME, PCU		2
590	K2092710002A	.FAIRING, OUTLET		1
600	K11294600000	.PLATE, REAR RH		1
610	K11294500000	.PLATE, REAR LH		1
620	MS24693C24	.SCREW (A11001300000)		6
- 630	MS24693C28	.SCREW (A11004500000)		6
- 640	MS51958-64	.SCREW (A11019400000)		2
650	B10084700000	.SUPPORT, SPRING		2
660	MS24693C31	.SCREW (A11004700000)		4
- 670	MS24693C30	.SCREW (A11004600000)		6
- 680	NAS600-6P	.SCREW (A12007500000)		6
690	NAS602-10P	.SCREW (A12008600000)		6
700	AN3-5A	.SCREW (A13006700000)		2
710	AN960-10	.WASHER (A13400800000)		2
715	NAS602-12P	.SCREW (A12008700000)		4
718	NAS1096-2-12	.SCREW (A12025100000)		6
- 720	3197220A0000	.KIT INSTL. ROTATION, ARMREST CNT		2
730	312830300000	..PIVOT, LEVER ARMREST		2
740	F11623300000	..PIVOT, ROTATION		2
750	F11624000000	..C CLAMP		2
760	F11623400000	..BUSHING, ROTATION		4
770	B10008600000	..UBK 1/4-28x1" *BOLT		2
780	NAS602-8P	..SCREW (A12002300000)		4
790	MS24693C49	..SCREW (A11009700000)		6
800	MS24693S272	..SCREW (A11001400000)		2
- 810	MS24693C25	..SCREW (A11011300000)		12

- Item not illustrated

25-26-38

Page 1083

August 30, 2005

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
4				
- 820	MS21209C0610	..HELICOIL (A11500200000)		12
- 830	319844400000	.KIT INSTL. ARMREST CNT (See fig. 1 for det NHA)		RF
840	B10008500000	..UBK 1/4-28X 3/4"*BOLT		2
850	B10008600000	..UBK 1/4-28X1"*BOLT		2

- Item not illustrated

25-26-38

FIG. 4A (SHEET 1 OF 2): UPPER STRUCTURE, CNT ARMREST


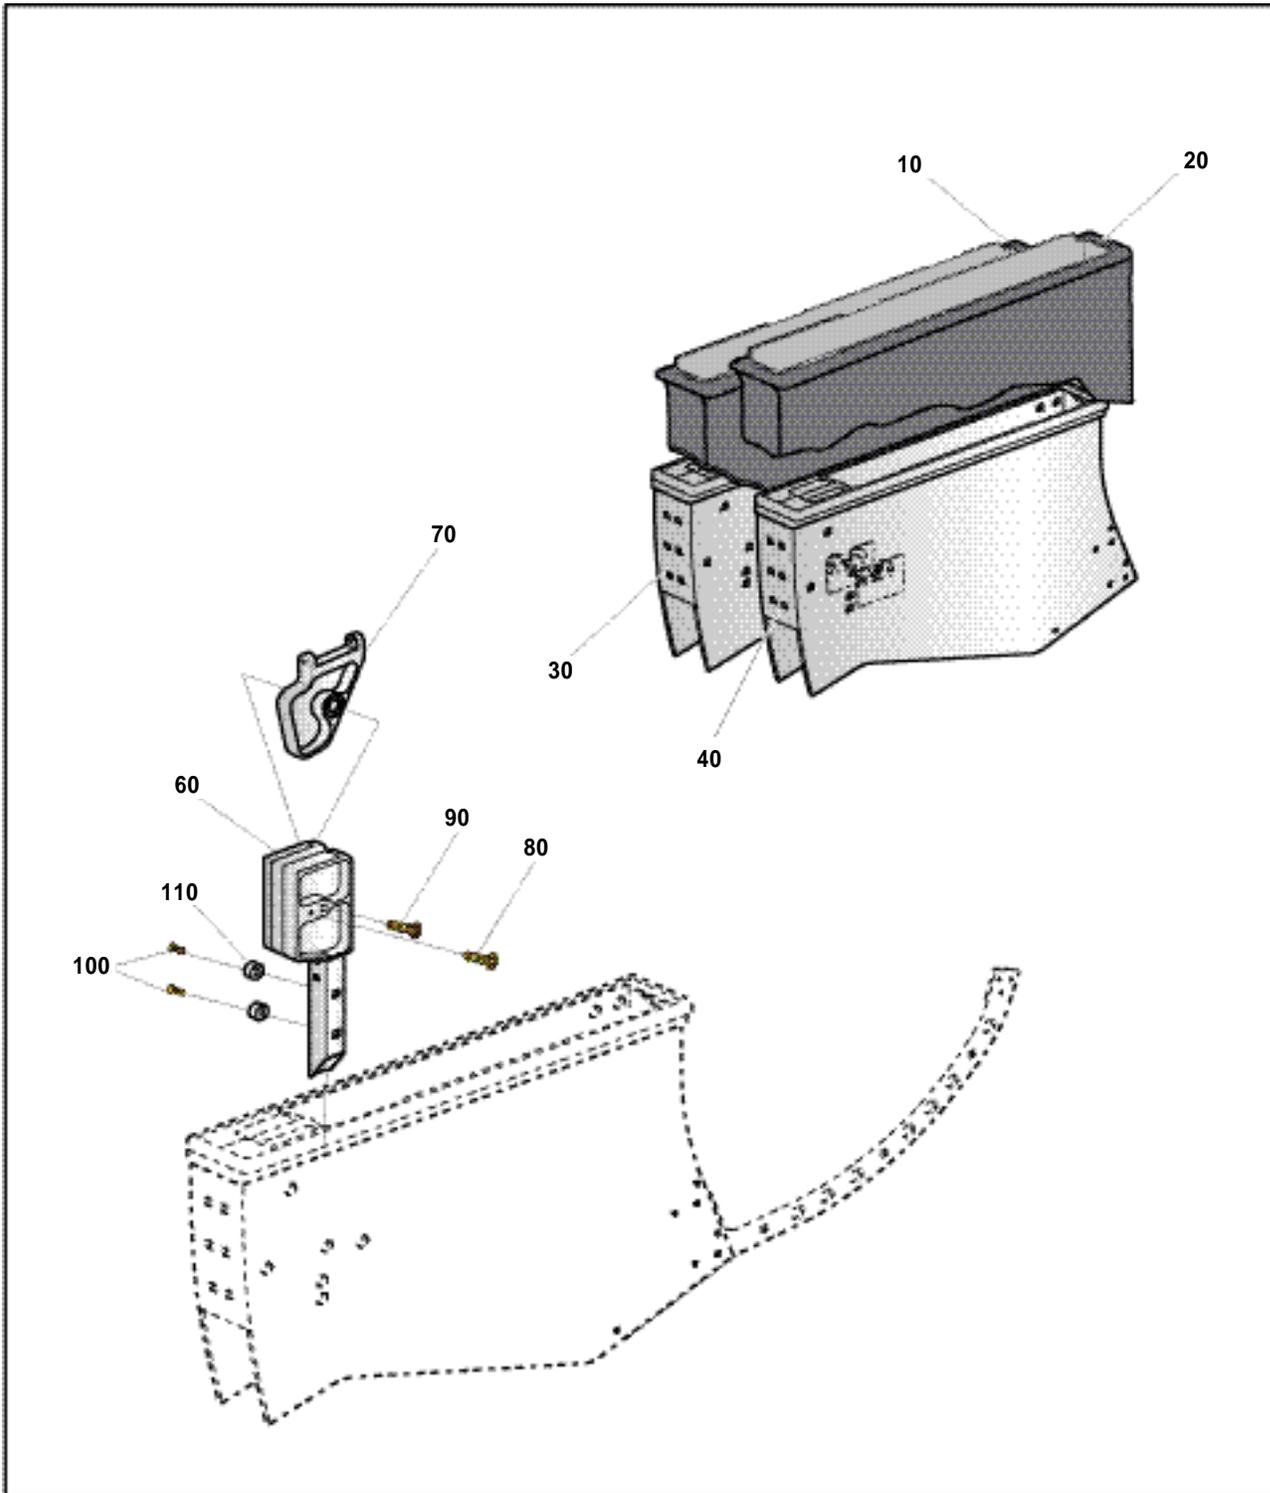


FIG. 4A (SHEET 2 OF 2) : UPPER STRUCTURE, CNT ARMREST

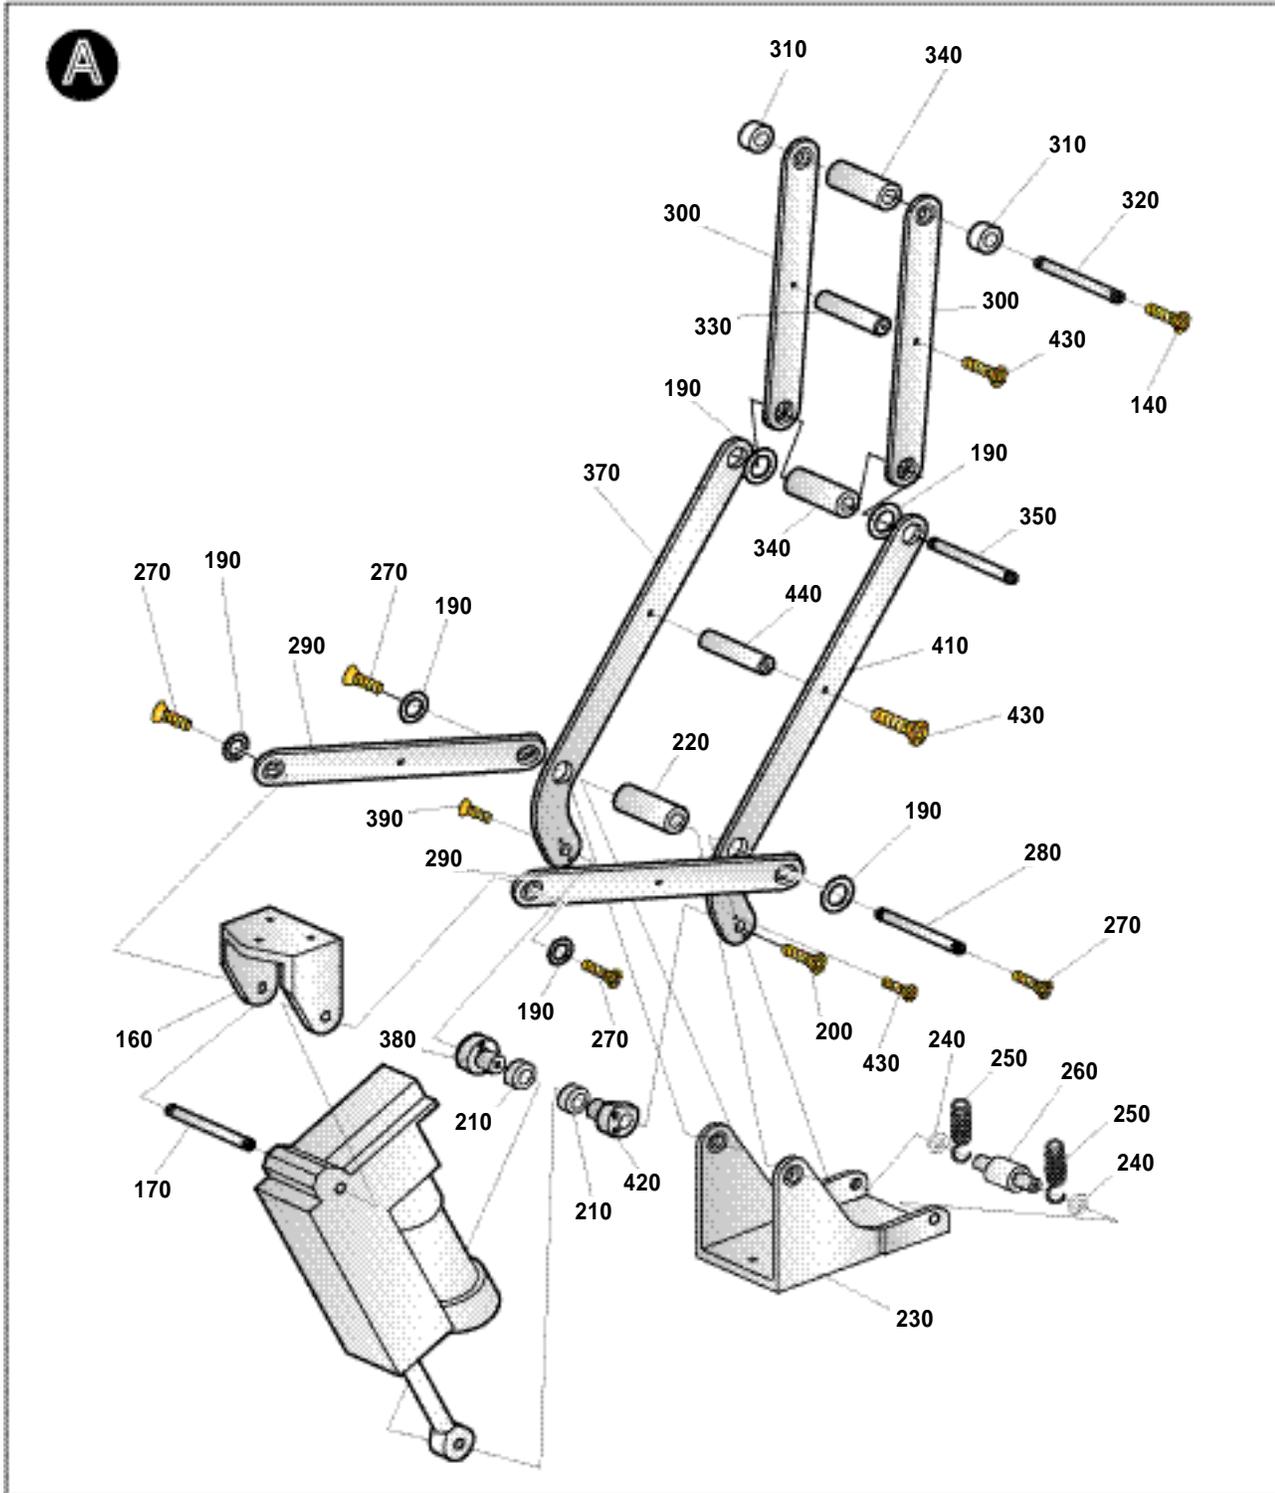

25-26-38

FIG. ITEM	PART NUMBER	NOMENCLATURE	EFFECT COD.	UNITS ASSY
		1234567		
4A				
1	3129532L00ZA	..UPPER STRUCTURE, RH*	A	RF
- 1 A	3129531M00ZA	..UPPER STRUCTURE, LH* *(See fig. 4 for det NHA)	B	RF
10	31295180002A	...FAIRING, GLUED RH	A	1
20	31295170002A	...FAIRING, GLUED LH	B	1
30	3129528L0000	...STRUCTURE, RH	A	1
40	3129527L0000	...STRUCTURE, LH	B	1
- 50	31295260002P	...COVER, RH	A	1
- 50 A	31295250002P	...COVER, LH	B	1
60	312953300000	...SUPPORT, ROTATION LH	A	1
- 60 A	312953400000	...SUPPORT, ROTATION RH	B	1
70	312918500000	...SUPPORT, JOINT Attaching parts		1
80	NAS602-6P	...SCREW (A12002200000)		1
90	F114334A0000	...SCREW		1
100	MS24693C54	...SCREW (A11008700000) * * *		2
110	F20910500000	...SPACER		2
- 120	312995000000	...SUPPORT, ROTATION TABLE RH	A	1
- 120 A	312995100000	...SUPPORT, ROTATION TABLE LH	B	1
- 130	F11751900000	...SUPPORT Attaching parts		1
140	MS24693C50	...SCREW (A11004900000) * * *		2
- 150	3131998A0000	...LEVER ASSY, ARMREST RH	A	1
- 150 A	3131999A0000	...LEVER ASSY, ARMREST LH	B	1
160	3129552A0000SUPPORT		1
170	F117486C0000PIVOT		1
190	F20892300000WASHER		4
200	NAS517-4-15SCREW (A12011000000)		1
210	F20952100000SPACER L=5.5		2
220	F20910300000SPACER L=40		1
230	313199700000SUPPORT, LOWER		1
240	F20952000000SPACER L=8.5		2

- Item not illustrated

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
4A				
250	K11436500000SPRING		2
260	313200600000PIVOT		1
270	NAS601-5PSCREW (A12007300000)		2
280	F117497A0000PIVOT		1
290	K11439100000LEVER		2
300	312954400000LEVER		2
310	F20910400000SPACER L=7		2
320	F116658A0000PIVOT, ROTATION		1
330	312954300000PIVOT, SHORT		1
340	F20892200000SPACER L=33		2
350	F11733800000PIVOT		1
- 360	313200100000LEVER ASSY, LOWER	A	1
- 360 A	313200000000LEVER ASSY, LOWER	B	1
370	312954700000LEVER, LOWER	A	1
- 370 A	312954800000LEVER, LOWER	B	1
380	313200500000SPACER		1
390	MS24693C4SCREW (A11004000000)		2
- 400	313200300000LEVER ASSY, LOWER	A	1
- 400 A	313200200000LEVER ASSY, LOWER	B	1
410	312954500000LEVER, LOWER	A	1
- 410 A	312954600000LEVER, LOWER	B	1
420	F20951900000SPACER		1
430	MS24693C26SCREW (A11004400000)		2
440	312954200000PIVOT		1
- 450	DIN6799 D=6CIRCLIP (A15402800000)		4
- 460	DIN6799 D=4CIRCLIP (A15405200000)		2
- 470	NAS601-15PSCREW (A12011100000)		4
- 480	MS24693C25SCREW (A11011300000)		2
- 490	AN960-6WASHER (A13401200000)		2

- Item not illustrated

25-26-38



COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES "16NC(T)() () ZA" FOR B767-300


THIS PAGE INTENTIONALLY LEFT BLANK

25-26-38

Page 1089

August 30, 2005

FIG. 5 (SHEET 1 OF 3) : SHELL ASSY, AISLE LH

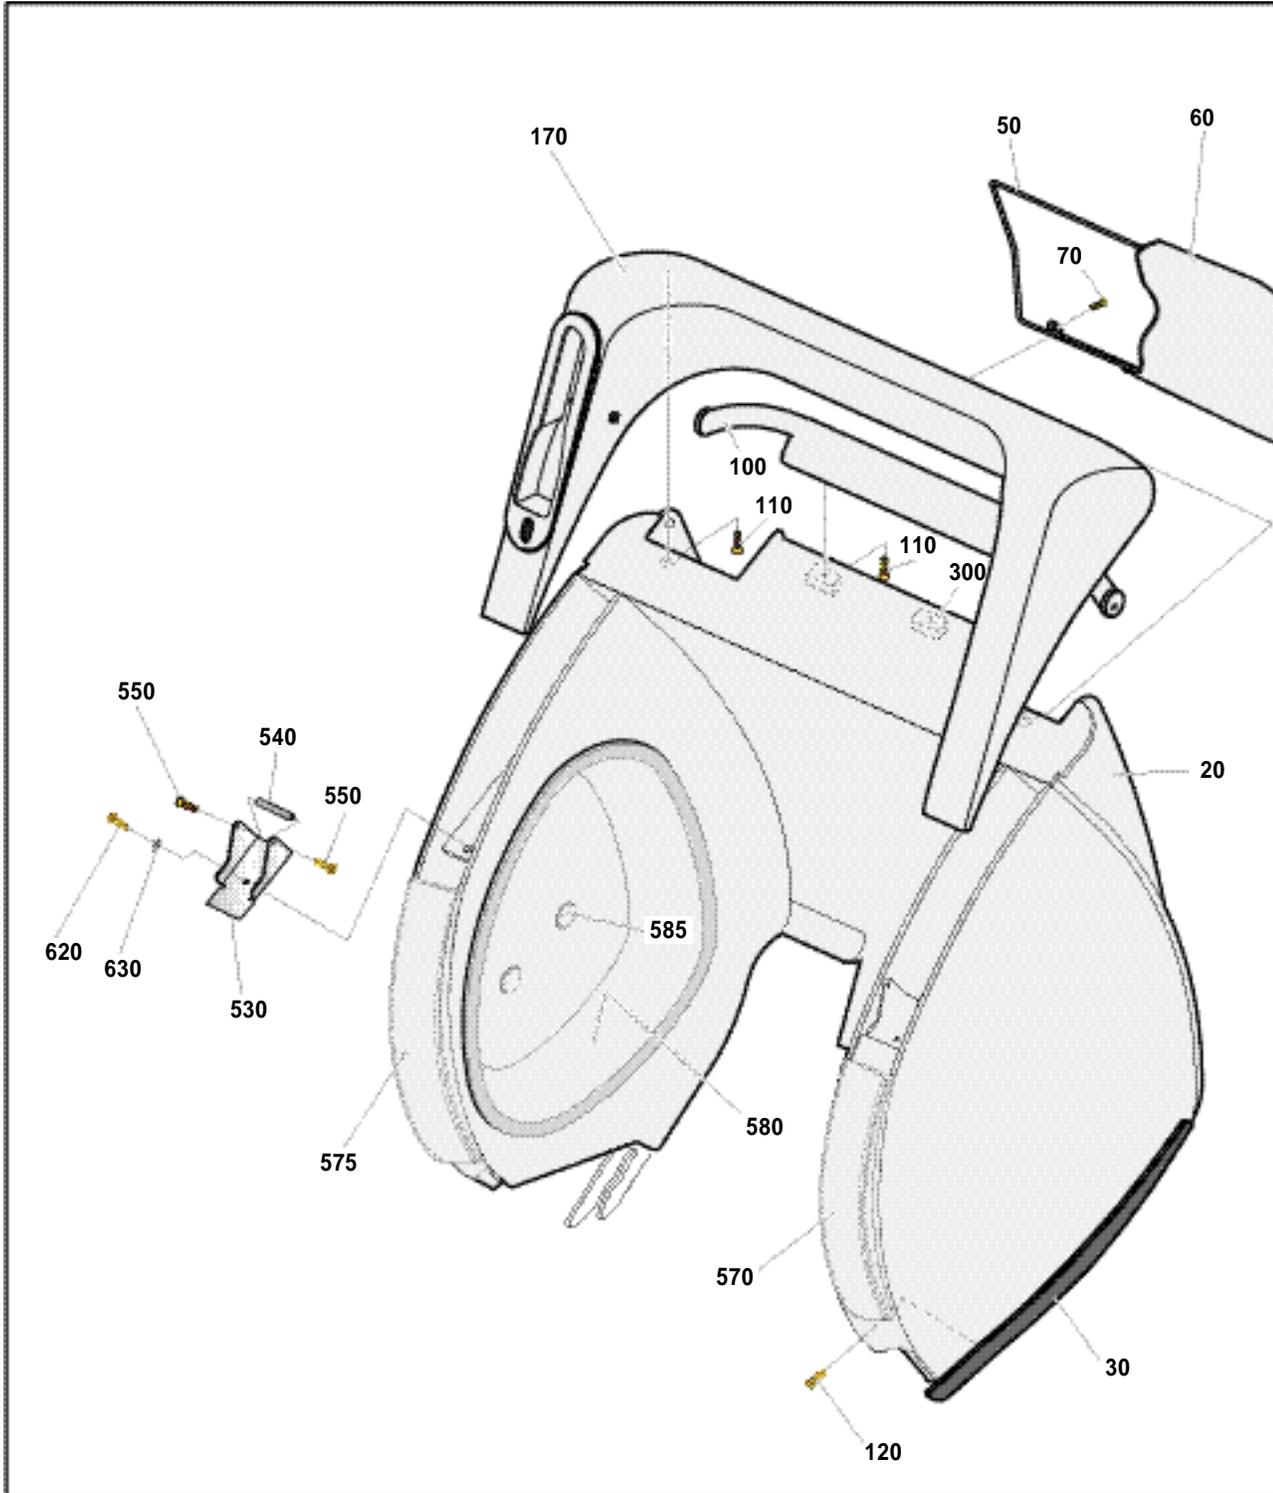

25-26-38

FIG. 5 (SHEET 2 OF 3) : SHELL ASSY, AISLE LH


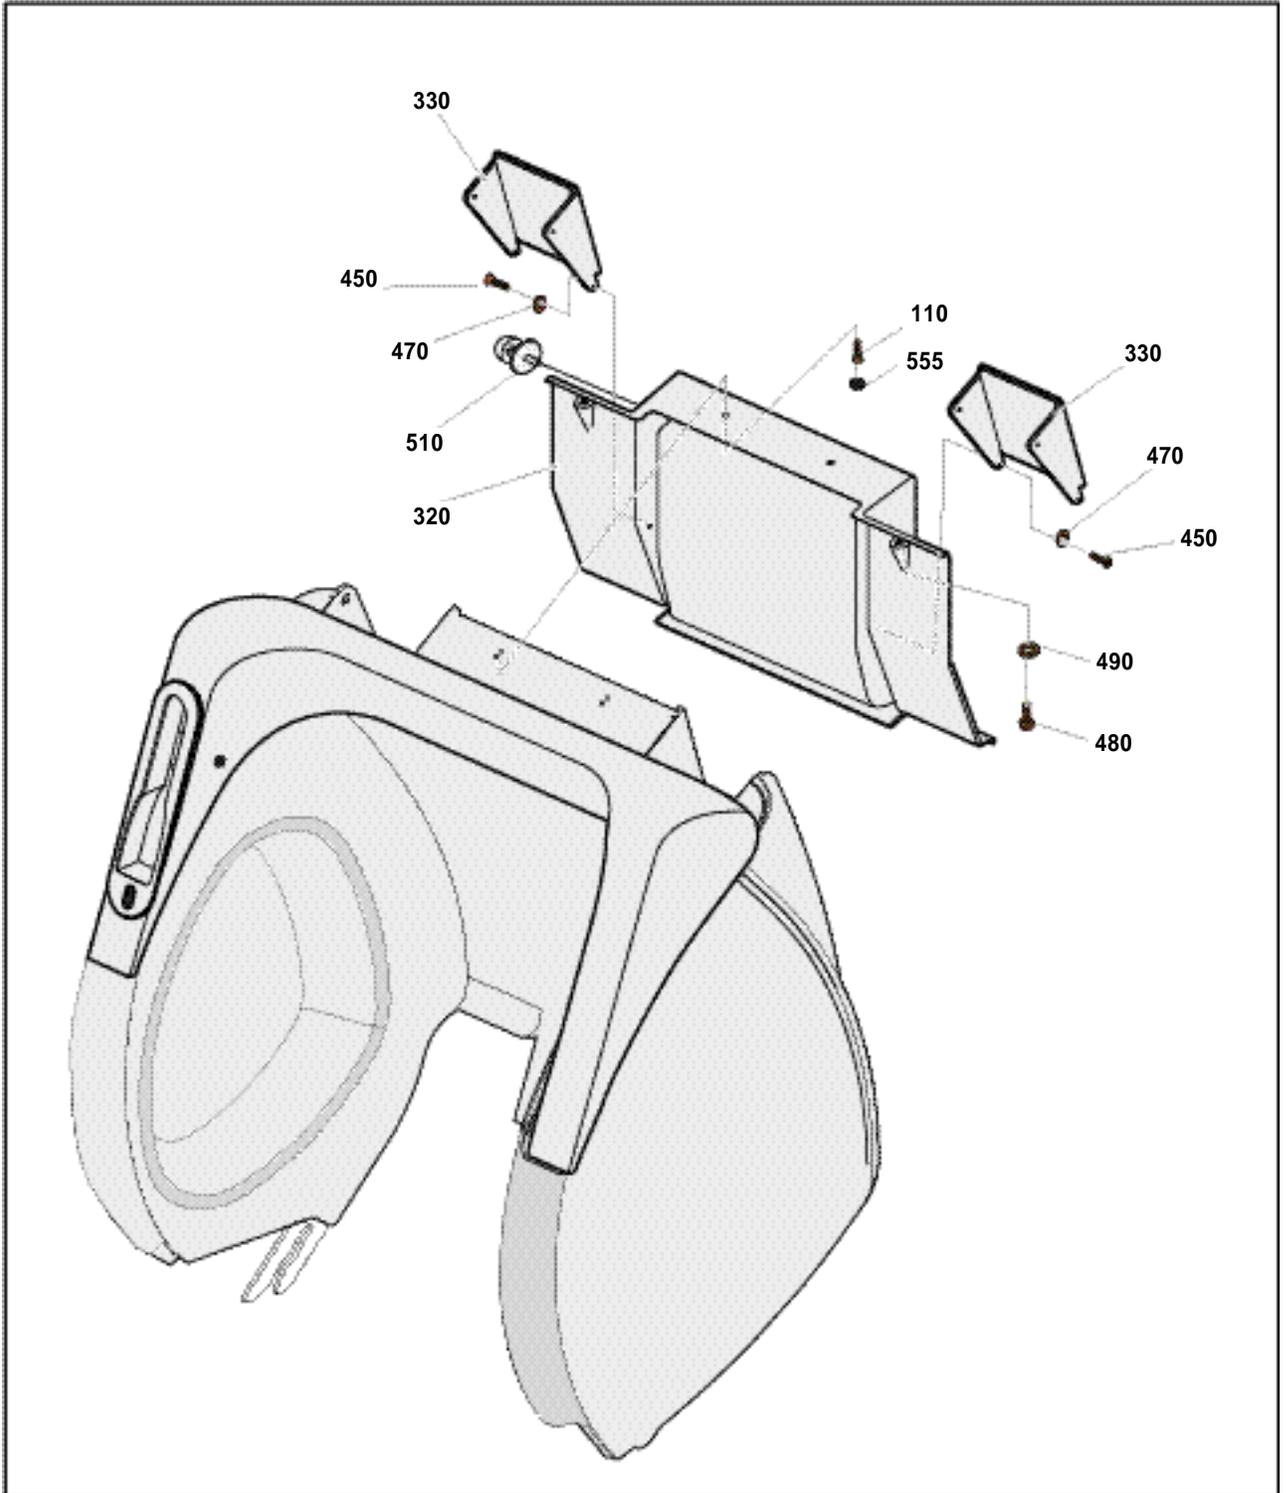


FIG. 5 (SHEET 3 OF 3) : SHELL ASSY, AISLE LH



25-26-38

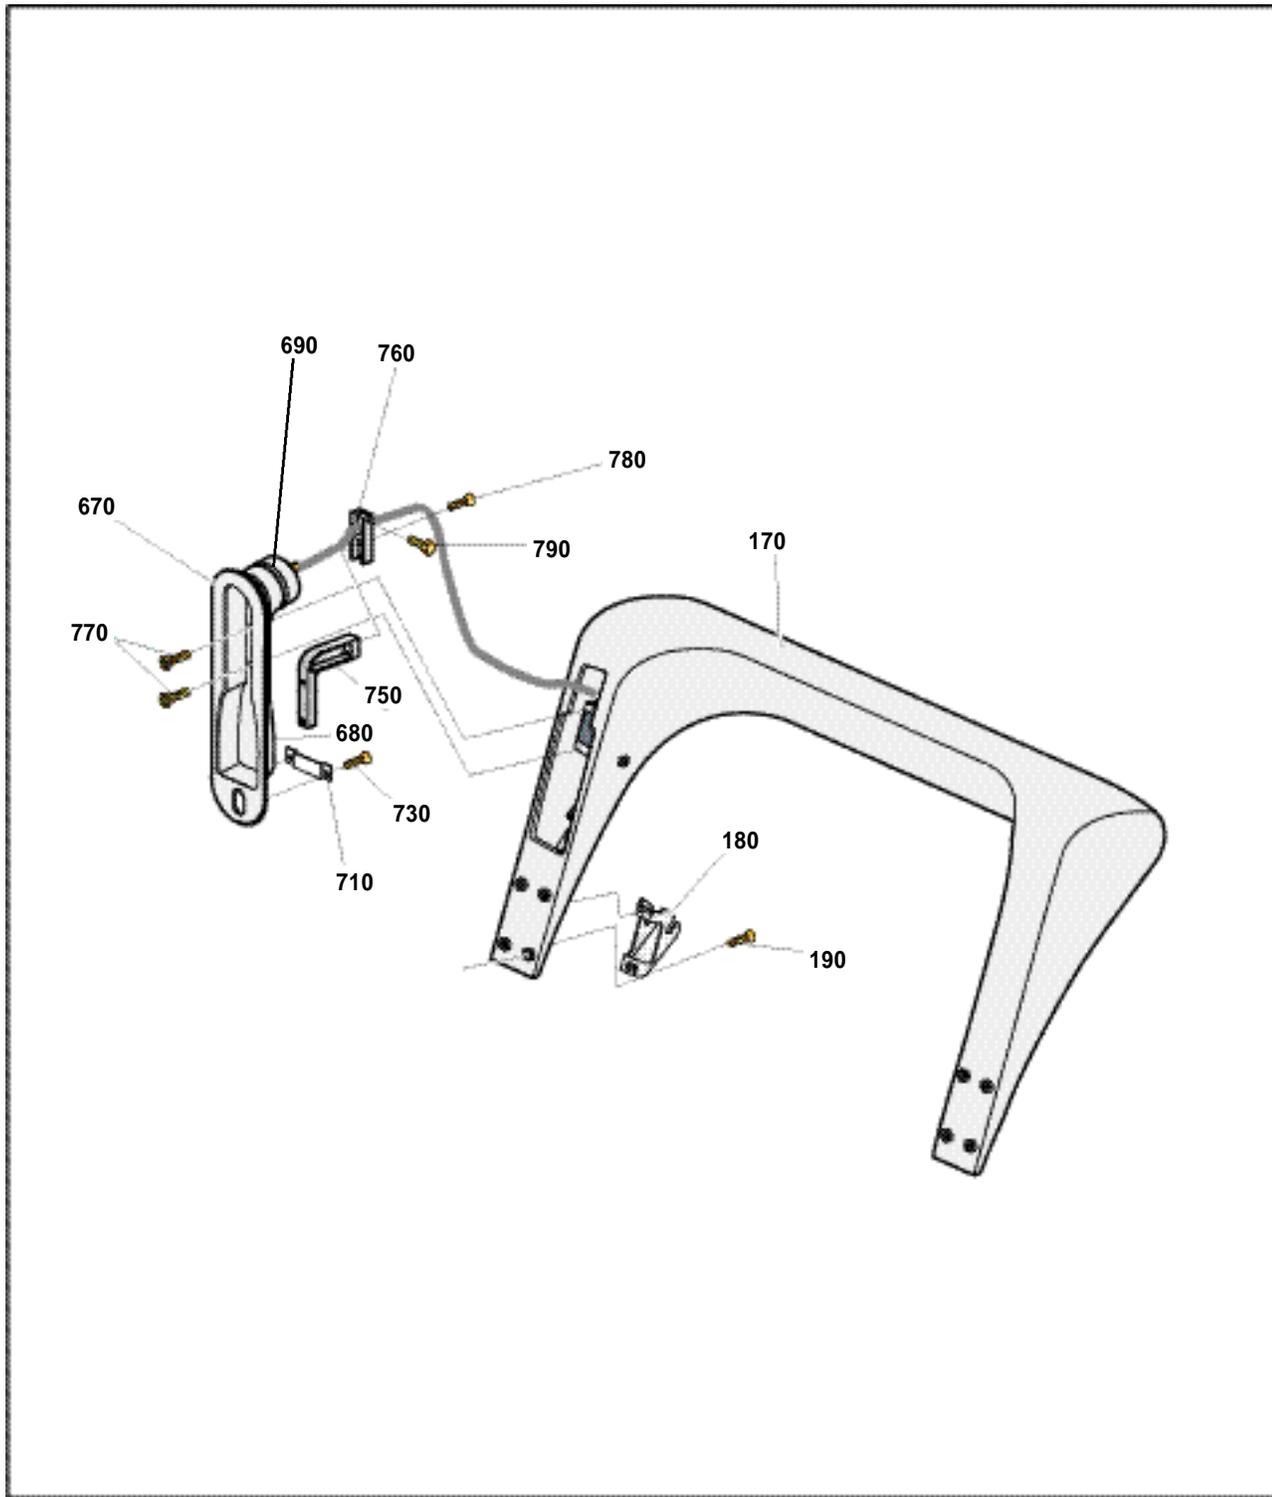

COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES"16NC(T)(O)(Z)" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
5				
1	3132793000ZA	.SHELL ASSY, AISLE LH*	A	RF
- 1 A	3132792000ZA	.SHELL ASSY, AISLE RH*	B	RF
- 1 B	3132850000ZA	.SHELL ASSY, OUTBD RH*	C	RF
- 1 C	3132851000ZA	.SHELL ASSY, OUTBD LH*	D	RF
		*(See fig. 1 for det NHA)		
- 1 D	3132858000ZA	.SHELL ASSY, SGL CNT (See fig. 1A for det NHA)	E	RF
- 10	3132795000ZA	..SHELL ASSY, LOWER	A	1
- 10 A	3132794000ZA	..SHELL ASSY, LOWER	B	1
- 10 B	3132852000ZA	..SHELL ASSY, LOWER	C	1
- 10 C	3132853000ZA	..SHELL ASSY, LOWER	D	1
- 10 D	3132859000ZA	..SHELL ASSY, LOWER	E	1
20	31327970002P	...SHELL, LOWER	A	1
- 20 A	31327960002P	...SHELL, LOWER	B	1
- 20 B	31328540002P	...SHELL, LOWER	C	1
- 20 C	31328550002P	...SHELL, LOWER	D	1
- 20 D	31328600002P	...SHELL, LOWER	E	1
30	31278490002A	...BUMPER, REAR LH/RH	A	1
- 30 A	31278480002A	...BUMPER, REAR RH/LH	BE	1
- 40	31328200002P	...POCKET ASSY, LITERATURE		1
50	313282100000SPRING		1
60	31328280002PCOVER ASSY		1
- 63	31328290002PCOVER		1
- 65	313335800000BUTTON, PAINTED		2
70	AN525-832R8SCREW (A13012500000)		2
100	31328250002P	...HANDLE		1
110	NAS603-14P	...SCREW (A12007400000)		2
120	MS24693C28	...SCREW (A11004500000)		6
- 130	F21022100000	...SHIM, FAIRING REAR		2
- 140	MS27980-7B	...BUTTON, MALE (A11700100000)		2
- 150	MS24693C48	...SCREW (A11001200000)		2
- 160	3132803000ZA	..SHELL ASSY, UPPER LH	AD	1
- 160 A	3132804000ZA	..SHELL ASSY, UPPER RH	BCE	1
170	31328050002P	...SHELL, UPPER	AD	1
- 170 A	31328060002P	...SHELL, UPPER	BCE	1

- Item not illustrated



COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES"16NC(T)(0)(0)ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
5				
180	K113348E0000	...BRACKET, UPPER SHELL Attaching parts		2
190	NAS603-5P	...SCREW (A12015300000)		8
- 195	MS24693C47	...SCREW (A11006900000) * * *		6
300	K11320500000	..BRACKET, FIX FAIRING		2
- 310	3197538000ZA	..KIT FAIRING, REAR RH	AC	1
- 310 A	3197539000ZA	..KIT FAIRING, REAR LH	BDE	1
320	F2096840002A	...FAIRING	AC	1
- 320 A	F2096830002A	...FAIRING	BDE	1
330	3130833C00ZA	...POCKET ASSY, LATERAL		2
- 340	K207933A002APOCKET		2
- 350	31308340002PCOVER		2
- 360	F20964000000FILLER		2
- 370	313335800000BUTTON, PAINTED		4
450	NAS601-6B	...SCREW (A12025200000)		4
460	NAS601-10B	...SCREW (A12025300000)		2
470	AN960XC6	...WASHER (A13403600000)		6
480	NAS603-10B	...SCREW (A12025400000)		2
490	AN960XC10	...WASHER (A13403700000)		4
- 500	MS24693C28	...SCREW (A11004500000)		2
510	F11863600000	..HOOK		1
- 520	313284900000	..BRACKET ASSY		2
530	K113349A0000	...BRACKET		2
540	F11708600000	...PIVOT Attaching parts		2
550	MS24693C25	...SCREW (A11011300000) * * *		4
555	31349450002A	...PLUG		2
- 560	K11357300000	..PLATE, LOWER		2
570	31328430002P	..COVER, LOWER FWD	ABCD	1

- Item not illustrated

25-26-38



COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES"16NC(T)(O)(O)ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
5				
575	3132843A002P	..COVER, LOWER FWD RH	ADE	1
- 575 A	3132843C002P	..COVER, LOWER FWD LH	BC	1
- 575 B	3132843F002P	..COVER, LOWER FWD LH	E	1
580	31328380002P	..COVER, INNER RH		1
- 580 A	31328370002P	..COVER, INNER LH		1
		Attaching parts		
585	31328450002P	..PLUG, COVER * * *		4
- 590	F11708300000	..BLOCK		2
- 600	MS24693C24	..SCREW (A11001300000)		4
- 610	NAS601-4P	..SCREW (A12000200000)		4
620	NAS603-6P	..SCREW (A12001200000)		4
630	AN960-10	..WASHER (A13400800000)		4
- 640	F20651900000	..BUSHING, NYLON		4
- 650	3197523A00ZA	..KIT INSTL. READING LIGHT (See fig. 1, 1A for det NHA)	F	RF
- 660	3134875000ZA	...FAIRING ASSY, READING LIGHT		1
670	3134950000ZAFAIRING, UPPER		1
680	K2078150002AFAIRING, LOWER		1
690	K2086530002AFAIRING, REAR		1
- 700	K114272C0000PLATE		1
710	K11061600000PLATE, A.JACK		1
- 720	F11788100000PIVOT		2
730	NAS600-3PSCREW (A12002000000)		2
- 740	MS24693S2SCREW (A11002400000)		2
750	312765800000	...SUPPORT		1
760	312679600000	...CLAMP		1
770	31284790002A	...SCREW, PAINTED		2
780	NAS603-8P	...SCREW (A12002500000)		2
790	B10058300000	...UBK 10-32X1/2"*BOLT		1


- Item not illustrated

25-26-38

Page 1095

August 30, 2005

FIG. 6: TABLE ASSY, IAT LH

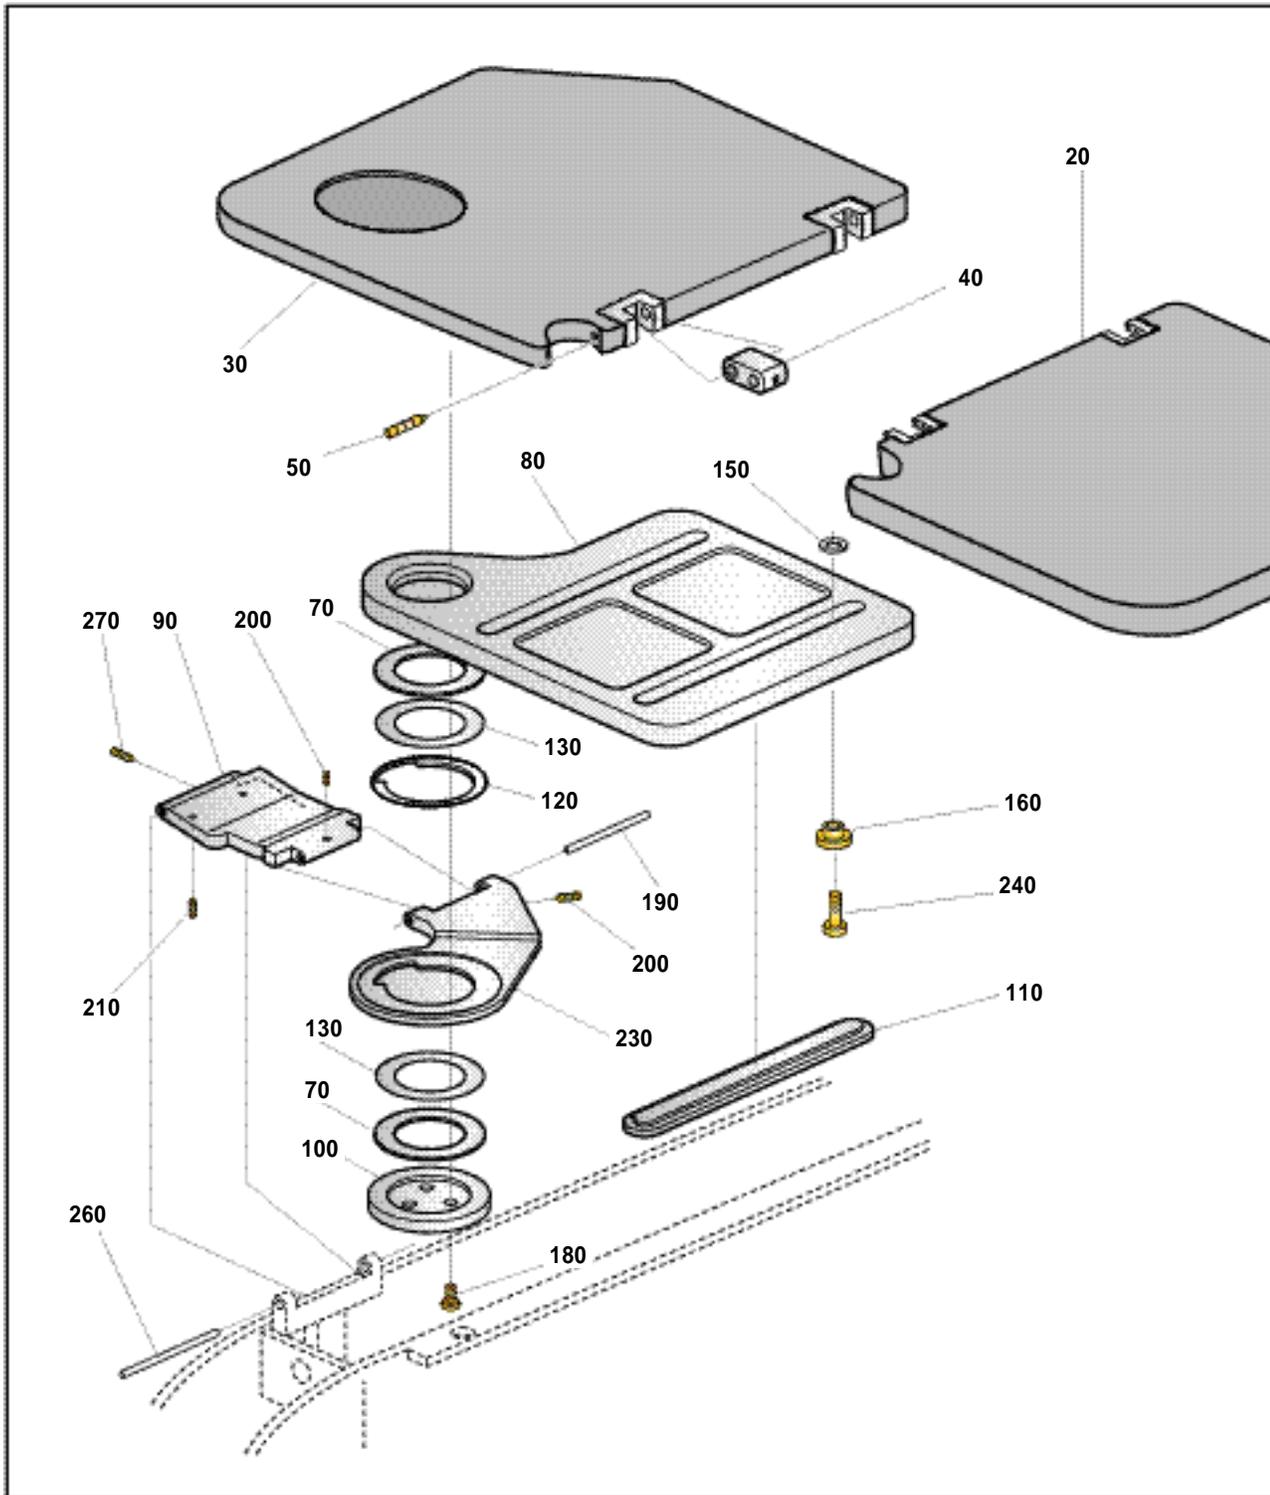

25-26-38



COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES"16NC(T)(O)(O)ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
6				
6		KIT IST TVL IAT		
1	3132481A002A	.TABLE ASSY, IAT LH (See fig. 1, 1A for det NHA)	A	RF
- 1 A	3132482A002A	.TABLE ASSY, IAT RH (See fig. 1 for det NHA)	B	RF
- 10	3129607A002A	..TABLE, IAT LH	A	1
- 10 A	3129608A002A	..TABLE, IAT RH	B	1
20	31296130002A	...TABLE, LEAF LH	A	1
- 20 A	31296120002A	...TABLE, LEAF RH	B	1
30	31341950002A	...TABLE, PIVOTING LH	A	1
- 30 A	31341960002A	...TABLE, PIVOTING RH	B	1
40	312410900000	...HINGE		2
		Attaching parts		
50	F11421500000	...PIN		4
- 60	AN565A6H6	...SCREW, SET (A13002900000) * * *		4
70	F10899700000	..WASHER		2
80	F11433900000	..PLATE, SLIDING LH	A	1
- 80 A	F11433800000	..PLATE, SLIDING RH	B	1
90	312916500000	..ARM ASSY, LH	A	1
- 90 A	312916400000	..ARM ASSY, RH	B	1
100	311396100000	..CENTERING, TABLE		1
110	K206278E002A	..FAIRING, PLATE		2
		Attaching parts		
120	F206712A0000	..BUSHING		1
130	F20671100000	..WASHER, NYLON		2
150	F206473C0000	..WASHER, NYLON		4
160	F21023800000	..BUSHING, SLIDING TABLE		4
- 170	F110619A0000	..PLATE		1
180	MS24693C271	..SCREW (A11011700000)		3
190	F114337A0000	..PIVOT		1
200	AN565A6H2	..SCREW, SET (A13002500000)		1
210	B20012200000	..FASTPOINT 0561.GA01*SCREW,SET		2
- 220	AN565A1032H9	..SCREW, SET (A13012400000)		1
230	F11433500000	..ARM, TABLE LH	A	1
- 230 A	F11433600000	..ARM, TABLE RH	B	1

- Item not illustrated

25-26-38

Page 1097

August 30, 2005

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
6				
240	MS24693C273	..SCREW (A11009600000) * * *		4
- 250	319418100000	.KIT INSTL. TABLE IAT (See fig. 1, 1A for det NHA)	C	RF
260	F11433700000	..PIVOT		1
270	AN565A6H2	..SCREW, SET (A13002500000)		1

- Item not illustrated

25-26-38



COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES "16NC(T)() () ZA" FOR B767-300


THIS PAGE INTENTIONALLY LEFT BLANK

25-26-38

Page 1099

August 30, 2005

FIG. 7 (SHEET 1 OF 3) : LEGREST ASSY, LH

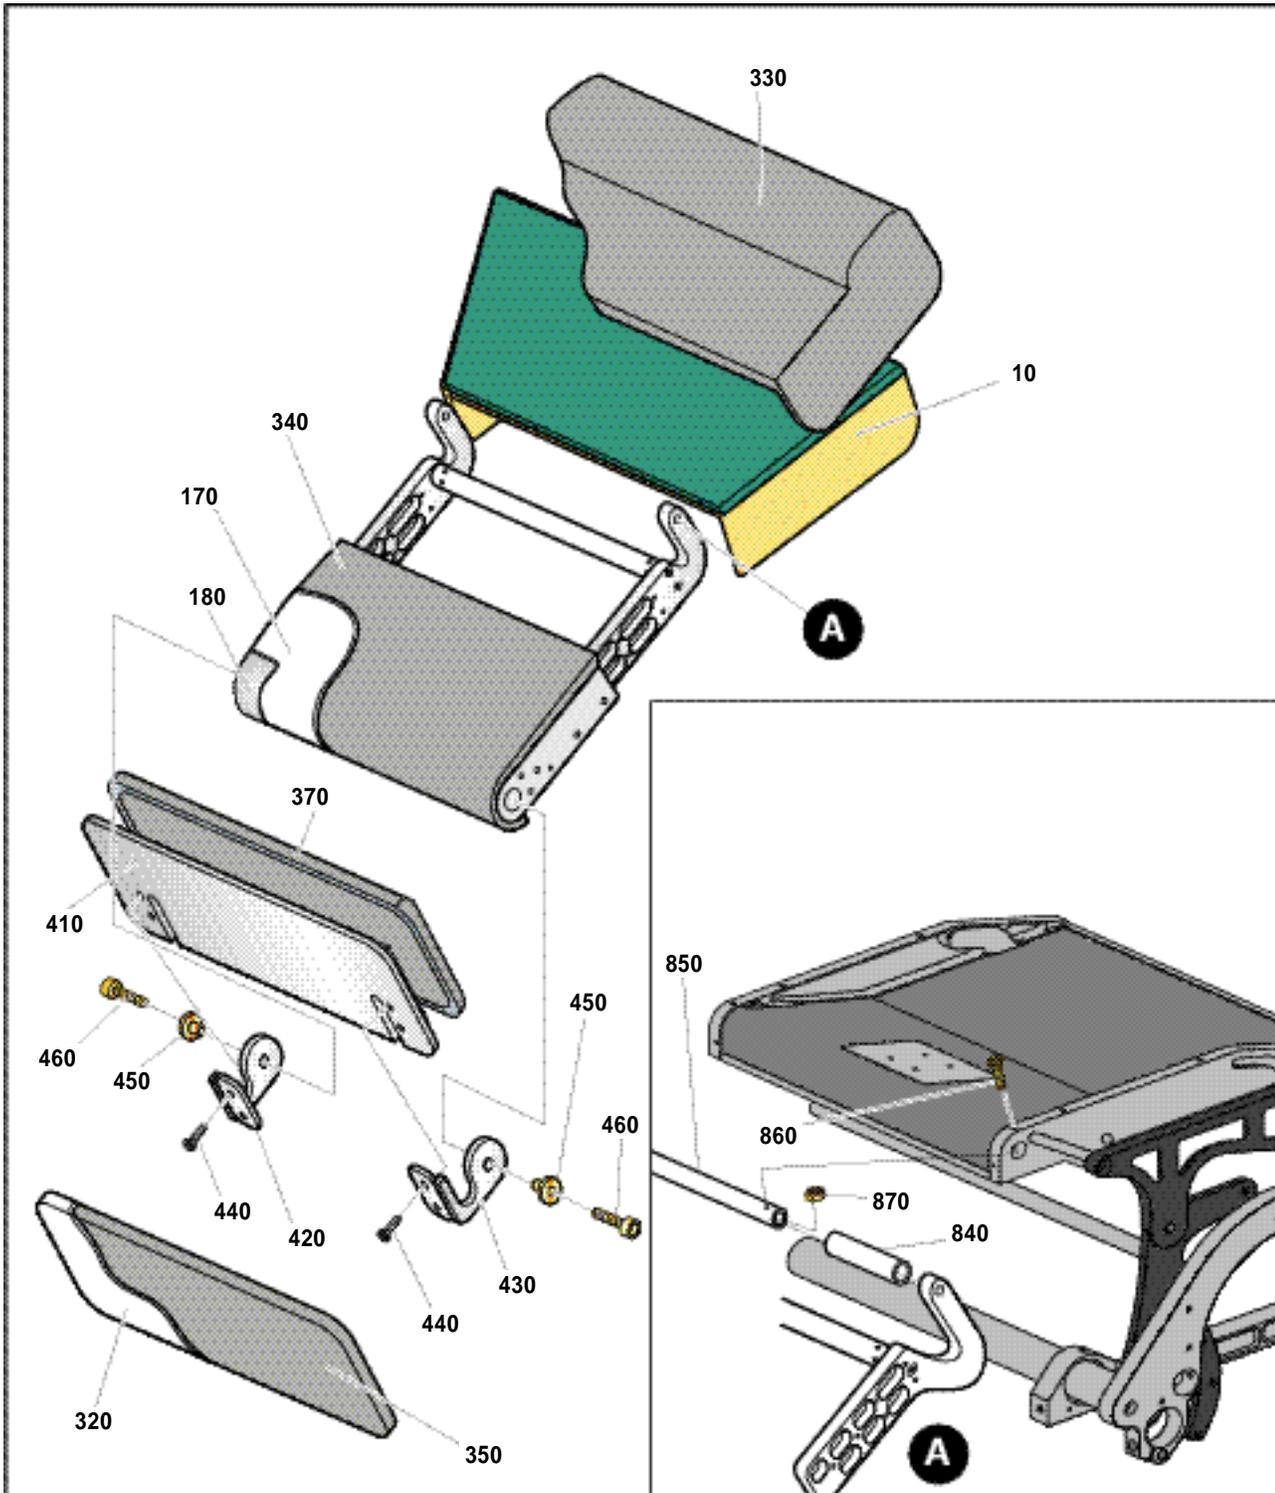

25-26-38

FIG. 7 (SHEET 2 OF 3) : LEGREST ASSY, LH


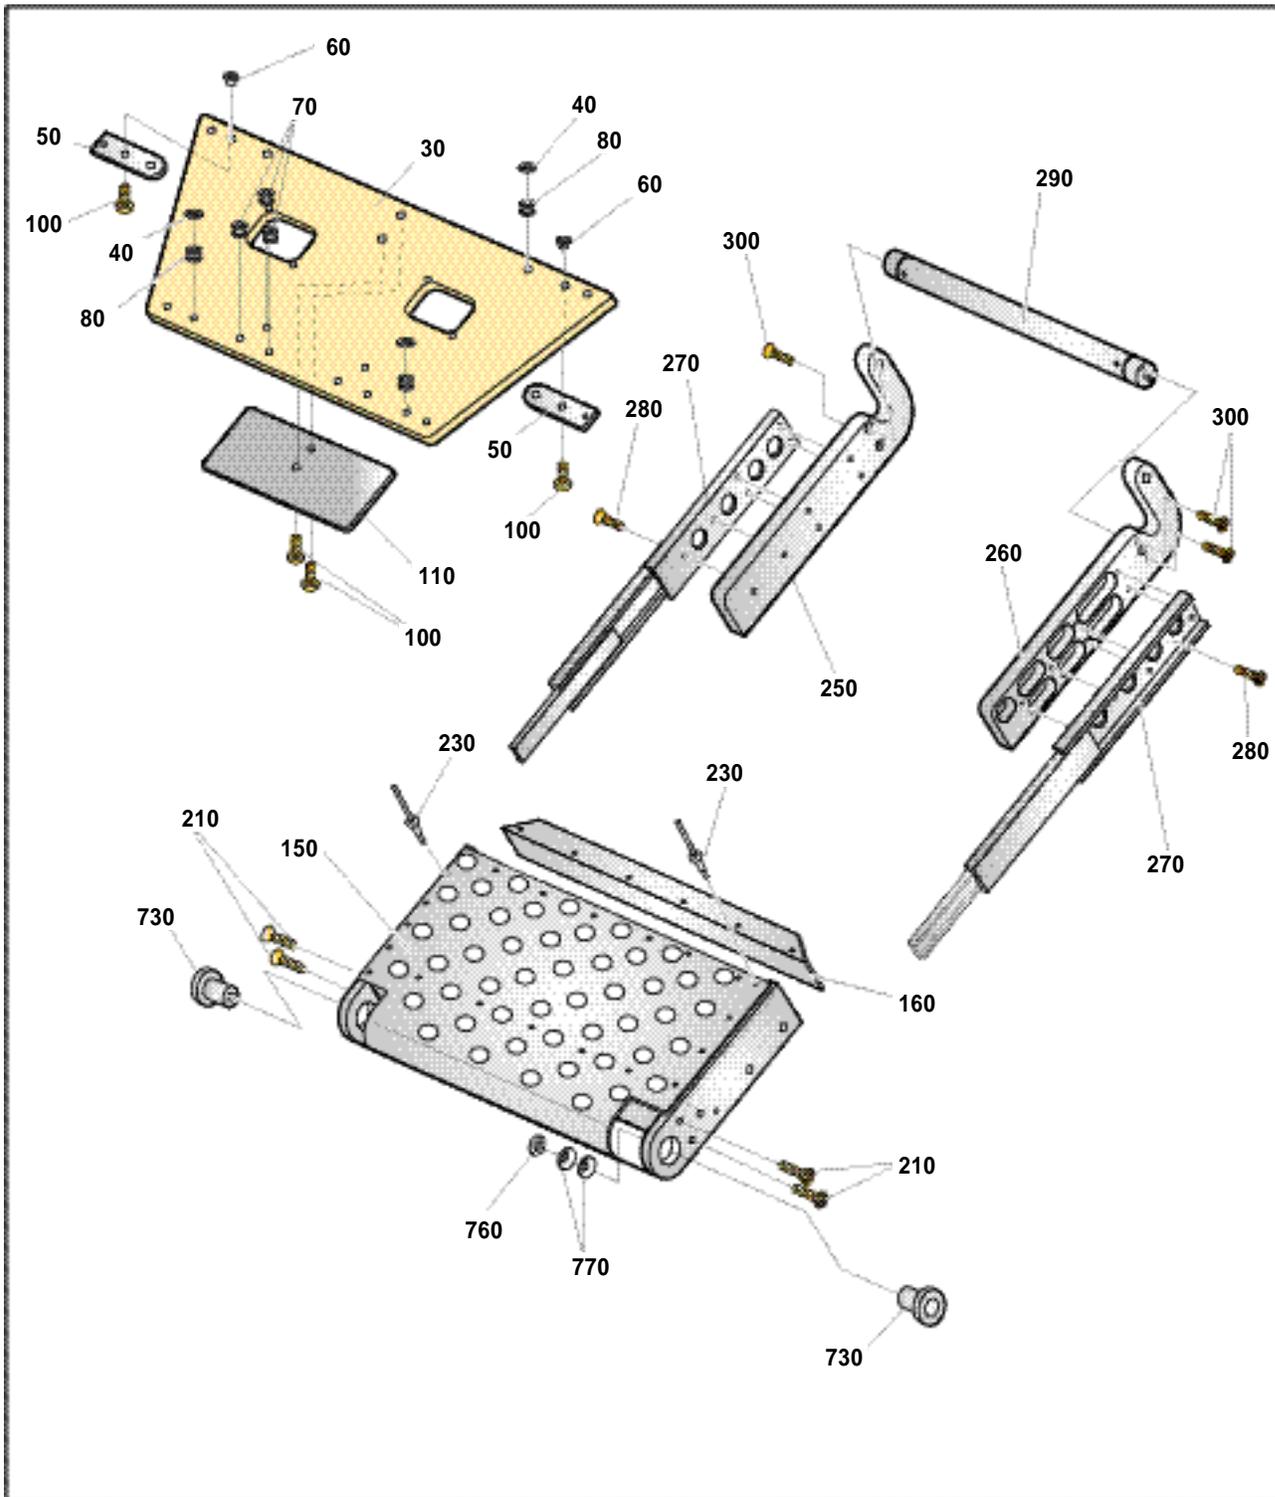


FIG. 7 (SHEET 3 OF 3) : LEGREST ASSY, LH



25-26-38

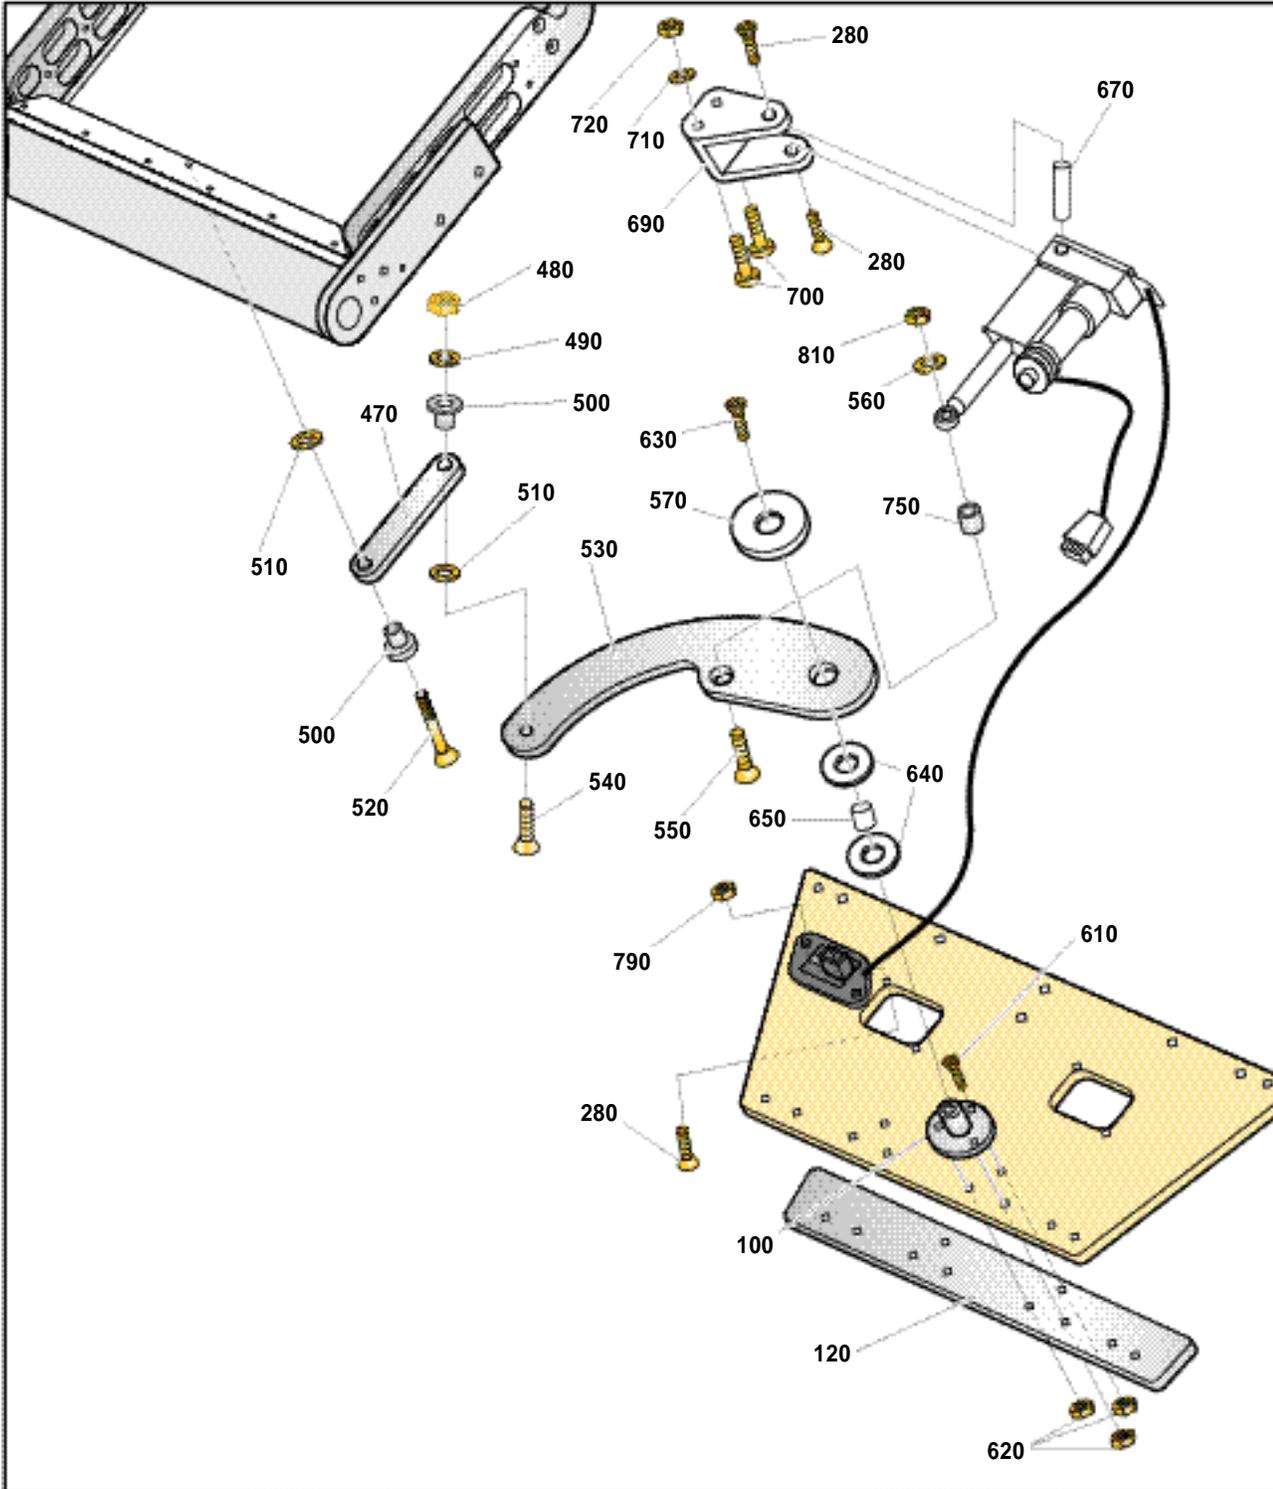

COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES"16NC(T)(0)(0)ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
7				
1	3127620E00ZA	.LEGREST ASSY, LH (See fig. 1 for det NHA)	A	RF
- 1 A	3127621E00ZA	.LEGREST ASSY (See fig. 1, 1A for det NHA)	B	RF
10	3127930E0000	..STRUCTURE ASSY, FIXED		1
- 20	3127931F0000	..PANEL ASSY, LOWER LEGREST		1
30	F208548G0000	...PANEL, LOWER		1
		Attaching parts		
40	K11235000000	...WASHER		6
50	K112352A0000	...STRAP		2
60	B1A015400000	...BUSHING		6
70	B1A011000000	...BUSHING		6
80	B1A000300000	...SHUR SL644-08-4 8-32		4
- 90	B1A003100000	...SHUR-TAB SLT 600 G 3		22
100	NAS603-6P	...SCREW (A12001200000)		6
110	K11320900000	...REINFORCEMENT		2
120	F116856C0000	...STRAP		1
- 130	B1A009800000	...BUSHING * * *		6
- 140	3134084H0000	..LEGREST, SLIDING		1
150	3134085H0000	...STRUCTURE ASSY, SLIDING LEGREST		1
155	313408700000PANEL, LATERAL LH		1
157	313408800000PANEL, LATERAL RH		1
160	312762700000ANGULAR		1
165	313408600000ATTACHMENT		1
170	F20855000000	...CUSHION		1
180	313488000000	...PLATE, CUSHION Attaching parts		2
- 190	F115891A0000BUSHING		4
200	K114561H0000CLOSURE		1
210	MS24693C50SCREW (A11004900000)		4
- 220	NAS601-5PSCREW (A12007300000)		3
230	B10003000000CAT TAP/D36*RIVET D=2.4		16
- 240	K50534600000	...PLACARD * * *		1

- Item not illustrated

25-26-38

Page 1103

August 30, 2005

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
7				
250	312763200000	..ARM, RH		1
260	312763300000	..ARM, LH		1
270	B0A751500000	..GUIDE		2
		Attaching parts		
280	MS24693C50	..SCREW (A11004900000)		8
290	312762500000	..CROSSMEMBER, LEVERING		1
300	MS24693C273	..SCREW (A11009600000)		4
		* * *		
- 310	12523-0401ZA	..LEGREST ASSY		1
320	3132578A0000	...CUSHION		1
330	3127925C00ZA	...COVER, FIXED PANEL		1
340	3127926C00ZA	...COVER, SLIDING PANEL		1
350	3127927C00ZA	...COVER, PANEL FOOTREST		1
370	31279150008A	..FAIRING, FOOTREST		1
		Attaching parts		
- 380	NAS391B6P	..WASHER (A12400300000)		4
- 390	MS24693S28	..SCREW (A11000200000)		14
		* * *		
- 400	3127624C0000	..FOOTREST ASSY		1
410	3127638C0000	...FOOTREST		1
420	312762200000	...ARM, RH		1
430	312762300000	...ARM, LH		1
		Attaching parts		
440	MS24693S269	...SCREW (A11000800000)		4
		* * *		
450	F11589000000	..PIVOT		2
460	B10055200000	..UBK 1/4-28X1.1/4"*BOLT		2
470	F11656400000	..ROD, CONNECTING		1
480	NAS679A3	..NUT (A12200400000)		1
490	AN960-10	..WASHER (A13400800000)		1
500	F11581600000	..BUSHING		2
510	F20826100000	..WASHER, NYLON		2
520	NAS603-12P	..SCREW (A12008200000)		5

- Item not illustrated

25-26-38



COMPONENT MAINTENANCE MANUAL
 AIRCRAFT PASSENGER SEAT
 SERIES"16NC(T)(O)(ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
7				
530	F11656600000	..LEVER, RH	A	1
- 530 A	F11656500000	..LEVER, LH	B	1
540	MS24693C270	..SCREW (A11001100000)		1
550	MS24693C300	..SCREW (A11010000000)		1
560	AN960-416L	..WASHER (A13400700000)		1
570	F11580500000	..WASHER		1
- 580	319728300000	..KIT JOINT, LEVER		1
- 590	F11650800000	...PLATE		1
600	F11650700000	...PIVOT		1
		Attaching parts		
610	MS24693C51	...SCREW (A11009100000)		3
620	MS21083NO8	...NUT (A11201400000)		3
630	MS24693S277	..SCREW (A11001600000)		1
640	F20815600000	..WASHER, NYLON		2
650	F11580700000	..BUSHING		1
670	F11581500000	..PIVOT		1
		* * *		
- 680	3125926A0000	..SUPPORT ASSY, LEGREST		1
690	F115814A0000	...SUPPORT		1
		Attaching parts		
700	MS24694S78	...SCREW (A11022400000)		2
710	AN960-10	..WASHER (A13400800000)		2
720	NAS679A3	...NUT (A12200400000)		2
		* * *		
730	F115889A0000	..PIVOT, ROTATION		2
- 740	F11667700000	..PIVOT, STOP		2
750	F208040C0000	..BUSHING, TEFLON		1
760	K10605700000	..WASHER		2
770	DIN2093	..SPRING (B10005100000)		4
- 780	NAS603-10P	..SCREW (A12001300000)		2
790	MS21083NO8	..NUT (A11201400000)		2
- 800	MS21044-N3	..NUT (A11202500000)		1
810	NAS679A4	..NUT (A12200200000)		1
- 820	MS24693C48	..SCREW (A11001200000)		8

- Item not illustrated

25-26-38

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
7 - 830	319735400000	.KIT INST. LEGREST (See fig. 1, 1A for det NHA)	C	RF
840	F11666800000	..BUSHING		2
850	F11666700000	..TIBE		1
860	MS24693C32	..SCREW (A11004800000)		2
870	MS21083N06	..NUT (A11201800000)		2

- Item not illustrated

25-26-38



COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES "16NC(T)() () ZA" FOR B767-300


THIS PAGE INTENTIONALLY LEFT BLANK

25-26-38

Page 1107


August 30, 2005

FIG. 8 (SHEET 1 OF 3) : STRUCTURE, PRIMARY DBL RH

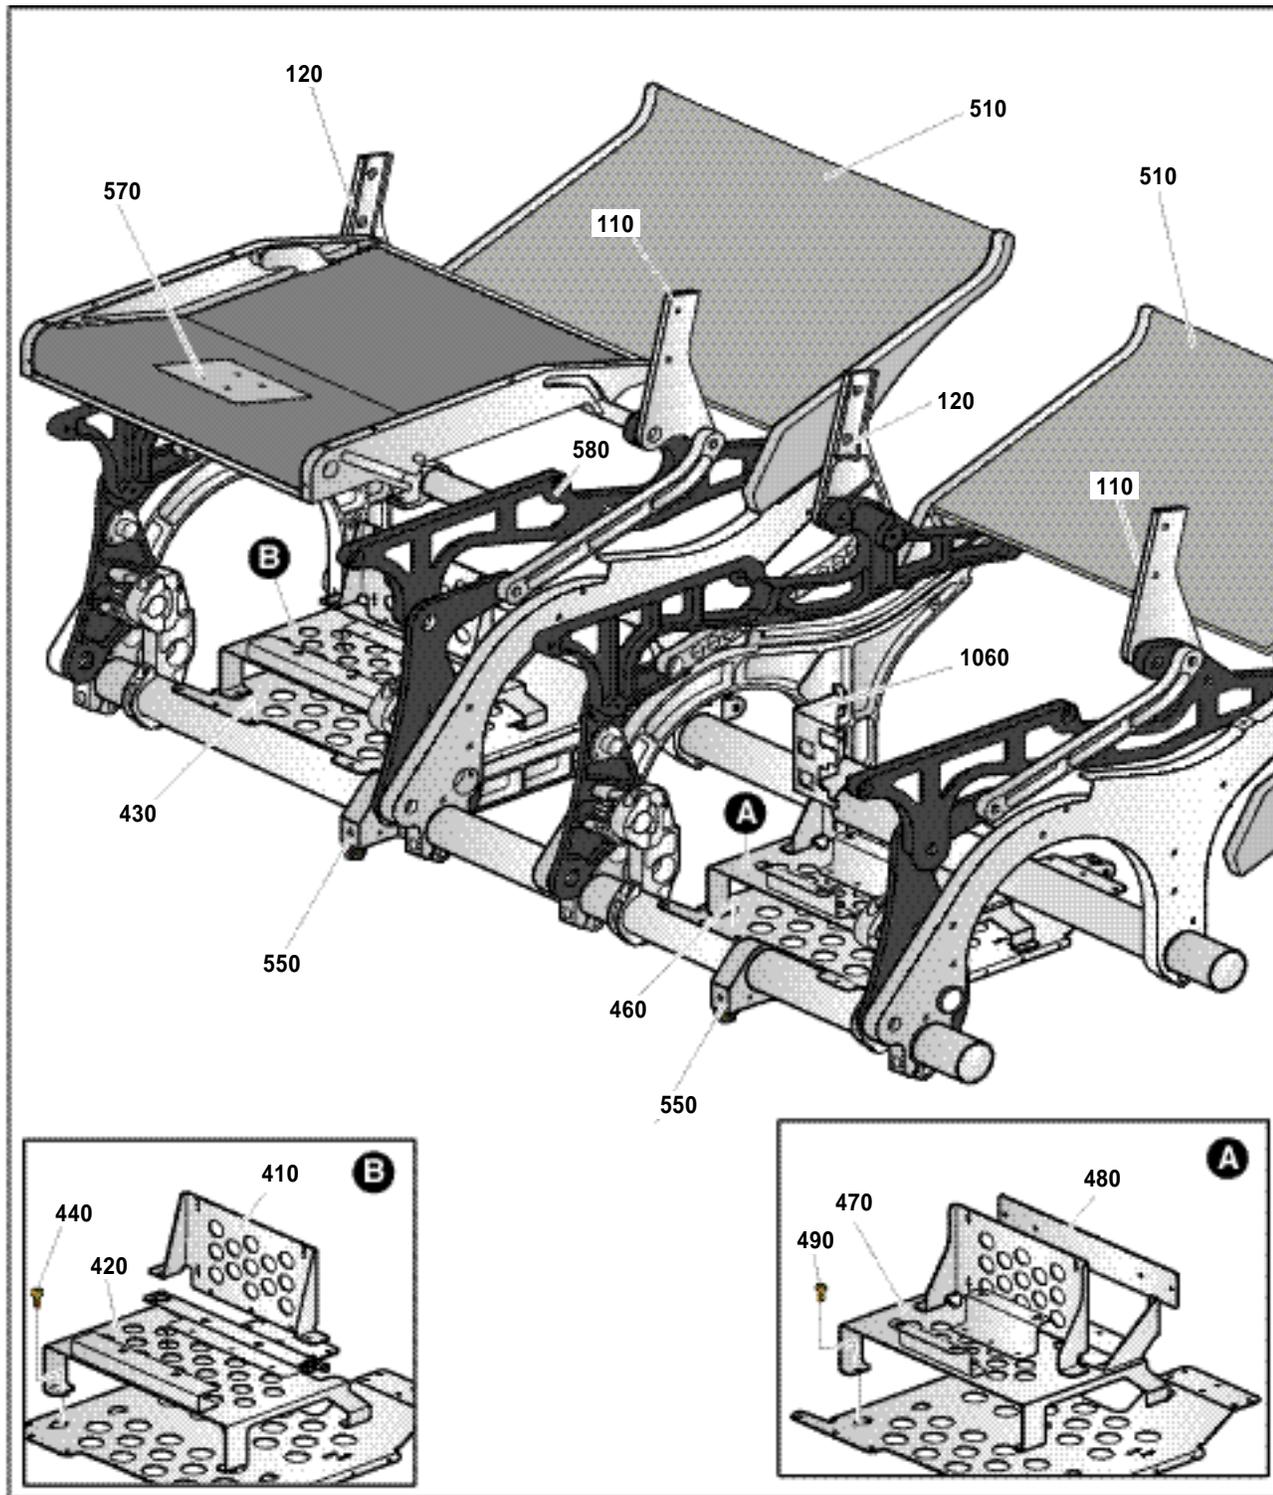

25-26-38

FIG. 8 (SHEET 3 OF 3) : STRUCTURE, PRIMARY DBL RH

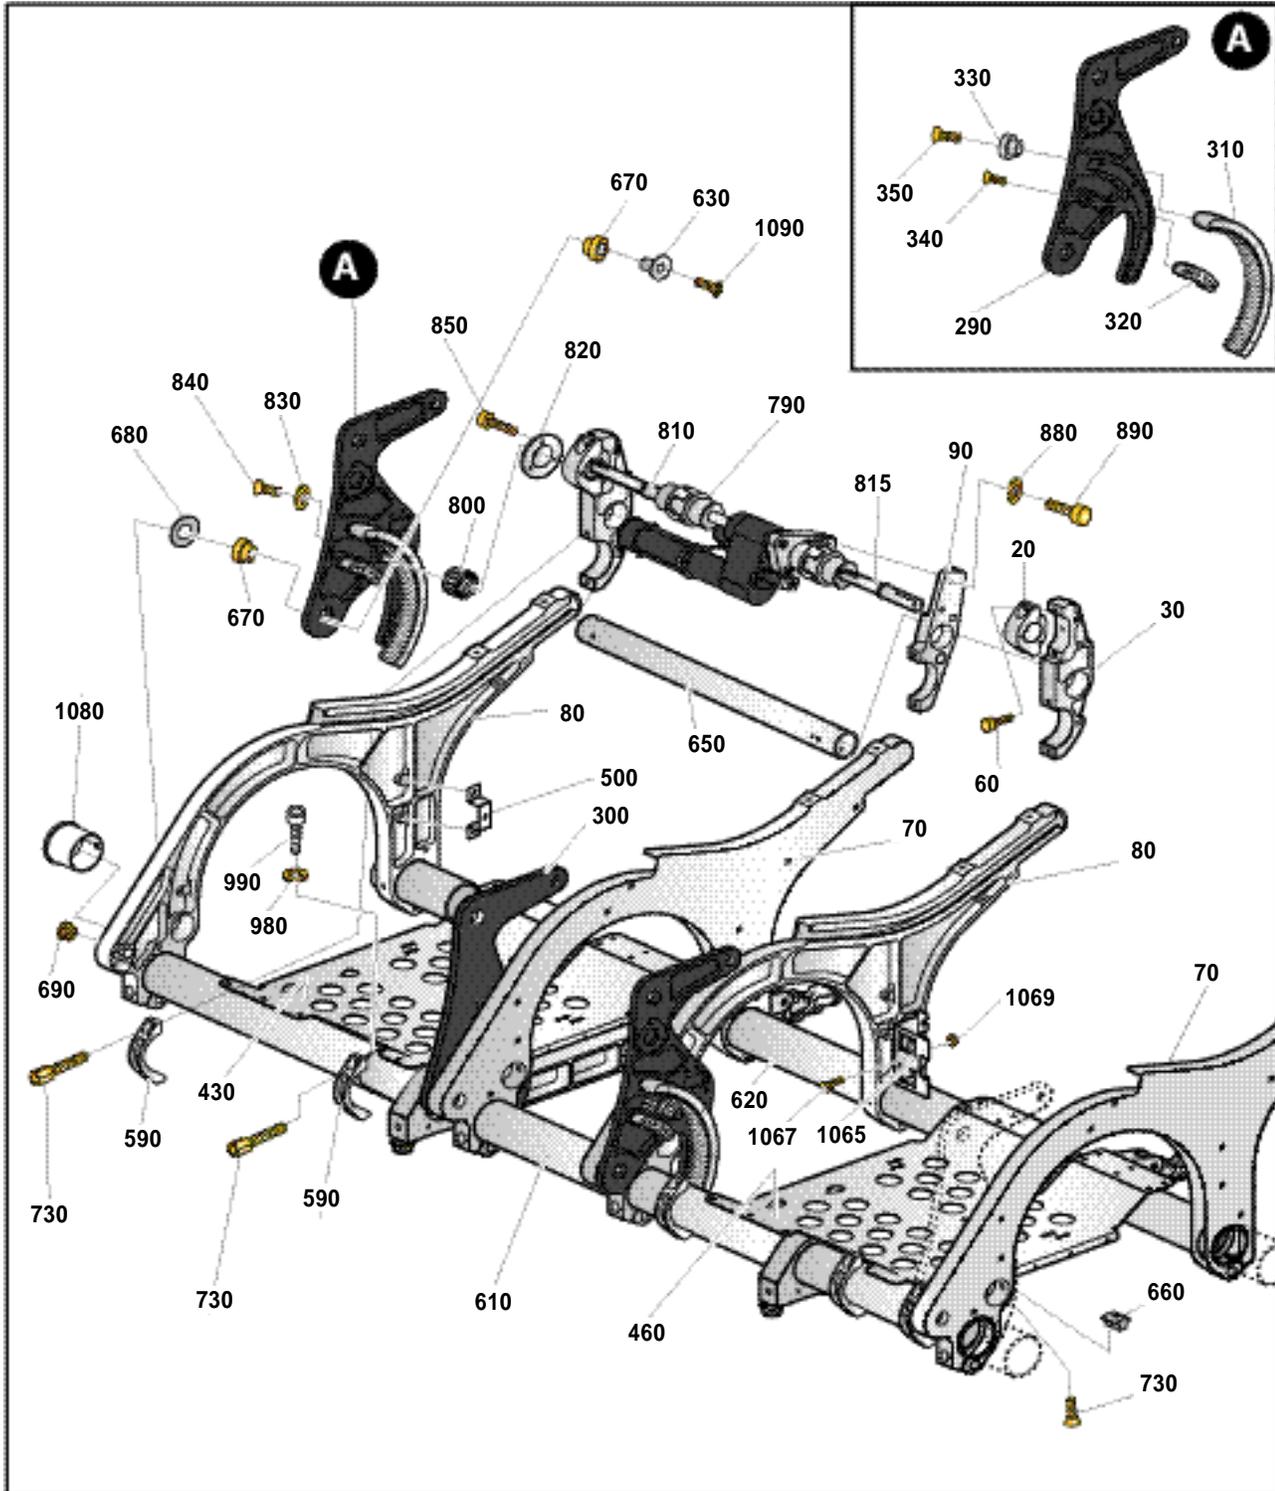

25-26-38



COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES"16NC(T)(0)(0)ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
8				
1	3134044000ZA	.STRUCTURE, PRIMARY DBL RH*	A	RF
- 1 A	3134045000ZA	.STRUCTURE, PRIMARY DBL LH* *(See fig. 1 for det NHA)	B	RF
- 10	312930400000	..SUPPORT ASSY, BEARING RH		2
- 10 A	312930500000	..SUPPORT ASSY, BEARING LH		2
20	312930200000	...SUPPORT, BEARING		2
30	312930300000	...SUPPORT, ROTATION		2
		Attaching parts		
60	B10008500000	...UBK 1/4-28X 3/4"*BOLT * * *		4
70	312850900000	..STRUCTURE, GUIDE LH		2
80	312851000000	..STRUCTURE, GUIDE RH		2
90	312758600000	..SUPPORT, ACTUATOR		2
- 100	312758700001	..LEVER ASSY, LH		2
- 100 A	312758800001	..LEVER ASSY, RH		2
110	F116549A0000	...LEVER, LH		2
120	F116550A0000	...LEVER, RH		2
		Attaching parts		
130	F11660600001	...PIVOT, BACKREST ROTATION		2
- 140	F11653500001	...PIVOT, ROTATION		2
150	F20843700000	...WASHER, NYLON		2
160	F20843800000	...WASHER, NYLON		2
- 165	F20843900000	...BUSHING, ROTATION		2
170	MS24693C298	...SCREW (A11009900000)		4
180	NAS679A4	...NUT (A12200200000) * * *		4
- 190	312758900001	...ROD, LEVERING LH		2
- 190 A	312759000001	...ROD, LEVERING RH		2
200	F116537A0001ROD, LEVERING LH		2
210	F116538A0001ROD, LEVERING RH		2
		Attaching parts		
220	F11579000000BUSHING * * *		8

- Item not illustrated

25-26-38

Page 1111

August 30, 2005



COMPONENT MAINTENANCE MANUAL
 AIRCRAFT PASSENGER SEAT
 SERIES"16NC(T)(0)(0)ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
8				
- 230	3128440L0001	..SECTOR ASSY, ROTATION		2
- 240	312780100000	...TUBE ASSY, ATTACHMENT		2
250	F11678600000TUBE, ATTACHMENT		2
260	F11678700000TERMINAL, TUBE		4
		Attaching parts		
270	BE61-0512TXT AVI*RIVET (B10052200000) * * *		8
- 280	3128441C0001	...SECTOR ASSY, LH		2
- 280 A	3128442C0001	...SECTOR ASSY, RH		2
290	3128456C0001SECTOR, RH		2
300	3128455C0001SECTOR, LH		2
310	312747700000SECTOR, DENTED		2
320	F11678800000GUIDE, PINION GEAR		2
		Attaching parts		
330	F11653400000BUSHING		8
340	MS24693C296SCREW (A11012100000)		4
350	MS24693C275SCREW (A11011900000)		8
360	NAS603-14P	...SCREW (A12007400000)		12
370	MS35335-32	...WASHER (A11401600000)		24
380	NAS679A3	...NUT (A12200400000) * * *		12
385	F208934C0000	...SHIM, RH		2
387	F208934E0000	...SHIM, LH		2
- 390	B10012300000	..UBK 1/4-28X1.1/2"*BOLT		4
- 400	3132424C0000	..SUPPORT ASSY, LH	A	1
- 400 A	3132424A0000	..SUPPORT ASSY, RH	B	1
410	3132501A0000	...PLATE, SUPPORT LUMBAR PUMP		1
420	313417300000	...SUPPORT, LUMB PUMP/ISPS LH	A	1
- 420 A	313417200000	...SUPPORT, LUMB PUMP/ISPS RH	B	1
430	3132499A0000	...SUPPORT, CONNECTOR		1
440	NAS602-7P	...SCREW (A12008000000)		5
- 445	TM3S10-C	...PANDUIT*WIRING SUPP. (B10053400000)		6

- Item not illustrated

25-26-38



COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES"16NC(T)(0)(0)ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
8				
- 450	3132423C0000	..SUPPORT ASSY, SEB		1
460	3132499A0000	...SUPPORT, CONNECTOR		1
470	3132525A0000	...SUPPORT, LUMB/TLF/SEB		1
480	K11440900000	...PLATE, TELEPHONE		1
490	A12008000000	...SCREW (A12008000000)		4
- 495	B10053400000	...PANDUIT TM3S10-C*WIRING SUPPORT		6
500	312762900000	..PLATE, FIX TEL		2
510	3127592L002P	..CLOSURE, FOOTREST ATTACHMENT		2
520	DM00133-1	..FITTING, SAFETY BELT		4
550	3127847A0000	..LEG ASSY*		2
560	3125357E0017	..FITTING ASSY, REAR* *(See fig. 10 for det BKDN)		2
570	319774300000	..SEAT PAN ASSY, LH*		1
- 570 A	319774400000	..SEAT PAN ASSY, RH* *(See fig. 9 for det BKDN)		1
580	319729100001	..STRUCTURE ASSY, SLIDING (See fig. 11 for det BKDN)		2
590	F116520A0000	..COLLAR, ATTACHMENT		6
600	F108191E0000	..BUSHING, SAFETY BELT		4
610	F117726A0000	..SPARTUBE, FWD RH	A	1
- 610 A	F117727A0000	..SPARTUBE, FWD LH	B	1
620	F117728A0000	..SPARTUBE, REAR RH	A	1
- 620 A	F117729A0000	..SPARTUBE, REAR LH	B	1
630	F11653200001	..PIVOT, ROTATION		4
640	F11653500001	..PIVOT, ROTATION		4
650	F116545A0000	..SPARTUBE, ATTACHMENT		2
660	F11557700000	..NUT, SPECIAL		4
670	F11659400000	..BUSHING		8
680	F20851900000	..WASHER, NYLON		8
690	NAS679A4	..NUT (A12200200000)		4
- 700	AN3-4A	..SCREW (A13007200000)		8
- 710	AN960-416L	..WASHER (A13400700000)		4
730	B10008500000	..UBK 1/4-28X 3/4"*BOLT		16
- 740	BE61-0512	..TXT AVI*RIVET (B10052200000)	A	4
740 A	B10055200000	..UBK 1/4-28X1.1/4"*BOLT	B	4

- Item not illustrated

25-26-38

Page 1113

August 30, 2005

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
8				
- 760	B10002800000	..POP TLP/K424BS*RIVET		8
- 780	3197286N0000	..KIT INSTL. PIVOT		2
790	3129223A0000	...COUPLING, FLEXIBLE		4
800	F11846300000	...PINION		4
810	F118462A0000	...PINION, STD L=116.8		2
815	F11846200000	...PINION, STD L=124		2
820	F11651500000	...RING NUT		4
830	F11652600000	...WASHER, NYLON		4
840	MS24693S272	...SCREW (A11001400000)		4
850	B10050100000	...UBK 8-32X1/2"*BOLT		12
- 860	UNI6604-69	...TAB (A14413100000)		8
- 870	319728800000	..KIT INSTL.GEAR BOX		2
880	UNI6604-69	...TAB (A14413100000)		4
890	B10008600000	...UBK 1/4-28x1"*BOLT		4
- 900	319762000000	..KIT INSTL. CONTROLLER		2
- 910	F11730400000	...BUSHING		4
- 920	NAS602-8P	...SCREW (A12002300000)		8
- 930	F22NKM-82	...NUT (B10040900000)		4
- 940	319740100000	..KIT INSTL.STRUCTURE GUIDE		4
- 950	F112549C0000	...PIN, FIXING		4
- 960	F11684300000	...NUT, SPECIAL		4
- 970	F11651300000	...ROD, IRON		8
980	AN960-416	...WASHER (A13400200000)		8
990	B10008600000	...UBK 1/4-28x1"*BOLT		16
- 1000	3197393C0000	..KIT INSTL. LEG ASSY*		2
- 1005	319791500000	..KIT INSTL. FITTING ASSY, REAR* *(See fig. 10 for det BKDN)		2
- 1010	K11322000000	..SPACER, SHORT ACTUAT SUPP		2
- 1020	K11322100000	..SPACER, LONG ACTUAT SUPP		2
- 1030	F11775400000	..REINFORCEMENT, INNER SPTB RR RH		1
- 1030 A	F11775500000	..REINFORCEMENT, INNER SPTB RR LH		1
- 1040	F11775600000	..REINFORCEMENT, INNER SPTB FW RH		1
- 1040 A	F11775700000	..REINFORCEMENT, INNER SPTB FW LH		1
1050	K11441800000	..BRACKET, CONNECTOR		1


- Item not illustrated

25-26-38

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
8				
1060	3129488C0000	..BRACKET, CONNECTOR SIB		1
- 1070	BE61-0516	..TXT AVI*RIVET (B10073800000)		22
1080	313483800000	..SUPPORT, ENDBAY OUTBD RH	A	1
- 1080 A	313483700000	..SUPPORT, ENDBAY OUTBD LH	B	1
1090	F11735500000	..SCREW		4
- 1100	NAS603-6P	..SCREW (A12001200000)		4
- 1110	AN4-13A	..SCREW (A13006600000)		4
- 1120	A21600900000	..CLAMP, PLASTIC		4
- 1140	319824800000	..KIT INSTL. BACKREST (See fig. 2 for det BKDN)		2

- Item not illustrated

FIG. 8A (SHEET 1 OF 3): STRUCTURE, PRIMARY SGL CNT

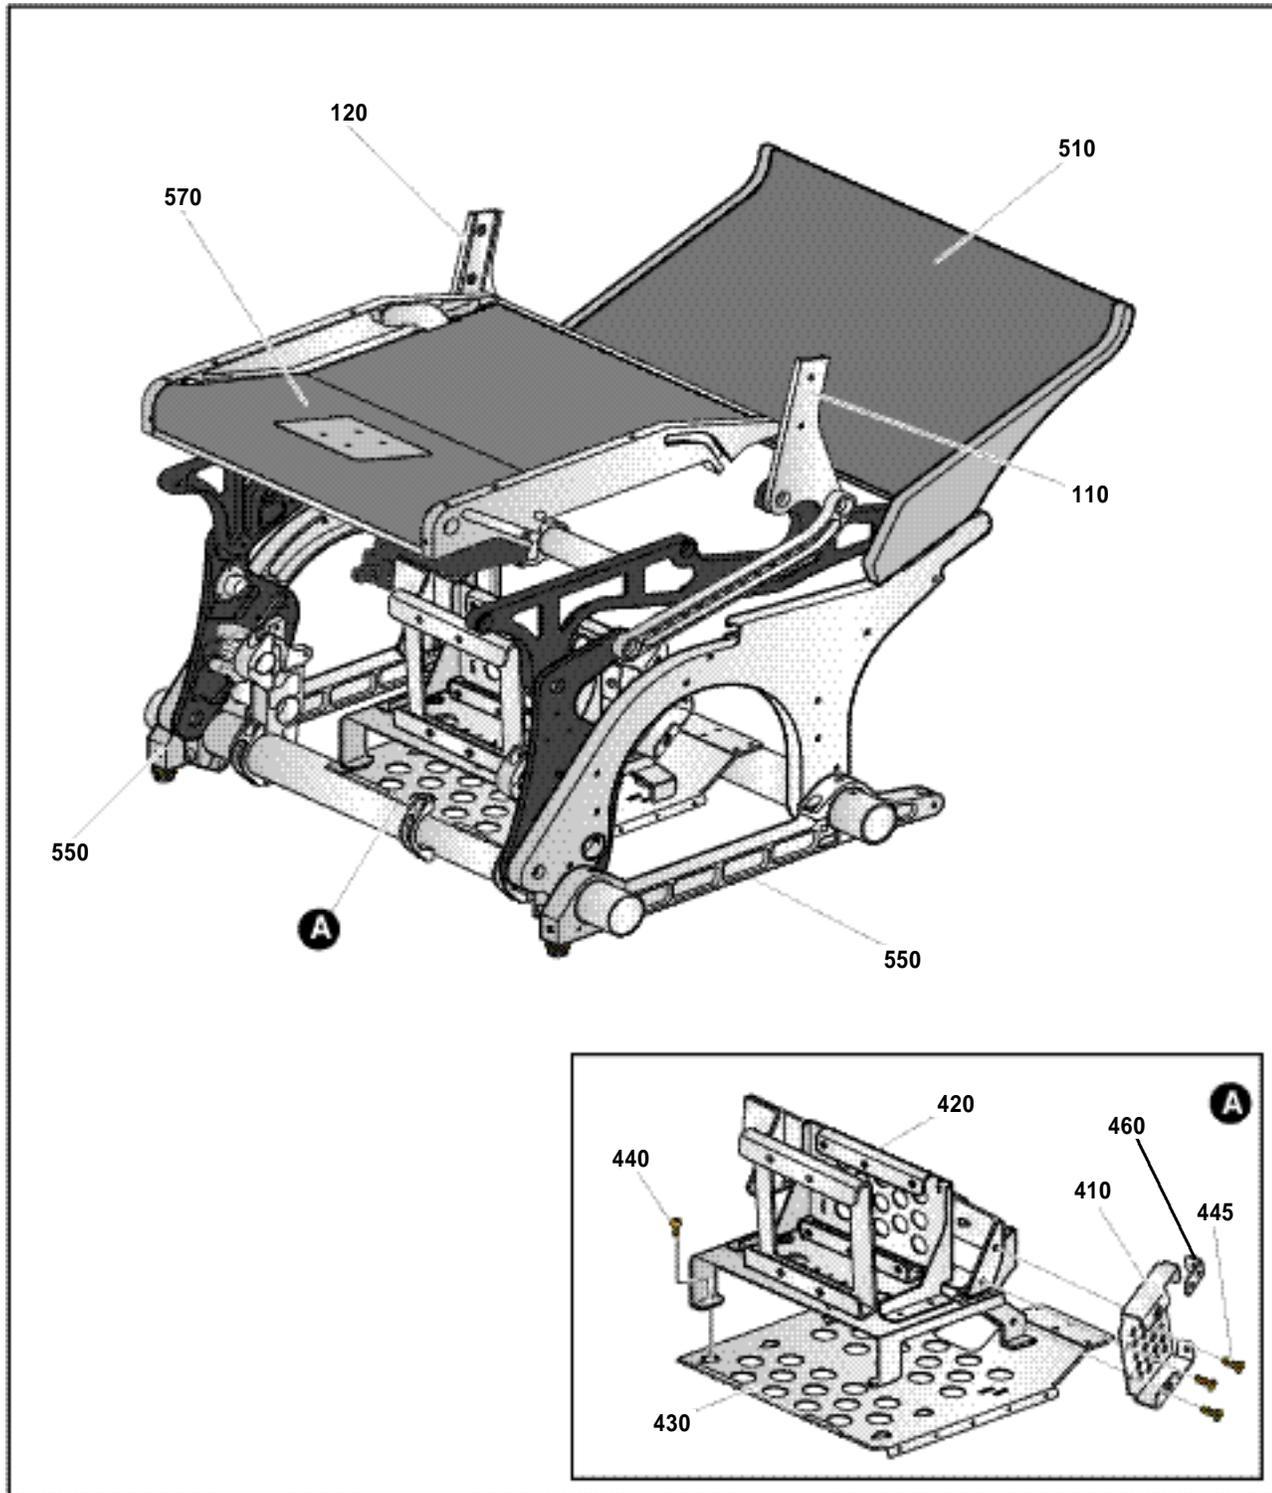

25-26-38

FIG. 8A (SHEET 2 OF 3) : STRUCTURE, PRIMARY SGL CNT


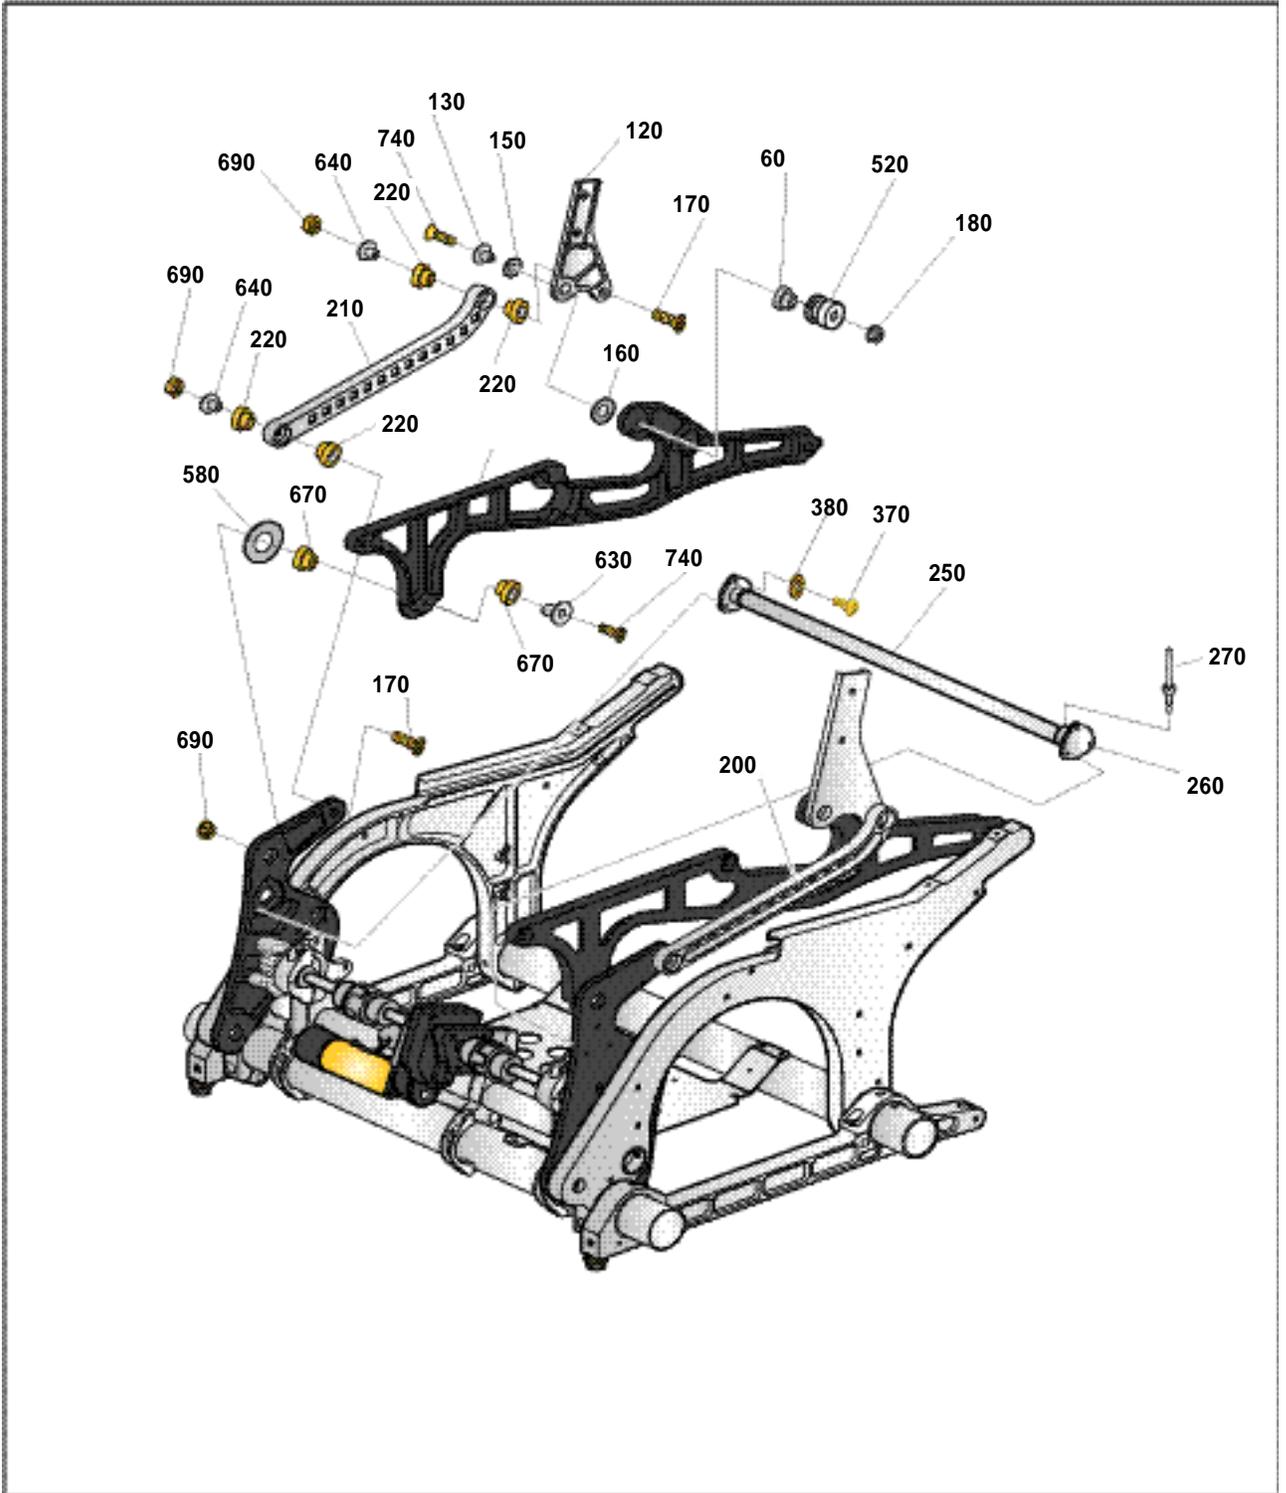


FIG. 8A (SHEET 3 OF 3) : STRUCTURE, PRIMARY SGL CNT



25-26-38

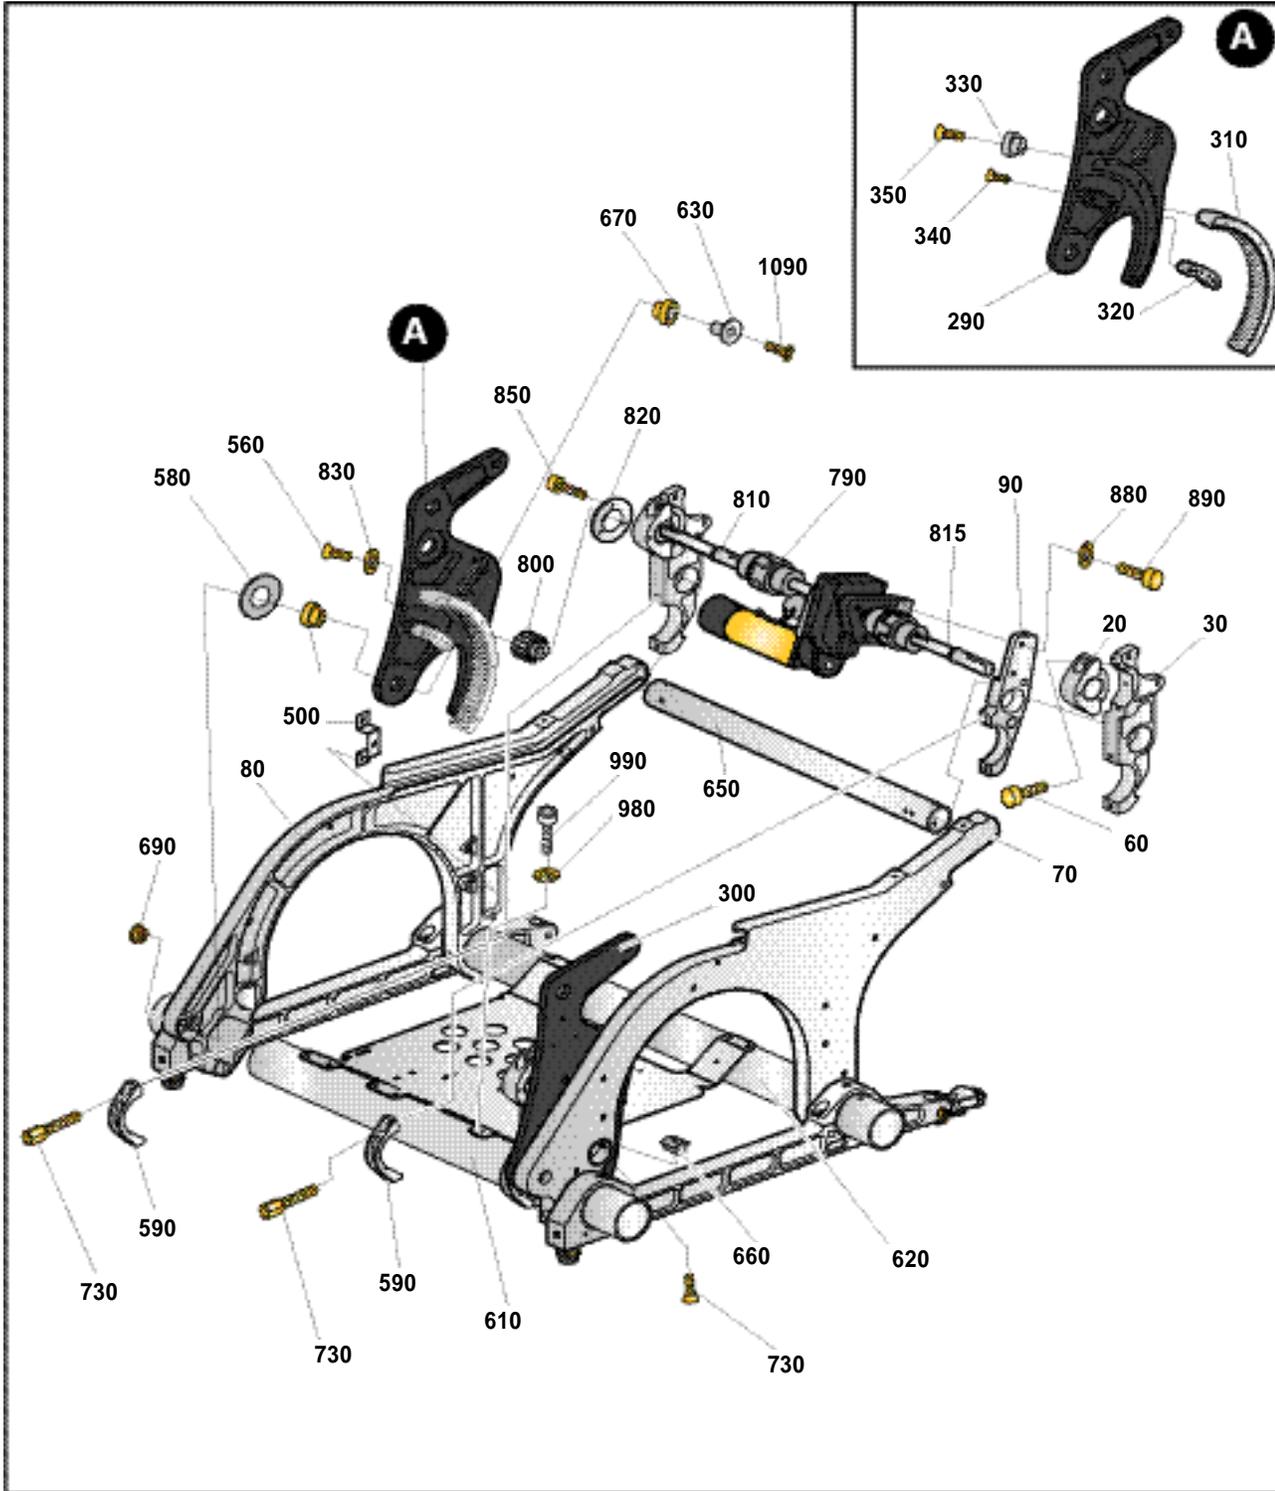

COMPONENT MAINTENANCE MANUAL
 AIRCRAFT PASSENGER SEAT
 SERIES"16NC(T)(())ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
8A				
1	3134046000ZA	.STRUCTURE, PRIMARY SGL CNT (See fig. 1A for det NHA)	A	RF
- 10	312930400000	..SUPPORT ASSY, BEARING RH		1
- 10 A	312930500000	..SUPPORT ASSY, BEARING LH		1
20	312930200000	...SUPPORT, BEARING		1
30	312930300000	...SUPPORT, ROTATION		1
		Attaching parts		
60	B10008500000	...UBK 1/4-28X 3/4"*BOLT * * *		2
70	312850900000	..STRUCTURE, GUIDE LH		1
80	312851000000	..STRUCTURE, GUIDE RH		1
90	312758600000	..SUPPORT, ACTUATOR		1
- 100	312758700001	..LEVER ASSY, LH		1
- 100 A	312758800001	..LEVER ASSY, RH		1
110	F116549A0000	...LEVER, LH		1
120	F116550A0000	...LEVER, RH		1
		Attaching parts		
130	F11660600001	...PIVOT, BACKREST ROTATION		1
- 140	F11653500001	...PIVOT, ROTATION		1
150	F20843700000	...WASHER, NYLON		1
160	F20843800000	...WASHER, NYLON		1
- 165	F20843900000	...BUSHING, ROTATION		1
170	MS24693C298	...SCREW (A11009900000)		2
180	NAS679A4	...NUT (A12200200000) * * *		2
- 190	312758900001	...ROD, LEVERING LH		1
- 190 A	312759000001	...ROD, LEVERING RH		1
200	F116537A0001ROD, LEVERING LH		1
210	F116538A0001ROD, LEVERING RH		1
220	F11579000000BUSHING		4
- 230	3128440L0001	..SECTOR ASSY, ROTATION		1
- 240	312780100000	...TUBE ASSY, ATTACHMENT		1
250	F11678600000TUBE, ATTACHMENT		1

- Item not illustrated

25-26-38

Page 1119

August 30, 2005



COMPONENT MAINTENANCE MANUAL
 AIRCRAFT PASSENGER SEAT
 SERIES"16NC(T)(0)(0)ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
8A				
260	F11678700000TERMINAL, TUBE Attaching parts		2
270	BE61-0512TXT AVI*RIVET (B10052200000) * * *		4
- 280	3128441C0001	...SECTOR ASSY, LH		1
- 280 A	3128442C0001	...SECTOR ASSY, RH		1
290	3128456C0001SECTOR, RH		1
300	3128455C0001SECTOR, LH		1
310	312747700000SECTOR, DENTED		1
320	F11678800000GUIDE, PINION GEAR Attaching parts		1
330	F11653400000BUSHING		4
340	MS24693C296SCREW (A11012100000)		2
350	MS24693C275SCREW (A11011900000)		4
- 360	F208934C0000	...SHIM, RH		1
- 365	F208934E0000	...SHIM, LH		1
370	NAS603-14P	...SCREW (A12007400000)		6
- 380	MS35335-32	...WASHER (A11401600000)		12
- 390	NAS679A3	...NUT (A12200400000) * * *		6
- 400	313419400000	..SUPPORT ASSY		1
410	313468600000	...PLATE, SUPPORT J.BOX		1
420	313419300000	...SUPPORT, LUMB/TLF/SEB/ISPS		1
430	3132499A0000	...SUPPORT, CONNECTOR Attaching parts		1
440	NAS602-7P	...SCREW (A12008000000)		2
445	MS24693C48	...SCREW (A11001200000) * * *		3
- 450	319841200000	..KIT INSTL. J.BOX		1
- 460	313489700000	...BRACKET, LH		1
- 470	313489800000	...BRACKET, RH Attaching parts		1
- 480	NAS601-4P	...SCREW (A12000200000)		4

- Item not illustrated

25-26-38



COMPONENT MAINTENANCE MANUAL
 AIRCRAFT PASSENGER SEAT
 SERIES"16NC(T)(0)(0)ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
8A				
- 490	MS21083N06	...NUT (A11201800000) * * *		4
500	312762900000	..PLATE, FIX TEL		1
510	3127592L002P	..CLOSURE, FOOTREST ATTACHMENT		1
520	DM00133-1	..FITTING, SAFETY BELT		2
550	3127847A0000	..LEG ASSY*		2
- 560	3125357E0017	..FITTING ASSY, REAR* *(See fig. 10 for det BKDN)		2
570	319774300000	..SEAT PAN ASSY, LH (See fig. 9 for det BKDN)		1
580	319729100001	..STRUCTURE ASSY, SLIDING (See fig. 11 for det BKDN)		1
580	F20851900000	..WASHER, NYLON		4
590	F116520A0000	..COLLAR, ATTACHMENT		3
600	F108191E0000	..BUSHING, SAFETY BELT		2
610	F117730A0000	..SPARTUBE, FWD		1
620	F117731A0000	..SPARTUBE, REAR		1
630	F11653200001	..PIVOT, ROTATION		2
640	F11653500001	..PIVOT, ROTATION		2
650	F116545A0000	..SPARTUBE, ATTACHMENT		1
660	F11557700000	..NUT, SPECIAL		2
670	F11659400000	..BUSHING		4
690	NAS679A4	..NUT (A12200200000)		2
- 700	AN3-4A	..SCREW (A13007200000)		4
- 720	AN960-416L	..WASHER (A13400700000)		2
730	B10008500000	..UBK 1/4-28X 3/4"*BOLT		8
740	B10055200000	..UBK 1/4-28X1.1/4"*BOLT		2
- 760	B10002800000	..POP TLP/K424BS*RIVET		4
- 780	3197286N0000	..KIT INSTL. PIVOT		1
790	3129223A0000	...COUPLING, FLEXIBLE		2
800	F11846300000	...PINION		2
810	F118462A0000	...PINION, STD L=116.8		1
815	F11846200000	...PINION, STD L=124		1
820	F11651500000	...RING NUT		2

- Item not illustrated

25-26-38

Page 1121

August 30, 2005

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
8A				
830	F11652600000	...WASHER, NYLON		2
850	B10050100000	...UBK 8-32X1/2"*BOLT		6
860	MS24693S272	...SCREW (A11001400000)		2
- 865	UNI6604-69	...TAB (A14413100000)		4
- 870	319728800000	..KIT INSTL.GEAR BOX		1
880	UNI6604-69	...TAB (A14413100000)		2
890	B10008600000	...UBK 1/4-28x1"*BOLT		2
- 900	319762000000	..KIT INSTL. CONTROLLER		1
- 910	F11730400000	...BUSHING		2
- 920	NAS602-8P	...SCREW (A12002300000)		4
- 930	F22NKM-82	...NUT (B10040900000)		2
- 940	319740100000	..KIT INSTL.STRUCTURE GUIDE		2
- 950	F112549C0000	...PIN, FIXING		2
- 960	F11684300000	...NUT, SPECIAL		2
- 970	F11651300000	...ROD, IRON		4
980	AN960-416	...WASHER (A13400200000)		4
990	B10008600000	...UBK 1/4-28x1"*BOLT		8
- 1000	3197393E0000	..KIT INSTL. LEG ASSY*		2
- 1005	319791500000	..KIT INSTL. FITTING ASSY, REAR* *(See fig. 10 for det BKDN)		2
- 1010	K11322000000	..SPACER, ACTUAT SUPPORT		1
- 1020	K11322100000	..SPACER, ACTUAT SUPPORT		1
- 1070	BE61-0516	..TXT AVI*RIVET (B10073800000)		11
1090	F11735500000	..SCREW		2
- 1110	B10012300000	..UBK 1/4-28X1.1/2"*BOLT		2
- 1120	NAS603-6P	..SCREW (A12001200000)		2
- 1130	A21600900000	..CLAMP, PLASTIC		2
- 1140	319824800000	..KIT INSTL. BACKREST (See fig. 2 for det BKDN)		1

- Item not illustrated

25-26-38



COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES "16NC(T)() () ZA" FOR B767-300


THIS PAGE INTENTIONALLY LEFT BLANK

25-26-38

Page 1123

August 30, 2005

FIG. 9: SEAT PAN ASSY, LH

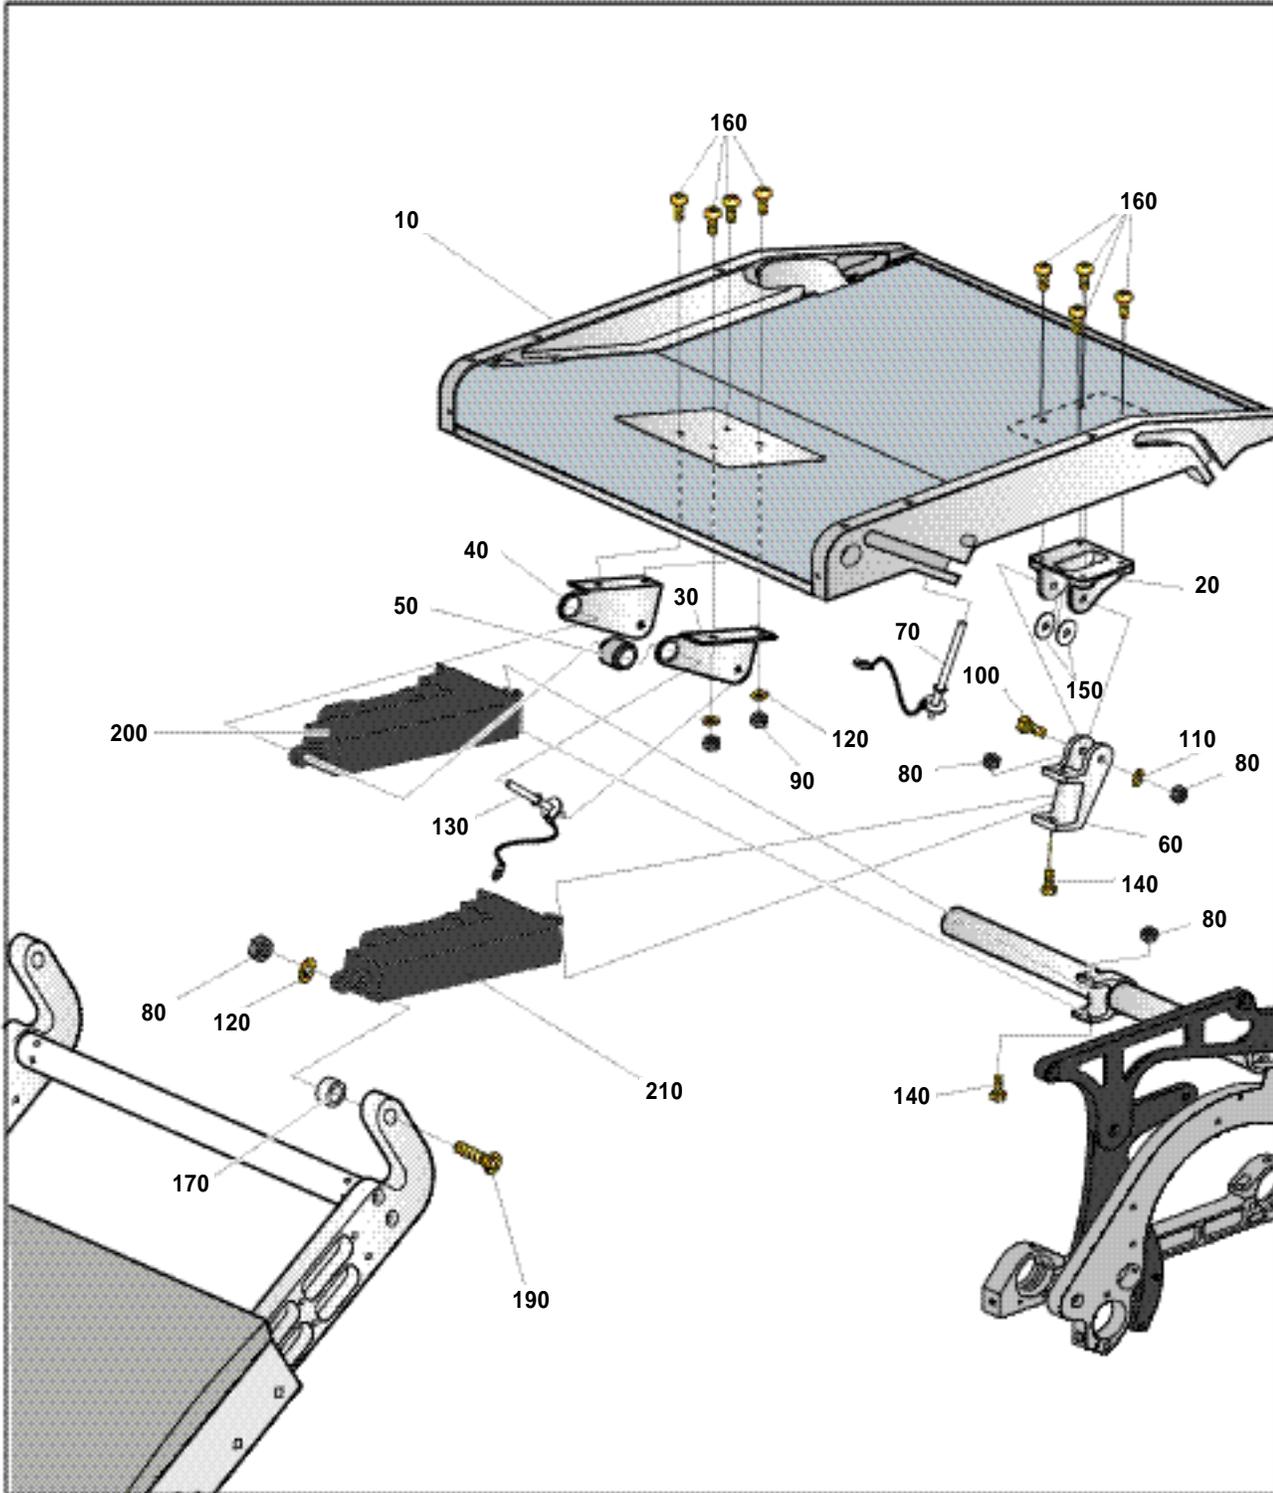


25-26-38

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
9				
1	319774300000	..SEAT PAN ASSY, LH (See fig. 8, 8A for det NHA)	A	RF
- 1 A	319774400000	..SEAT PAN ASSY, RH (See fig. 8 for det NHA)	B	RF
10	312935000000	...PAN, SEAT LH	A	1
- 10 A	312935100000	...PAN, SEAT RH	B	1
20	312765500000	...BRACKET, LEGREST ACTUATOR		1
30	F11667100000	...BRACKET, SEAT PAN ACTUATOR LH		1
40	F11667200000	...BRACKET, SEAT PAN ACTUATOR RH		1
50	F11667000000	...BUSHING		1
60	F116493A0000	...SUPPORT, LEGREST ACTUATOR		1
70	319728200000	...KIT TERMINAL CABLE		2
80	NAS679A4	...NUT (A12200200000)		2
90	NAS679A3	...NUT (A12200400000)		4
100	AN4-15A	...SCREW (A13007100000)		1
110	AN960-416	...WASHER (A13400200000)		3
120	AN960-10	...WASHER (A13400800000)		4
130	3197282A0000	...KIT TERMINAL CABLE		1
140	AN4-22A	...SCREW (A13020300000)		1
150	F20504400000	...WASHER, ERTALON		2
160	NAS603-14P	...SCREW (A12007400000)		8
170	F20651900000	...BUSHING, NYLON		1
190	NAS517-4-15	...SCREW (A12011000000)		1
200	PS5-22530-01	...PLP*ACTUATOR, SEAT PAN(B00295100000)*	C	RF
210	313485600000	...LEGREST ACTUATOR ASSY* *(See fig. 1, 1A for det NHA)	D	RF

- Item not illustrated

FIG. 10: LEG ASSY

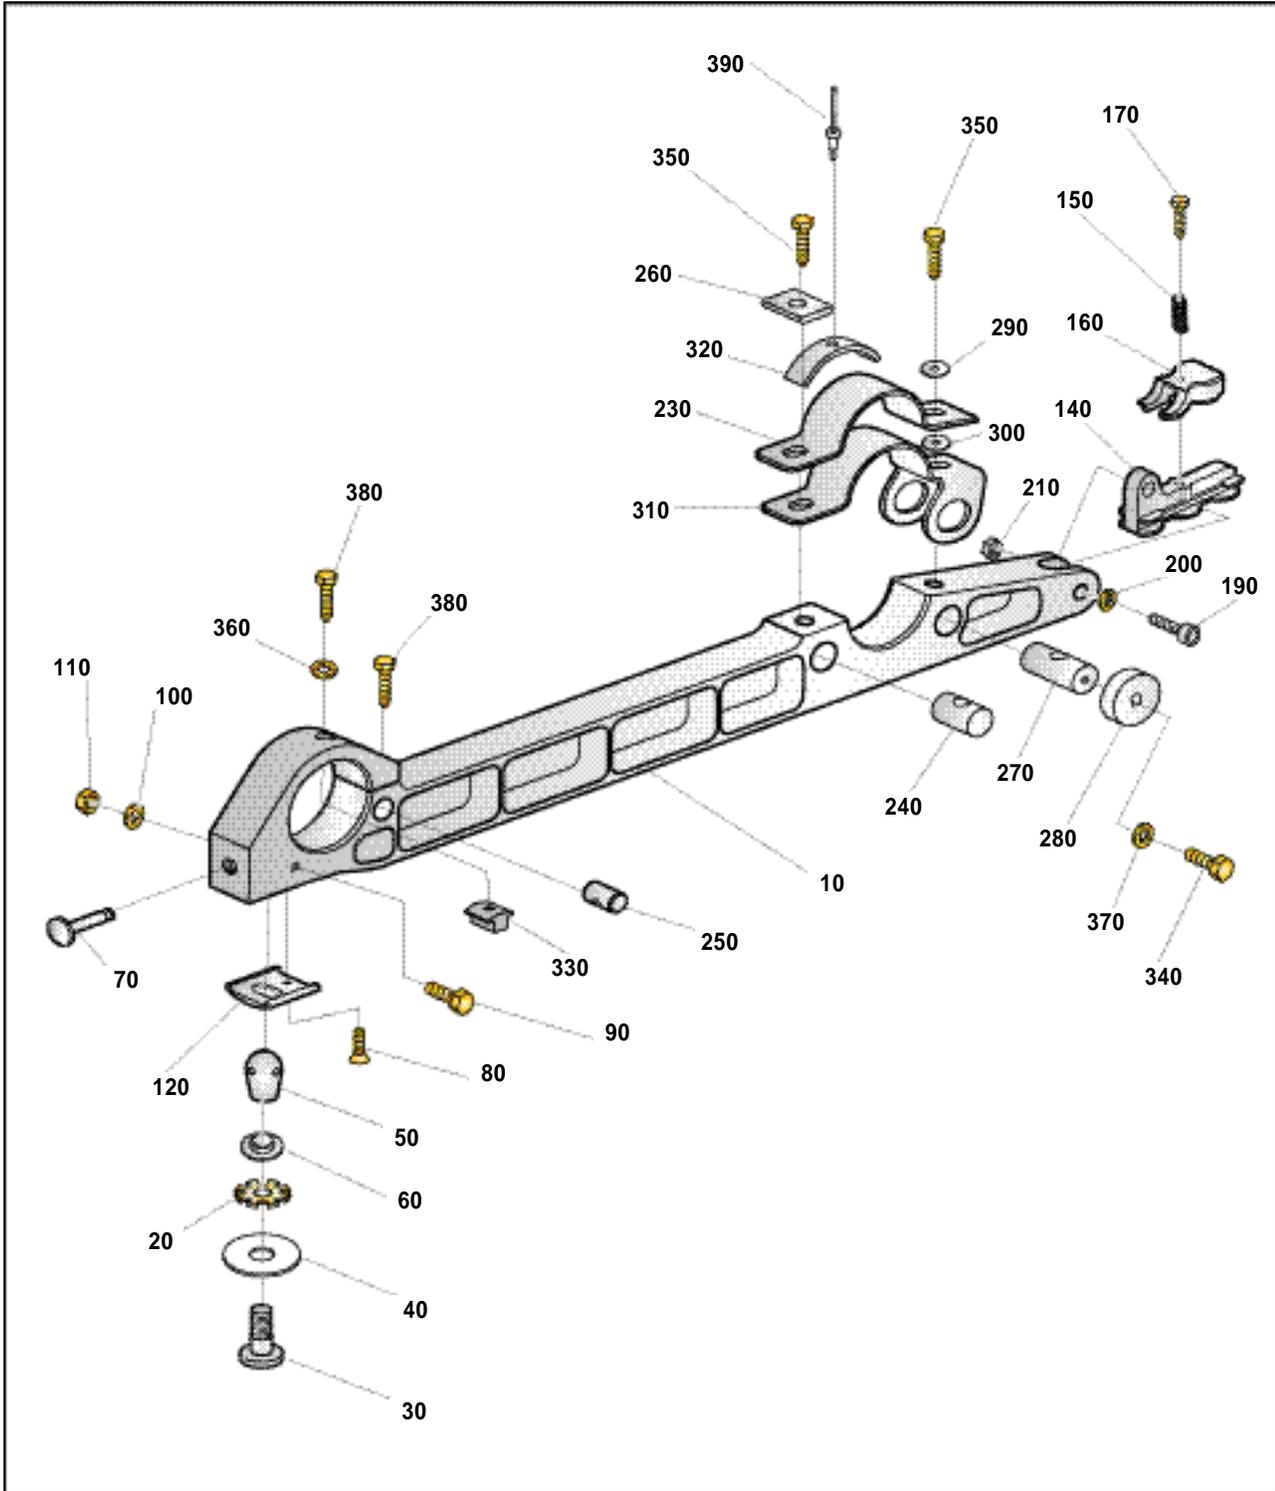

25-26-38

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
10				
1	3127847A0000	..LEG ASSY (See fig. 8, 8A for det NHA)	A	RF
10	3128508A0000	...LEG		1
20	K10632900000	...RING, NUT		1
30	F11025000000	...STUD, FWD Attaching parts		1
40	B10087700000	...WASHER		1
50	F111427A0000	...INSERT, LOWER		1
60	F11437100000	...BUSHING		1
70	F11651100000	...QUADRANT		1
80	MS24693C47	...SCREW (A11006900000)		1
90	AN3-12A	...SCREW (A13006200000)		1
100	AN960-10	...WASHER (A13400800000)		1
110	22NKM02	...ESNA*NUT (B10019100000)		1
120	F11651200000	...HOUSING, STUD * * *		1
- 130	3125357E0017	..FITTING ASSY, REAR (See fig. 8, 8A for det NHA)	B	RF
140	F115417A0000	...FITTING, REAR		1
150	DM02217-1	...SPRING		1
160	312768400017	...PLUNGER		1
170	NAS1801-4-12	...SCREW (A12023300000)		1
- 180	319791500000	..KIT INSTL. FITTING ASSY, REAR (See fig. 8, 8A for det NHA)	C	RF
190	B10055400000	...UBK M8X38*BOLT		1
200	UNI6592-69	...WASHER (A14402500000)		2
210	B10085400000	...NUT, SELF-LOCKING		1
- 220	3197393C0000	..KIT INSTL. LEG ASSY (See fig. 8 for det NHA)	D	RF
- 220 A	3197393E0000	..KIT INSTL. LEG ASSY (See fig. 8A for det NHA)	E	RF
230	K11376700000	...ATTACHMENT, REAR		1
240	F11679800000	...INSERT		1
250	F11651300000	...ROD, IRON		1
260	F11679700000	...PLATE, ATTACHMENT		1

- Item not illustrated

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
10				
270	F11687400000	...INSERT		1
280	F11687300000	...BUSHING	D	2
290	F11747600000	...BUSHING		1
300	F11747700000	...WASHER		1
310	K11320700000	...ATTACHEMNT, LEG		1
320	K113211A0000	...PLATE		2
330	F11684300000	...NUT, SPECIAL		1
340	AN3-4A	...SCREW (A13007200000)	D	2
350	AN5-11A	...SCREW (A13010700000)		2
360	AN960-416	...WASHER (A13400200000)		1
370	AN960-10	...WASHER (A13400800000)		2
380	B10008600000	...UBK 1/4-28x1"*BOLT		1
390	MNB2771-0613	...AVDEL*RIVET (B10023100000)		2
- 400	F11795000000	...BUSHING	E	2
- 410	AN4-13A	...SCREW (A13006600000)		1
- 420	MS24693C273	...SCREW (A11009600000)	E	2

- Item not illustrated

25-26-38



COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES "16NC(T)() () ZA" FOR B767-300


THIS PAGE INTENTIONALLY LEFT BLANK

25-26-38

Page 1129

August 30, 2005

FIG. 11 : STRUCTURE ASSY, SLIDING

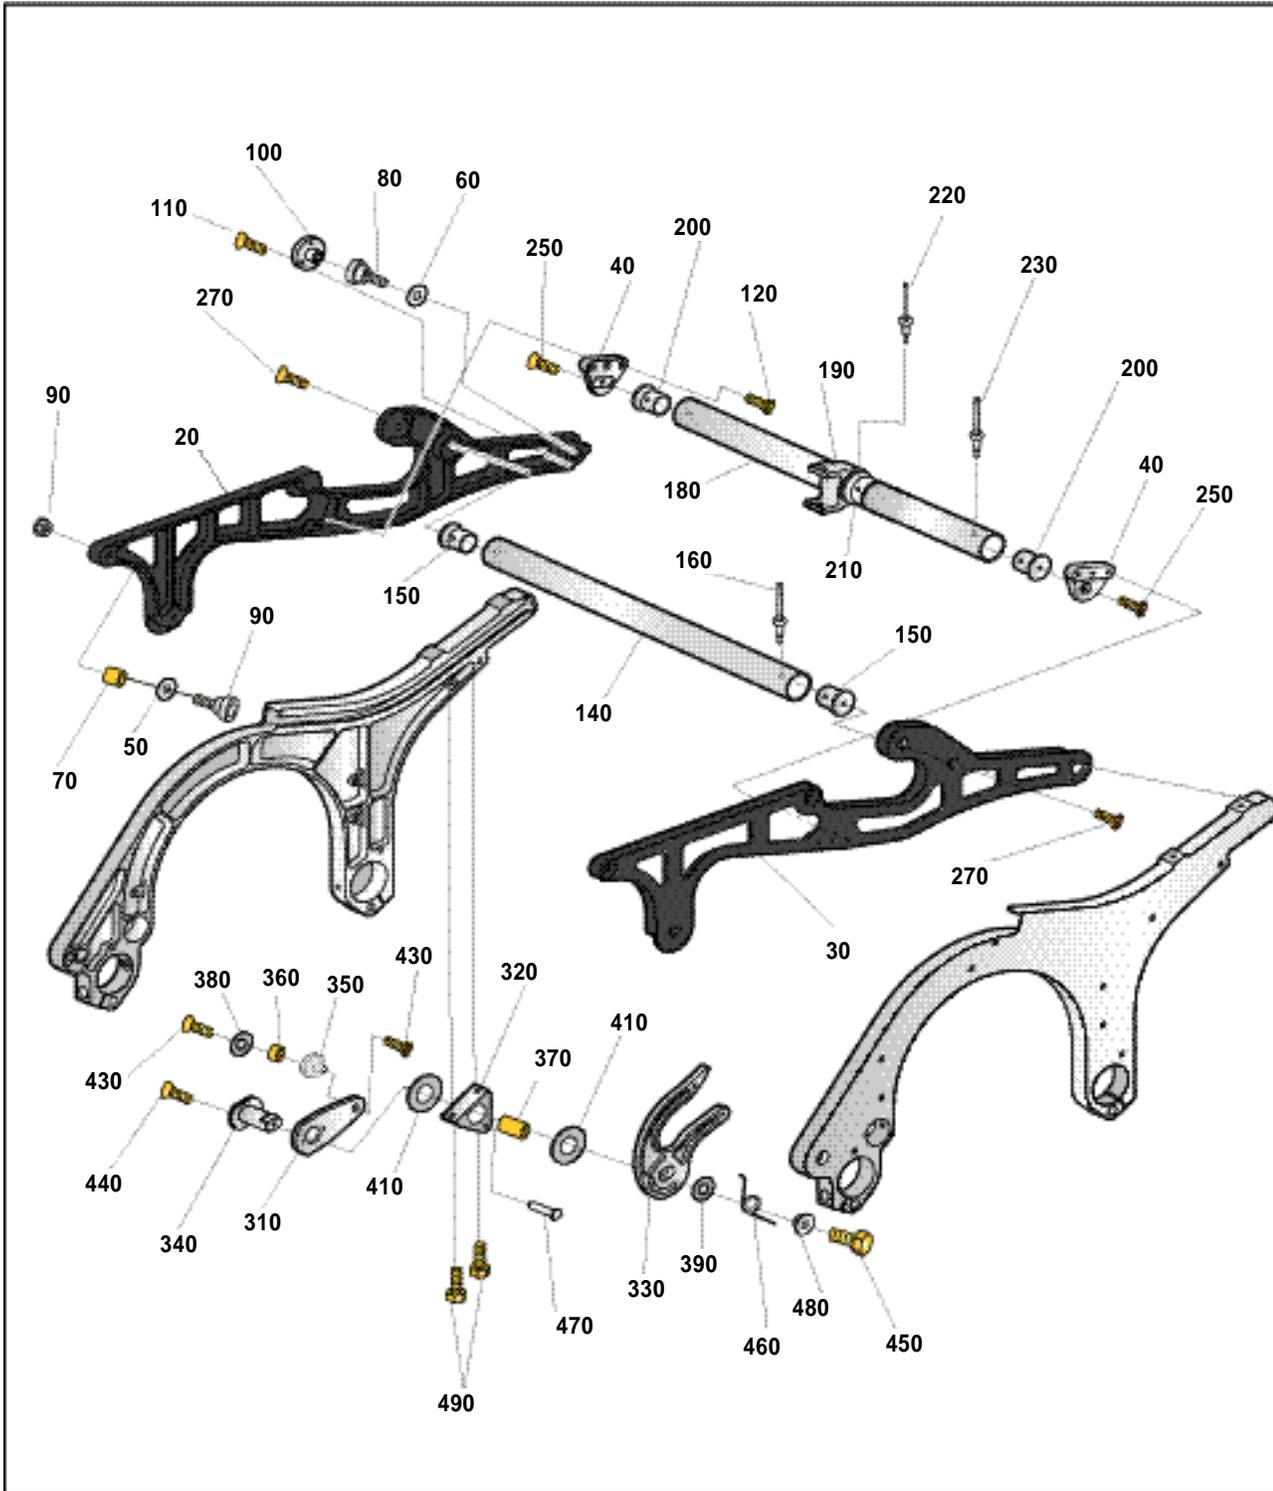

25-26-38



COMPONENT MAINTENANCE MANUAL
AIRCRAFT PASSENGER SEAT
SERIES"16NC(T)(0)(0)ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
11				
1	319729100001	..STRUCTURE ASSY, SLIDING (See fig. 8, 8A for det NHA)	A	RF
- 10	312765300001	...CROSSMEMBER ASSY, SLIDING LH		1
- 10 A	312765400001	...CROSSMEMBER ASSY, SLIDING RH		1
20	312765000001	...CROSSMEMBER, SLIDING RH		1
30	312765100001	...CROSSMEMBER, SLIDING LH		1
		Attaching parts		
40	F11648500000BRACKET, CROSSMEMBER		1
50	F208169A0000WASHER, NYLON		2
60	F208523A0000WASHER, NYLON		1
70	F115919A0000BUSHING		2
80	KR22PPTORRINGTON*NEUTRAL PIVOT(B10059		1
90	319841700000KIT NEUTRAL PIVOT		2
100	F116536A0000PIVOT		1
110	MS24693S51SCREW (A11002000000)		3
120	MS24693C274SCREW (A11017100000)		3
- 130	312765200000	...TUBE ASSY, ATTACHMENT REAR		1
140	F11660400000TUBE		1
150	F11660500000TERMINAL, TUBE		2
160	B10015400000RIVET		6
		* * *		
- 170	3127894A0000	...TUBE ASSY, ATTACHMENT REAR		1
180	F11648400000TUBE		1
190	F116487A0000SUPPORT, SEAT PAN ACTUATOR		1
200	312789700000INSERT, TUBE		2
		Attaching parts		
210	F20851800000BUSHING		2
220	B10015400000RIVET		4
230	B10014400000CAT TAP/D66BS*RIVET		8
- 240	F11653200001	...PIVOT, ROTATION		2
250	MS24693C296	...SCREW (A11012100000)		2
- 260	F20851900000	...WASHER, NYLON		2
270	B10008400000	...UBK 1/4-28X 5/8"*BOLT		2
- 280	B10008600000	...UBK 1/4-28x1"*BOLT		2
		* * *		

- Item not illustrated

25-26-38

Page 1131

August 30, 2005



COMPONENT MAINTENANCE MANUAL
 AIRCRAFT PASSENGER SEAT
 SERIES"16NC(T)(0)(0)ZA" FOR B767-300

FIG. ITEM	PART NUMBER	1234567 NOMENCLATURE	EFFECT COD.	UNITS ASSY
11				
- 290	3197356A0000	.KIT LEVERAGE, RH*	B	RF
- 290 A	3197355A0000	.KIT LEVERAGE, LH* *(See fig. 1, 1A for det NHA)	C	RF
- 300	3127660A0000	..LEVER ASSY, RH	B	1
- 300 A	3127661A0000	..LEVER ASSY, LH	C	1
	310	F116337A0000		1
	320	F116340A0000		1
	330	F116342E0000		1
	340	F116343A0000		1
	350	F11633600000		1
	360	F11635200000		1
	370	F11634100000		1
	380	F110102A0000		1
	390	F11635300000		1
	410	F20829500000		2
	430	MS24693C270		2
	440	MS24693C24		2
	450	AN4-4A		1
	460	K11451500000	B	1
- 460 A	K11451400000	...SPRING, RH	C	1
	470	F11820700000		1
	480	F11820800000		1
	490	B10008400000		2

- Item not illustrated

25-26-38